

RU-V103 Remote Control:

LEVEL I CONTROL

REJECT: Ceases playback and spins-down the disc.

PAUSE: Ceases playback and presents a squelch screen. Press any motion button to resume.

PLAY: Begins playing a disc, or resumes play.

REPEAT MODE: This button can be pressed to select auto return, side repeat; or chapter repeat may be selected while a specific chapter is playing.

STILL STEP (FWD / REVERSE): Press either of these buttons to produce a still video image (CAV). Additional presses of the STEP FWD button moves the image forward one frame at a time. STEP REV moves the image in reverse one frame at a time.

DISP: Displays or removes the display of current chapter/frame/or time numbers on the screen.

SCAN (FWD / REVERSE): Press these buttons to move quickly forward or backward through the disc. Rapid scanning continues as long as the button is depressed.

AUDIO: Press this button to select audio output: Digital Stereo, Digital 1/L, Digital 2/R, Audio OFF, Analog Stereo, Analog 1/L, Analog 2/R, Audio OFF.

SPEED (DOWN / UP): Press these buttons to set the speed at which multi-speed play will occur.


CLEAR: Press this button to CLEAR erroneous inputs or to stop a Search operation.

MULTI-SPEED (REV / FWD): Press this button to play forward or reverse in the speed that is set with the SPEED button (CAV).

NUMERIC BUTTONS (0-9): Use these buttons to enter locations on the disc for searches. (eg. Enter 1000 SEARCH to move to a certain frame or time location on the disc.) Use the CHAP/FRAME TRACK/TIME button to set an "address flag", indicating chapter, frame or time number. (These buttons can also be used for viewer responses during Level III program execution.) See Level III Command Input Number Wait (?N).

SEARCH: Specify the number to be searched to by using the digit buttons. Press the SEARCH button to execute. (First set the "address flag" using the CHAP/FRAME TRACK/TIME button.) After searching, the player presents a still frame on CAV discs or immediately plays on CLV discs.

Note: The RU-V103 can be used for Level I control of the LD-V8000, LD-V4400, CLD-V2600, CLD-V2400, LD-V2200, and the LD-V2000. With the LaserBarcode Adapter/15, it can be used for Level I control of the LD-V4200 and the LC-V330 (Auto Changer).

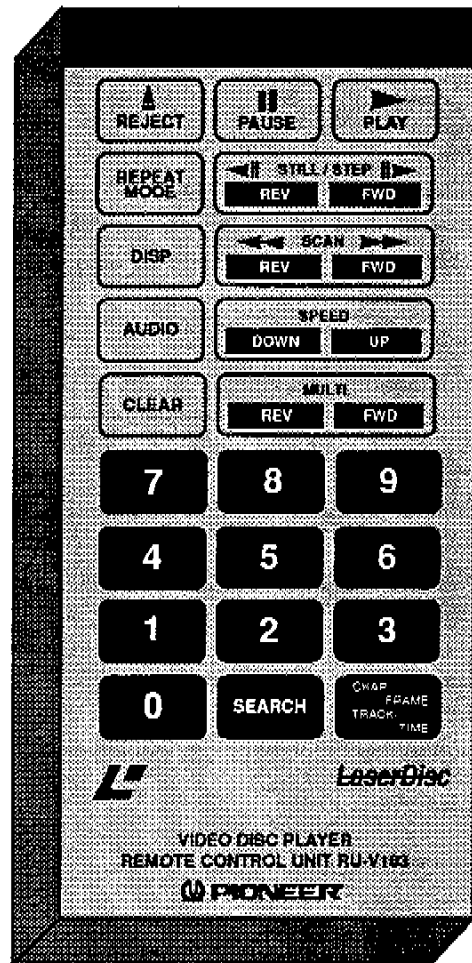

CHAP / FRAME TRACK / TIME: Press this button to set the address flag, indicating how a search will be performed, either by chapter or frame number (CAV), or chapter or time number (CLV).

Note: The LD-V8000 holds a still frame after searching a CLV disc, or when the Still/Step button is pressed. Other players, play immediately after searching a CLV disc, and squelch during a CLV Still. All players squelch when the Pause button is pressed.

NOTE: The RU-V103 remote control unit does not have Level II programming capabilities. It can be used, however, to provide viewer input to Level II or Level III programs. The RU-V103 is not packaged with a cable for connection to the players, but it can be connected via wire with a separately purchased stereo or mono mini plug cable.