

Pioneer Industrial Player BAUD Rates

The following are BAUD rates available on different Pioneer Industrial LaserDisc players and how to set them, by player. The factory-set/default BAUD rate is indicated by a star.

Player	BAUD Rates			How to Set BAUD Rates
	1200	4800	9600	
LD-V8000*	✓	✓	◇	Use On-Screen Function Switches, Menu pg. 5 Press "Display" to initialize settings. Level III Control — Register D
LD-V4400	✓	◇	✓	Use On-Screen Function Switches, Menu pg. 3.4 Press "Display" to initialize settings. Level III Control — Register D
CLD-V2600 CLD-V2400	✓	◇		Use DIP Switch 2 on the back panel of player SW 2 Up = 4800; SW2 Down = 1200 Power Off and On the player to initialize settings. Level III Control — Register C
LD-V2200	✓	◇		Use DIP Switch 2 on the back panel of player SW 2 Up = 4800; SW2 Down = 1200 Power Off and On the player to initialize settings. Level III Control — Register C
LD-V4200** discontinued	✓	◇		Use DIP Switch 7 on the front panel of player SW 7 Up = 4800; SW7 Down = 1200 Power off and on the player to initialize settings. Level III Control — Register C
LD-V6000/A discontinued	✓	✓	✓	Use DIP Switches 1,2,3 on back panel of player SW 1 Down, SW 2 Up, SW 3 Down = 1200 SW 1 Down, SW 2 Down, SW 3 Up = 4800 SW 1 Up, SW 2 Down, SW 3 Up = 9600

* On either the LD-V8000 or the LD-V4400, press the "Display" and "Power-On" buttons simultaneously on the front panel to put the player into *Function Switch Setting Mode*. Follow instructions on the Menu on screen page 1 to arrive at the correct on-screen menu page and to select the setting. Press "Display" once to commit new settings to memory. Press the "Open / Close" button on the front panel of the player or the "Reject" button on the remote control unit to return all settings to the factory default.

** When the RU-V101 remote control unit is used to control the LD-V4200, the BAUD rate must be set to 4800, i.e. DIP Switch 7 on the front panel must be Up.