

4.3 Initial Settings

The internal registers and switches are set to the following conditions when power is turned on. The settings are not re-initialized when the player is put into *Park* or *Door Open Mode*. Do not forget to set them to the parameters needed when creating an application program. Some of the switch settings can be set via Registers under computer control. For more information see **Section 4.7.6 Register Control Commands**, page 4-39, and **Section 2.4 On Screen Switch Settings**, page 2-12.

Register/Switch	Initial Setting	Status
Key lock	0	Unlocked
Video switch	1	ON
Audio switch	3	Digital Stereo (If digital audio is encoded on the disc.)
Display switch	0	OFF
Address flag		Chapter (CAV & CLV)
Speed parameter	60	Normal (X1) speed
Communication Control	Mode 3	Automatic Status
REG. A	3	Frame/Chapter display
REG. B	0	Normal squelch
REG. C - D		Set to the value of the On-Screen function switches.
AUX Port	1: 2:	High High

Figure 4-D