

## Chapter Three • CLD-V2800 Level III

### 3.3 Initial Settings

The internal registers and switches are set to the following conditions when power is turned on. The settings are not re-initialized when the player is put into *Park* or *Door Open Mode*. Do not forget to set them to the parameters needed when creating an application program. Some of the switch settings can be set only via Register Commands under computer control; others can be set by using the DIP Switches on the rear panel of the player or via Registers. For more information see **Section 3.7.6 Register Control Commands**, page 3-39, and **Section 2.3 Function Switch Settings**, page 2-6.

| Register/Switch       | Initial Setting | Status  |
|-----------------------|-----------------|---|
| Key lock              | 0               | Unlocked  |
| Video switch          | 1               | ON  |
| Audio switch          | 7               | Digital Stereo<br>(If digital audio is encoded on the disc.)  |
| Display switch        | 0               | OFF   |
| Address flag          | 3               | Frame - CAV; Time - CLV<br>Track - CD, CDV  |
| Speed parameter       | 60              | Normal (X1) speed   |
| Communication Control | Mode 3          | Automatic Status  |
| REG. A                | 3               | Frame/Chapter - LD;<br>Track/Time - CD, CDV   |
| REG. B                | 0               | Normal squelch  |
| REG. C                | 1               | Side Repeat ON and Blue Squelch.<br>(BAUD Rate can be set using SW 1 & 2, Auto Start can be set using SW 3, and Squelch color of Blue or Black can be selected with SW 4 on the back of the CLD-V2800. Some of these options can also be set through Register C under Level III control.) |

Figure 3-D