

SECTION 2 ADJUSTMENT PROCEDURES

1. DISASSEMBLY METHOD FOR CABINET

1-1. Top Cover

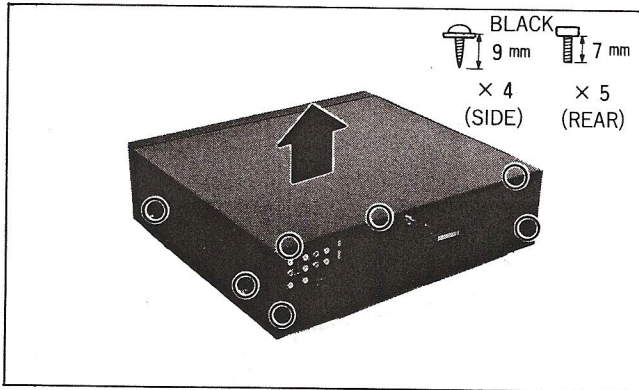


Fig. 1-1 Top Cover

Remove 7 screws, then lift the rear of the Top Cover to remove.

1-2. Front Panel

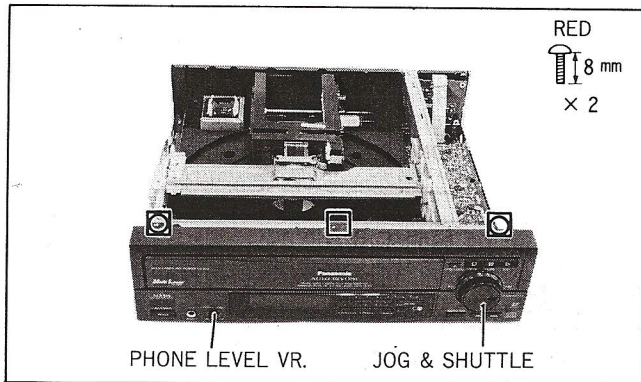


Fig. 1-2 Front Panel (top view)

1. Pull out the Phone Level VR. knob and Jog & Shuttle dial on the Front Panel.
2. Remove 2 screws and unlock 3 locking tabs on the top side.

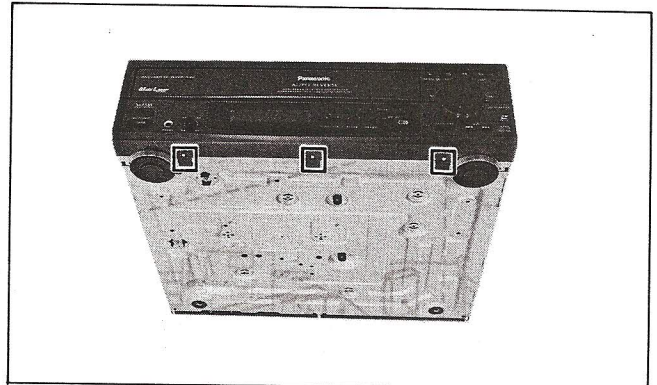


Fig. 1-3 Front Panel (bottom view)

3. Unlock 3 locking tabs on the bottom side. Then, hold the top portion of the panel and turn it toward the front side of the unit.

2. HOW TO MANUALLY EJECT DISC TRAY

If the Disc Tray can not be ejected normally, it is possible to eject the Tray manually as follows:

NOTE:

Work with extreme care when there is a Disc inside the Tray compartment and do not turn the unit on it's side when in step "2" of this procedure.

1. Remove Top Cover (Refer to Fig. 1-1).
2. Turn the Brake Gear counterclockwise slowly until the Tray has fully ejected.

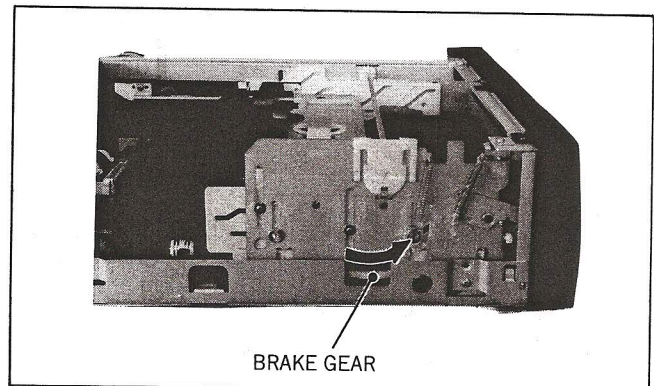


Fig. 2-1 Manual Eject

