 





 



 


ERRATA

Several errors were found in the operating instructions.

We apologize for any inconvenience. Please replace all incorrect data as follows:

PAGE	INCORRECT	CORRECT
17	<p>REPEAT, A and B buttons</p>  Plays back repeatedly.	<p>REPEAT, A and B buttons</p>  Plays back repeatedly. (Expanded Operation Screen) <p>REPEAT button</p>  (CD Graphics Operation Screen) Plays back repeatedly. (same function as with REPEAT B button).
19		<p>(Additional "Precautions")</p> <ul style="list-style-type: none"> The Expanded Operation screen will not be displayed by pressing the C(SUB) button while a CD-G is being played back.
25	<p>2. Move the cursor  to ,  then press the A/ENTER button to move the  (cursor) to the left side of the Chapter/track number or PAUSE to be deleted.</p>	<p>2. Move the cursor  to ,  then press the A/ENTER button to move the  (cursor) to the down side of the Chapter/track number or PAUSE to be deleted.</p>
30	<ul style="list-style-type: none"> If searching for a time which is greater than that recorded on a disc, the system <u>pauses</u> at the end of the disc. 	<ul style="list-style-type: none"> If searching for a time which is greater than that recorded on a disc, the system changes to <u>still picture mode</u> at the end of the disc.

* NOTE

- The screen may be unstable for a moment when the Operation screen is displayed while an LD is played back.