



**LD-V8000 EPROM Replacement Kit
DYW 1208 and DYW 1244**

It is strongly recommended that the following EPROM replacement procedures be performed by a Pioneer Authorized Service Technician. If you decide to replace these EPROMs yourself, you run the risk of voiding your player's warranty. Call 1-800-872-4159 for the nearest Pioneer Authorized Service Center.

This kit contains the latest version of the LD-V8000 EPROMs: DYW 1208 & DYW 1244. The LD-V8000 EPROMs are located on the printed circuit board (DSCO Assembly) just under the top cover of the player. (See Figure 2).

STEP #1: Power-off the player and unplug its AC cord from the electrical outlet. Position the player so that the power button is to your right as you face the player.

STEP #2: Remove the four (4) screws on the top cover of the player and lift the cover off. (See Figure #1)

STEP #3: Lift the silver (foil) panel covering the printed circuit board and locate the two EPROMs at circuit board locations IC 9 to the left and IC 10 to the right. (See Figure #2).

STEP #4: Carefully remove the IC chips with an IC puller.

CAUTION: BE EXTREMELY CAREFUL NOT TO BEND THE PINS.

STEP #5: Insert the new version EPROMs with the notch toward the rear of the player. DYW 1208 goes into IC9, the left-hand slot; and DYW 1244 goes into IC10, the right hand slot. (See Figure #2).

Step #6: Once DYW 1208 and DYW 1244 of the new EPROMs are installed, reposition the foil panel and replace the top cover of the player.