
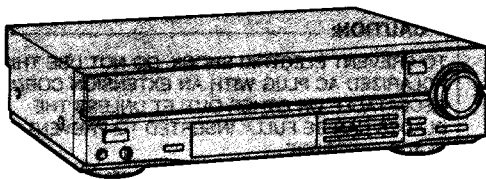


SONY

MDP-333

MDP-355GX

Information on the MDP-333 and MDP-355GX is available in the "How to Locate and Repair Video-CD Players" book. The book is available from the U.S. Government Printing Office, Washington, DC 20540, Stock # 5010-108-000-1000.

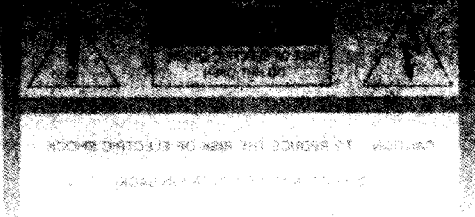

PROPERTY OF THE
NATIONAL TECHNICAL DEPT.
FILE COPY
Do not remove


Owner's Record

The model number is located at the rear. The serial number is located on the top panel. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

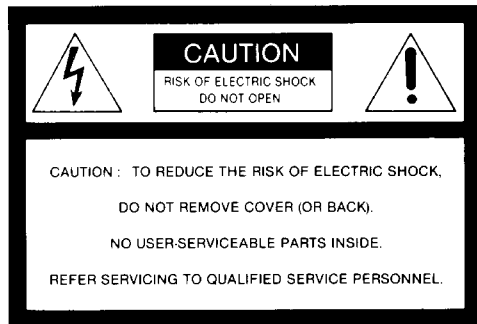

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate the equipment with respect to the receiver
- Move the equipment away from the receiver
- Plug the equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

"How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

CAUTION

The use of optical instruments with this product will increase eye hazard.

As the laser beam used in this videodisc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

NOTICE FOR THE CUSTOMERS IN CANADA

This apparatus complies with the Class B limits for radio noise emissions set out in Radio Interference Regulations.

Contents

This manual covers the MDP-333 verified to the FCC rules and available in the U.S.A. and Canada, the MDP-355GX available in other countries and the PX model of MDP-355GX. Operations are the same regardless of the model name. Specifications vary only with regard to power requirements and AC outlet on the unit.

	Precautions	4
	Operating voltage	4
	Features	5
Introduction	Location and function of controls	5
	Front panel	6
	Remote commander	8
	Connections	10
Connections	To connect to audio system and to TV with video inputs	10
	To connect to TV without audio/video inputs	11
	To play an LD	12
	To change playback speed and direction – Speed play	15
	To play frame by frame – Freeze-frame, STEP playback	16
LD	To search for a particular scene – Dual speed clear scan	17
	Searching by chapter number – Chapter search	18
	Searching by frame number/time – Frame/time search	19
	To play repeatedly – Repeat playback	20
	To play only certain chapters – Program playback	21
	To play a CD	22
CD	To search for a particular selection – Search	25
	To play repeatedly – Repeat playback	26
	To play only certain selections – Program playback	27
	To play only certain selections within a designated time	
	– Auto program playback	28
	To change time display – Time counter	29
	To pause after a each selection – Auto pause	30
LD/CD/CDV	To insert a blank space between selections – Auto space	30
	To playback an introduction of each chapter/track – INTORO scan	31
	To set an index at a desired point – Custom index	32
	Playing in a random order – Shuffle playback	34
	To play a CDV	35
	Specifications	37
Others	Notes on handling discs	38
	Glossary	38
	Troubleshooting	39


Precautions

On safety

- Should any solid object or liquid enter the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time.
To disconnect a cord, pull it out by the plug. Never pull the cord itself.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.

On installation

- Avoid placing the player in a location subject to:
 - high humidity
 - high temperature
 - excessive dust
 - mechanical vibration
 - direct sunlight
- Allow adequate air circulation to prevent internal heat buildup. Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation holes.
- The unit will be unsteady, if it is not placed on a horizontal level surface. To avoid being unsteady, adjust the thickness of the supplied spacer to fill the gap and insert it under the unit.

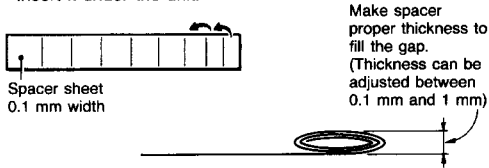

On moisture condensation

- Do not operate the unit right after having transported it from a cold location to a warm location or in a room where the temperature rises suddenly, because moisture may condense in the operating section of the unit. Wait for about an hour before turning the power on in the new location or keep the rise in room temperature gradual. If the unit is operated with moisture condensation, the unit and the disc may be damaged. Therefore remove the disc immediately when there is a possibility of moisture condensation and no picture is obtained. To evaporate the moisture rapidly, leave the player turned on without a disc loaded.

On operation

- Remove the disc from the tray after playing it, if the unit will not be used for any length of time. Do not transport the set with a disc in place.
- When the disc tray is in the open position, do not press down on it strongly, or place heavy objects on it.

On cleaning

Clean the cabinet, panel and controls with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzene, which may damage the finish.

On repacking

Do not throw away the carton and the packing material. They make an ideal container to transport the unit in.

If you have any question or problem concerning your unit, please contact your nearest Sony dealer.

For the customers in the USA

For detailed safety precautions see the leaflet "IMPORTANT SAFEGUARDS".

Operating Voltage


Before operating the unit, be sure that the operating voltage of your unit is identical with that of your local power supply.

MDP-333: 120 V AC, 60 Hz.

MDP-355GX: 100, 120, 220, 240 V AC, 50/60 Hz.

For the MDP-355GX, the voltage selector is located at the rear.

If the selector must be reset, **disconnect the AC power cord** and turn the selector with a minus screwdriver so that the arrow on the selector points to the appropriate voltage.

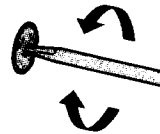

How to use the AC power plug adaptor (supplied with the MDP-355GX)

If the AC plug of your unit does not fit the wall outlet, attach the supplied AC plug adaptor.



Features

This CD/CDV/LD Player can play all six types of optical discs currently available for home entertainment use:

CD single
8 cm/3 in



Digital audio
Max. 20 min.
single-sided

CD
12 cm/5 in



 
Digital audio
Max. 74 min.
single-sided

CDV*
12 cm/5 in




Digital audio
(Max. 20 min.)
+
Video and
digital audio
(Max. 5 min.)
single-sided

LD single
20 cm/8 in




Video
+
Digital and/or analog audio
Max. 14/20 min.
single-sided
LD single disc can be played
back without using adaptors.

 LD
20 cm/8 in



Video
+
Digital and/or
analog audio
Max. 14/20 min.
(CAV/CLV) per side

LD
30 cm/12 in

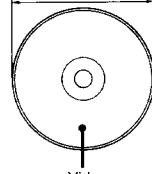

Video
+
Digital and/or analog audio
Max. 30/60 min.
(CAV/CLV) per side

The following functions are available with this unit.

For the CDV disc, CD functions can be used on the audio portion and LD functions can be used on the video portion.

LD/CD/CDV

- **Custom index**
Specify up to six index marks at any point on the disc, for convenient playback start at the push of a button.
- **Program play**
Play back chapters or tracks in any desired order.
- **Shuffle play**
Play all selections on a disc in a random order.
- **Auto disc protection**
Prevents damage to the disc during stop.
- **AV calendar display**
Shows the number of tracks (up to 20) on a disc and the total playing time at a glance.
- **Auto program**
Play back chapters or tracks within a designated time.
- **INTRO scan**
Play only the beginning (introduction) of the chapters or tracks on a disc in order.

LD/CDV (Video Portion)

- **Variable speed playback (LD CAV only)**
11 speed settings for normal and reverse playback, step (frame-by-frame) playback and high-quality freeze-frame.
- **Clear scan**
Fast scan without picture distortion even on CLV discs.

CDV

- **Video portion**
All LD (CLV) functions are available.
- **Audio portion**
All CD functions are available.

This unit plays back discs with any of the following logos on the label.



LaserDisc




- It cannot play back CED or VHD discs or discs with PAL, SECAM, or video signals other than the NTSC standard.

- The Compact Disc Video (CDV) format divides a CD into two sections. One is 20 minutes of digital audio playable on any CD player. The other, 5 minutes of video and digital audio, requires a CDV player.

Location and Function of Controls

Front panel

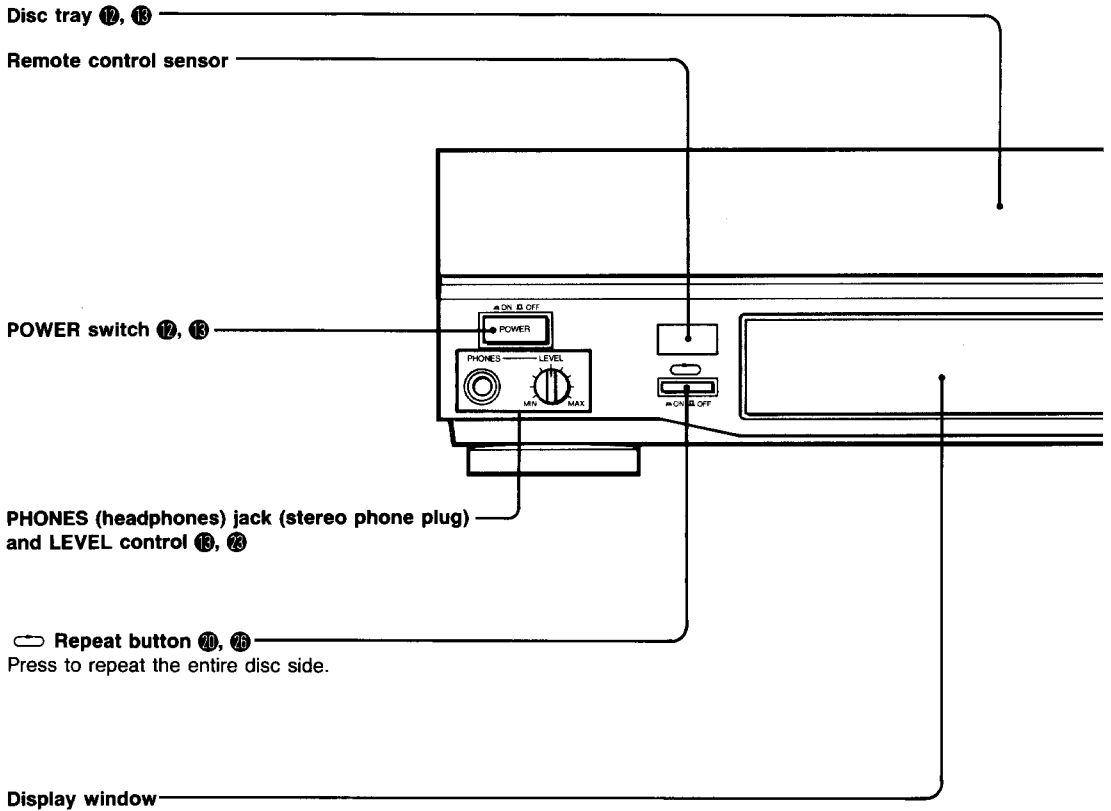

Accessories

The shipping box should contain the following accessories.

RMT-333A Remote Commander




Two size AA (R6) batteries




Video connecting cord
(phono 1 ↔ phono 1)



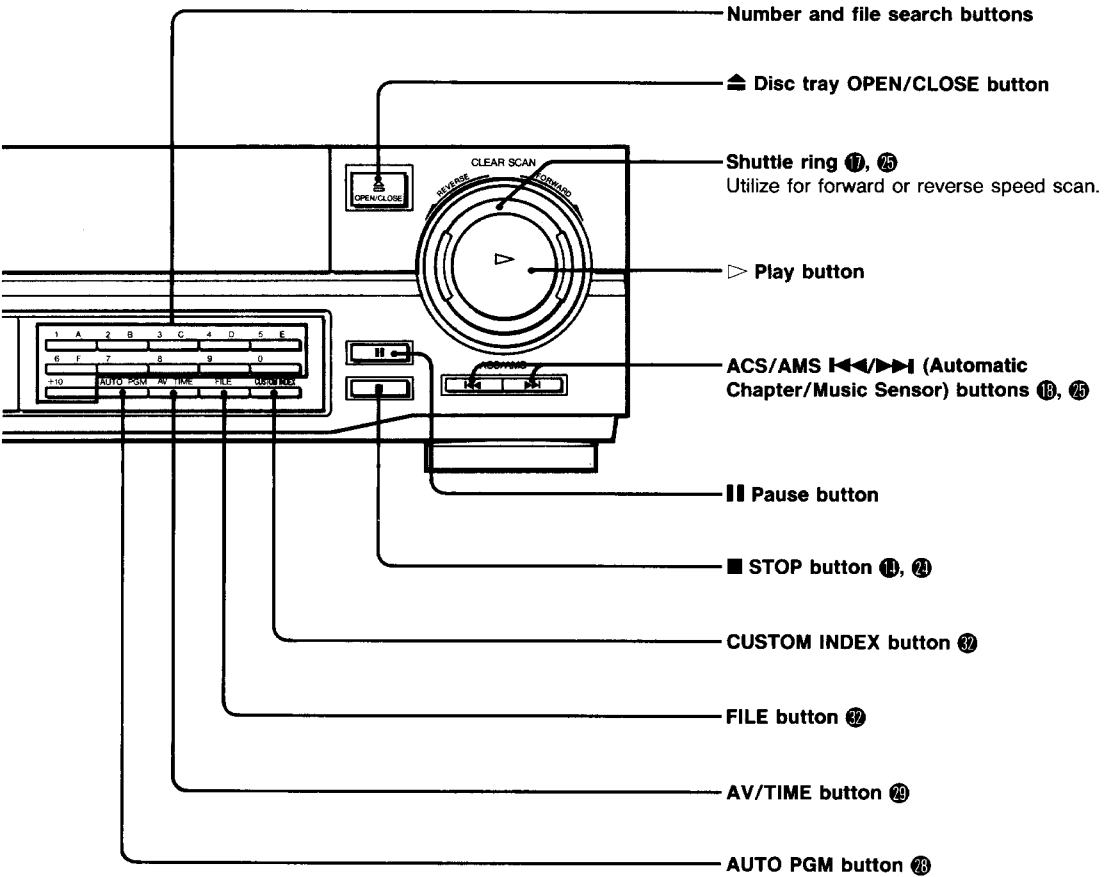

 Audio connecting cord
(phono 2 ↔ phono 2)



RFU adaptor RFU-90UC (1)
(supplied with the MDP-333
and the PX model of MDP-355GX)



Spacer



Remote Commander

LD Operation

DISC/TV button ①

▲ Disc tray OPEN/CLOSE button

FRAME/TIME button ⑱

PGM program button ㉑

Number and file search (A - F) buttons

SEARCH/NEXT button ⑩

</> MULTI SPEED buttons ⑮
+/- SPEED SET buttons

STILL/STEP ◀||/||▶ buttons ⑮

ACS/AMS ◀◀/▶▶ ⑮
(Automatic Chapter/Music Sensor) buttons

Shuttle ring ⑰
Utilize for forward or reverse speed scan.

CLEAR button ㉒

DISPLAY button ⑳

CX button ㉓

REPEAT button ㉔

ANALOG audio button ㉕

1/ALL button ㉖

AUDIO MONITOR button ㉗

SHUFFLE button ㉘

A. (Automatic) PAUSE/A. (Automatic) SPACE button ㉙

REPEAT A ↔ B button ㉚

AV/TIME button ㉛

BACK button ㉜

AUTO PGM button ㉝

FILE button ㉞


CUSTOM INDEX button ㉟

INTRO (Introduction) scan button ㊱

|| PAUSE button ㊲


■ STOP button ㊳

▶ PLAY button

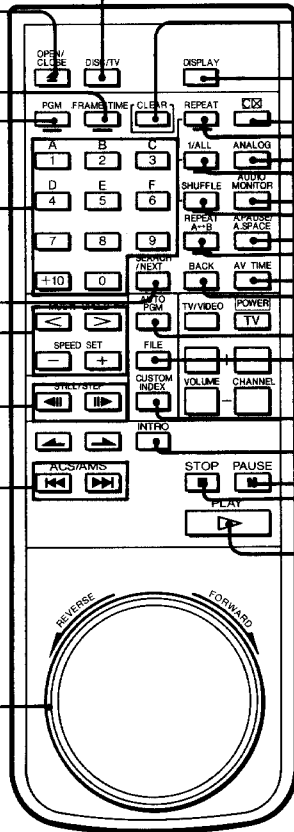


Battery insertion

1

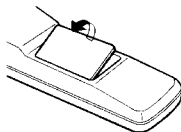


2

Insert the two size AA batteries as shown, being careful to match +/- polarities.

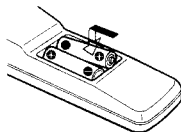

CD, CDV, Others Operation

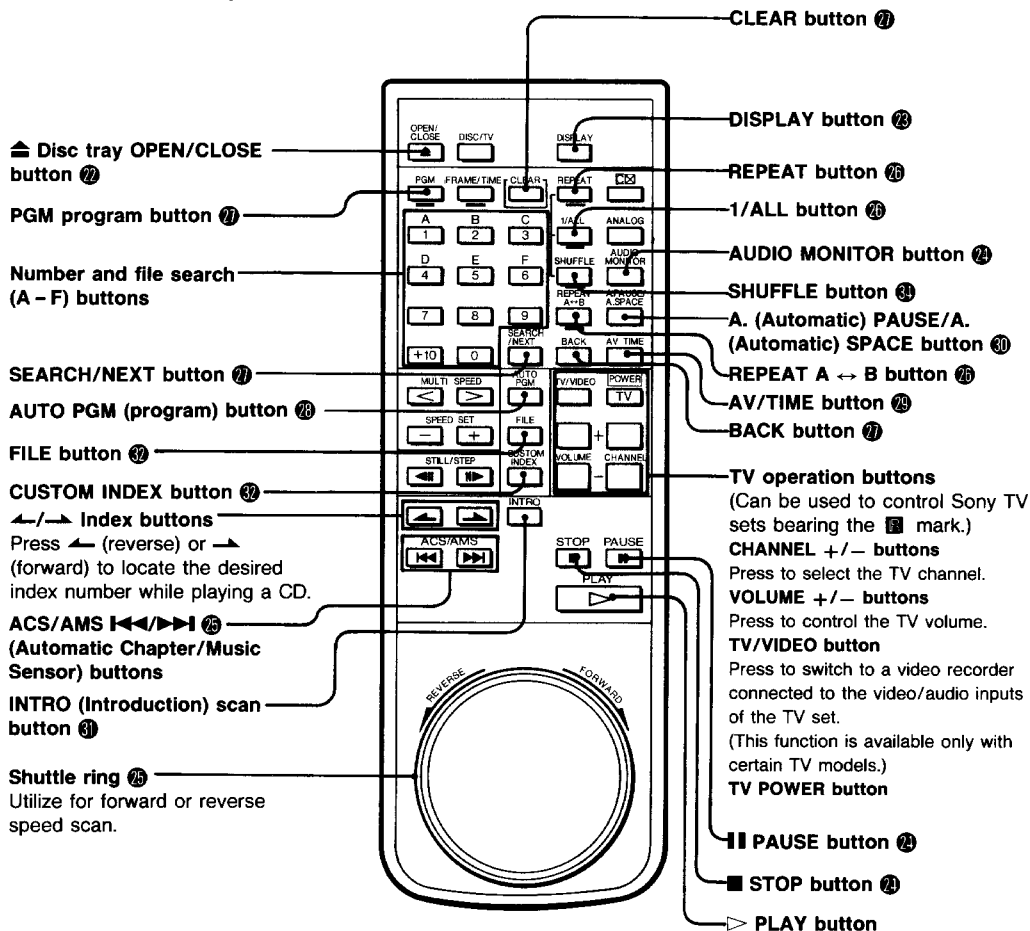

Battery life

Under normal operations, the batteries will last for approximately six months. If the operating range of the Remote Commander becomes noticeably short, replace all the batteries with new ones. If the Remote Commander is not to be used for a long period of time, remove the batteries to avoid possible damage from battery leakage.

Remote Commander Precautions

Do not let sunlight or light from a powerful artificial light source fall directly on the Remote Commander sensor on the front panel as it may interfere with operation or damage the sensor.

Connections

Video and audio connection cord plug colors are indicated as yellow, white, and red. Make sure that the jacks of the equipment are properly connected to its corresponding colors.

To Connect to Audio System and to TV with Video Inputs

AUDIO OUT jacks (phono jacks)

Connect to the audio input jacks of a TV set or the AUX input jacks of an amplifier. The output signal will be the same – that is, digital or analog – depending on the signal recorded on the disc.

DIGITAL OUTPUT CONNECTOR (optical)

This jack permits optical fiber connection to an amplifier or D/A converter unit with optical input. For connection, use the optional audio fiber cable POC-15. Discs that are not digitally recorded will not be output.

VIDEO OUT jack (phono jack)

Connect to the video input jack of a TV set or VCR.

RFU DC OUT jack (mini mini jack)

This jack supplies power to the (optional) RFU adaptor for TV sets without audio/video inputs.

S VIDEO OUT jack

Connect to the S video input jack of a TV set or VCR.



AUDIO OUT monaural jack (phono jack)

Connect to the audio input jack of the TV set or the (optional) RFU adaptor.

Voltage selector (see page 4)

MDP-355GX only

MDP-333/335GX

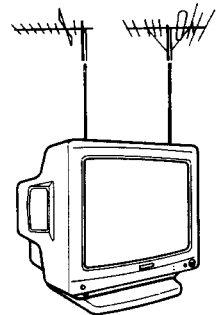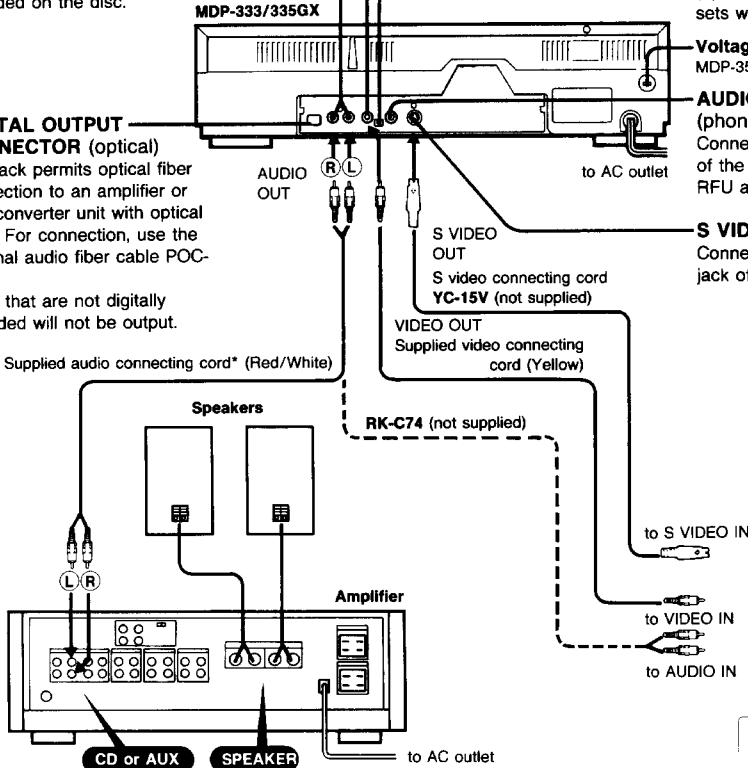

Set input selector to "Video" to view videodiscs.

* You can connect the player's audio output to the TV instead of an audio system. If the TV set has only a monaural phono jack for audio, use the VMC-720M/730M connecting cord (not supplied).

Precautions on connecting

- Make sure that all equipment is turned off before connecting or disconnecting any cables.
- Firmly insert the plugs into the jacks. A loose connection can lead to noise.
- When unplugging a cable, grasp the plug. Never pull the cable itself.
- To prevent interference, turn off all equipment connected, but not currently in use.
- If noise is emitted from the audio or video input, try moving the equipment further apart.

• Connection methods differ. When in doubt, consult the manufacturer's manual.

Connection of optical fiber cable


Remove protective cover.

Plug in connector firmly.



To Connect to TV without Audio/Video Inputs

For connection, use the optional RFU adaptor RFU-90UC (supplied with the MDP-333 and the PX model of MDP-355GX).

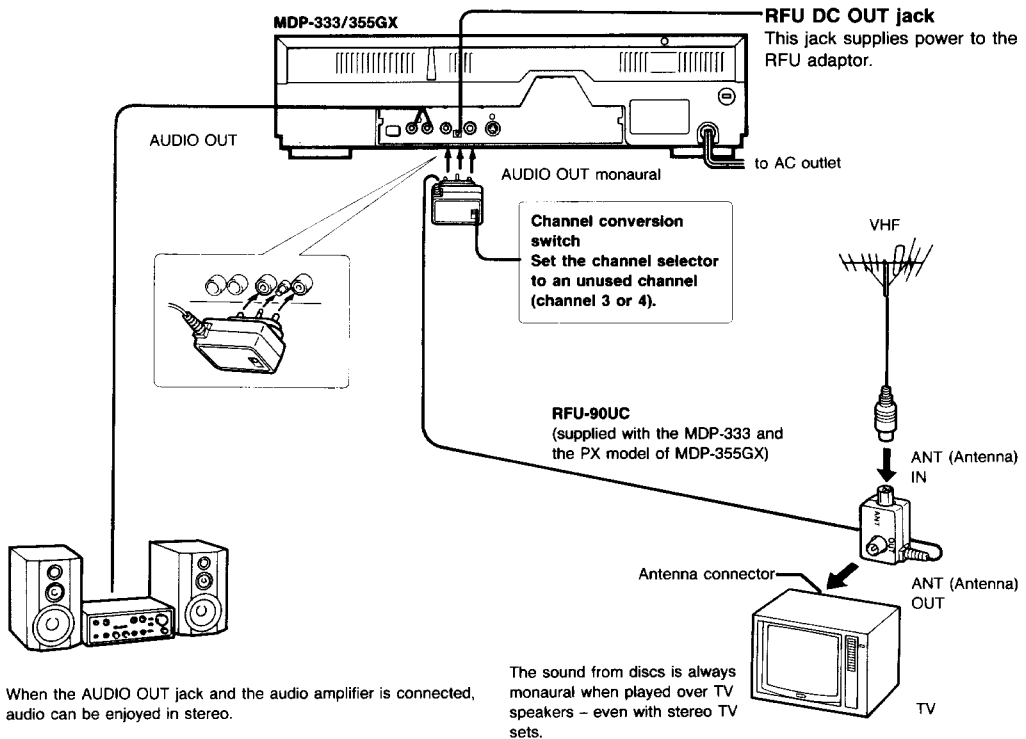

Why is it necessary to select 3 or 4?

The videodisc player sends its output to the TV as a VHF broadcast signal. Selecting an unused channel avoids interfering with regular broadcasts.


When watching regular TV programs, turn the player off or press the TV/DISC button on the Remote Commander so that you can obtain a better picture. If TV picture quality is not satisfactory, refer to the manufacturer's manual and adjust the reception.

To obtain a better picture



Always switch off the player when watching a TV program.

During FM or AM reception

Turn off the power of the player to prevent the possibility of noise interference.

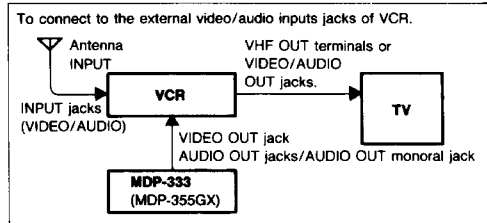

To Play an LD

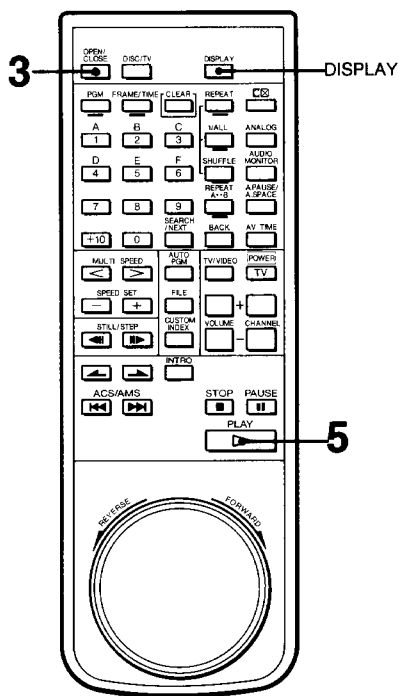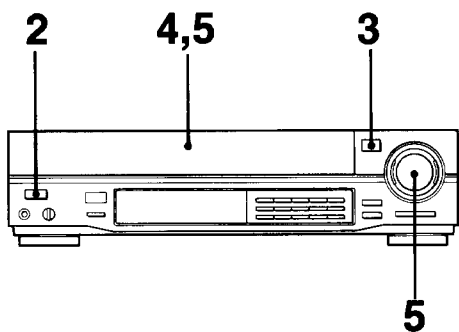


1 Turn on the TV and stereo system.

TV: Select the channel used for videodisc playback or the video input (channel 3 or 4). (See p. 10, 11)


Stereo system:

Turn on the amplifier or receiver and select the proper audio input [CD] or [AUX].

 2 Turn on the player.




3 Open the disc tray.

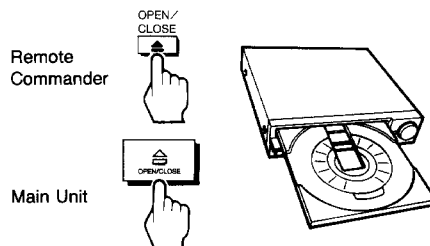


4 Place the disc on the tray.

Place the disc on the center of the tray. If the disc is not placed correctly, playback may not start.

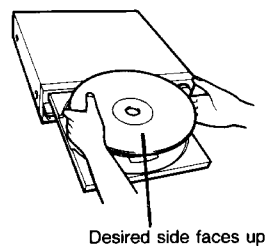

5 Start playback.

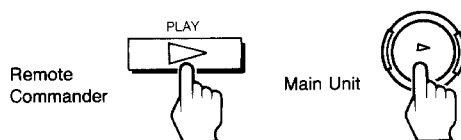

Or push the disc tray compartment, then playback will also begin.

Notes on disc tray

Do not insert a hand or finger in the player while it is operating. Although the player will stop automatically if an object is inserted while in play, serious injury may result. Be sure to place the unit out of the reach of your child.

Insert only one disc at a time. Incorrect placement of two or more discs may lead to malfunction.

Identical buttons on the main unit can also be used.

Using an optional timer

To start playback with an optional timer automatically, leave the POWER switch of the disc player in the depressed position. When the timer supplies power at the preset time, the unit turns on and playback begins.

To pause at the beginning of a disc

Press the **II** button on the player or the Remote Commander instead of conducting step 5. The tray closes, and the player pauses at the beginning of the disc.

AV calendar

When playing an LD containing TOC (Table of Contents) data, the AV calendar shows information on the total number of selections. A selection is played, its corresponding number on the display disappears.


 
To listen with headphones

Plug stereo headphones into the PHONES jack and adjust the listening volume with the LEVEL control.

Screen Messages


Information on the operating condition of the unit and chapter numbers can be superimposed on the TV or monitor screen. While no image is displayed, such as during search, information for LD is shown on a blue background.

To show the on-screen display

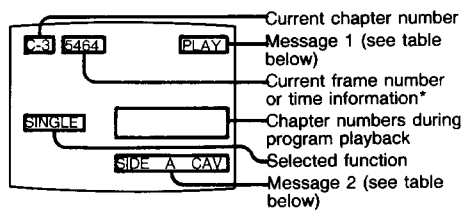

* Discs without time data to the second will be indicated as "0:22".

Displays on playback messages

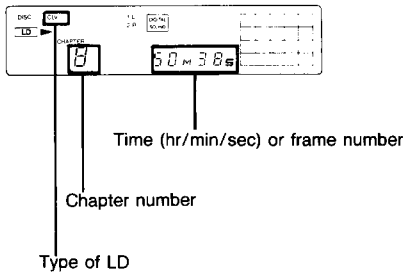

Message 1 (Examples)

Display	Explanation
OPEN	Disc tray open
CLOSE	Disc tray closed
PLAY	Playback
STOP	Stop
PAUSE	Pause
⏮ / ⏭	Manual search (Forward/reverse speed scan)
SEARCH	Search
▶ x1/2	1/2 speed display in forward direction


Message 2 (Examples)

Display	Explanation
SIDE A CAV	Standard-play disc side A
SIDE B CAV	Standard-play disc side B
SIDE A CLV	Long-play disc side A
SIDE B CLV	Long-play disc side B
1/L	Main soundtrack/left channel
2/L	Second soundtrack/right channel
♪ DIGITAL	Digital sound
♪ ANALOG	Analog sound

Precaution on LD discs

Some discs do not contain the side A or B identification code. In this case, the disc side indication may not be correct.

To Play an LD

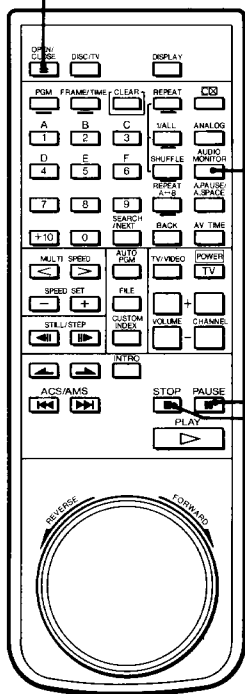

Identical buttons on the main unit can also be used.

To switch between digital and analog sound on an LD

If the LD contains a digital stereo sound signal, the player automatically sends that to the output jacks. Pressing the ANALOG button on the Remote Commander switches to the analog audio signal and turns the DIGITAL SOUND indicator off. Press the ANALOG button again to return to digital sound output.

With certain discs, there may be a difference in volume between the digital and the analog sound.

Discs with [CX] Label

Discs bearing the [CX] label are recorded with the [CX] noise reduction system, which gives lower noise levels and higher dynamic range. The [CX] indicator lights up automatically.

Some [CX] discs do not include the code necessary to automatically activate the player's [CX] noise reduction system. If the [CX] indicator does not light, press the [CX] button on the Remote Commander to manually activate the system.

To stop playback and remove disc


OPEN/
CLOSE



Remove the disc and press the OPEN/CLOSE button to close the empty tray.

To play a stereo LD or a second audio program (SAP) LD

Press the playback (>) button, then continue to press the AUDIO MONITOR button to display the following information.

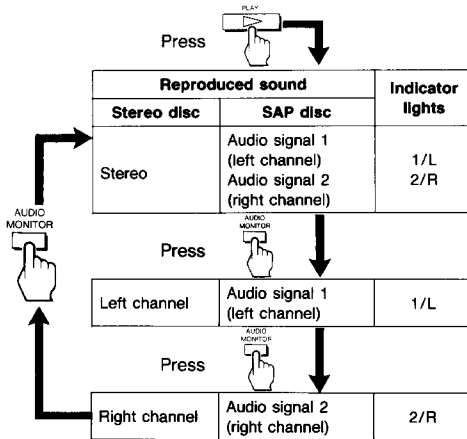

To temporarily interrupt playback

PAUSE



When playing CAV discs, the sound is cut off and a still picture is shown. When playing other discs, the unit enters the pause mode. To resume playback from the same point, press the ||| or > button.


To stop playback

STOP




Press the > button to restart playback from the beginning of the disc.

To Change Playback Speed and Direction – Speed Play (CAV standard-play)

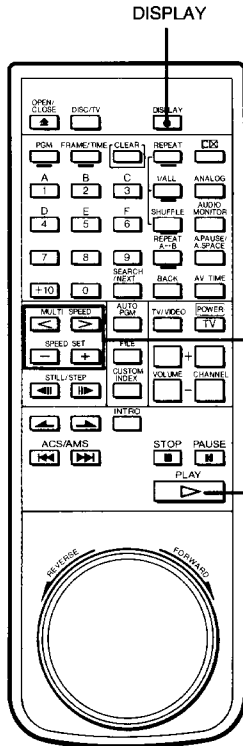


Speed and Direction

- To select the playback direction

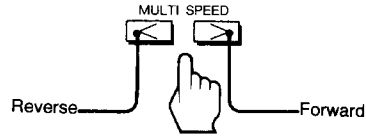


The direction can be changed regardless of playback speed.

- To display the speed and direction

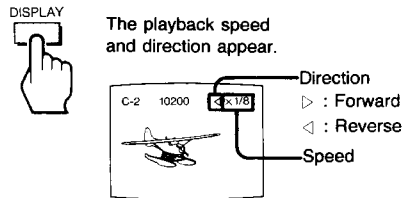

- To select the playback speed

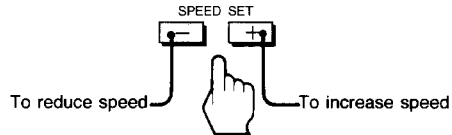

Speed Indication	Speed (approx.)	Speed Indication	Speed (approx.)
⊕		↓ x1/2	1/2 normal speed
Faster		x1/4	1/4 normal speed
↑ x10	10 times normal speed	x1/8	1/8 normal speed
		x1/16	1/16 normal speed
x5	5 times normal speed	x1/30	1/30 normal speed
		x1/90	1/90 normal speed
x3	3 times normal speed	Slower	
x2	2 times normal speed	⊖	
x1	Normal speed		

• Sound during speed play

Audio output occurs only during × 1 (normal) speed play in the forward direction. There is no sound for other speed and direction combinations.

• Extended-play discs (CLV) (See p. 8)


Speed play, freeze frame and step playback are not possible with CLV discs.

When a multi speed button is pressed, the indication "SIDE A CLV" (or "SIDE B CLV") is shown for 3 seconds. When the **|||** button is pressed, the screen becomes blue and the indication "SIDE A CLV" (or "SIDE B CLV") is shown.

Disc with automatic picture stop code


When an automatic picture stop code is encountered during speed playback (at × 1, 1/2, 1/4, 1/8, 1/16, 1/30, 1/90), the unit automatically stops at that frame. To resume playback, press the ▷ button, ◀▶▶▶ button, </> button, or the shuttle ring.

To resume normal playback

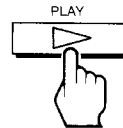

To Play an LD

To Play Frame by Frame – Freeze-frame, STEP playback (CAV standard play)

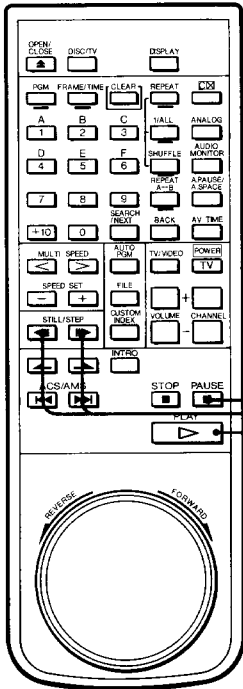

To view a still picture – Freeze-frame

PAUSE



The screen stops at the current frame.

To view a frame one by one – STEP playback

1.

PAUSE



Press once for freeze-frame.

2.



Each press shifts one frame backward.

Each press shifts one frame forward.

Hold the button down for continuous step playback. It is available to press STILL/STEP buttons during playback operation.

 
To resume normal playback

PAUSE



or

PLAY




- **During freeze-frame or step playback operation**


There is no sound.

- **Extended-play (CLV) discs**

Speed play, freeze frame and step playback are not possible with CLV discs.


When the  button is pressed, the screen becomes blue and the indication "SIDE A CLV" (or "SIDE B CLV") is shown.

To Search for a Particular Scene – Dual Speed Clear Scan

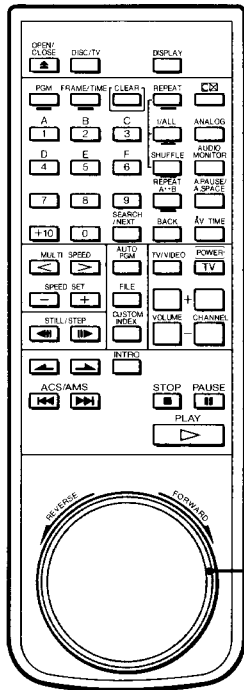

To forward or reverse speed clear scan

The playback speed can be changed depending on the degree of the shuttle ring.

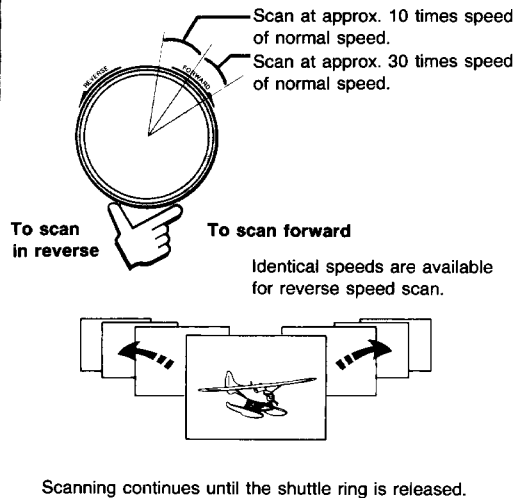


While scanning in either direction

- There is no sound.
- Scanning speed varies as the laser beam moves away from the center of the CLV disc. In addition, the image during scanning with a CLV disc will contain some instability.
- A certain amount of noise is inevitable with all scanning operations.

To Play an LD

Searching by Chapter Number – Chapter Search


Chapters are contained in a disc. LDs are divided into sections called chapters. Such discs usually have a list of chapters on the jacket or label.

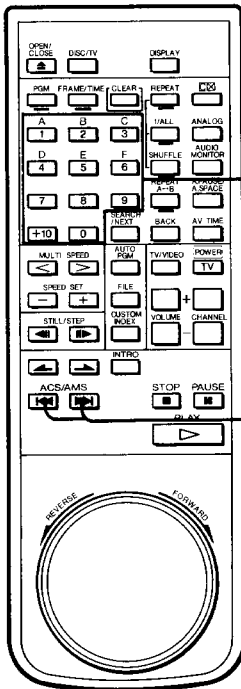

Direct chapter search

Example: Locate the beginning of chapter 8.

 Press the "8" button.



Searching for chapter 8

Finds Chapter 8, and playback starts.

- If you have pressed the wrong number, simply press the correct one.
- Search can be conducted while in freeze-frame, speed play, and pause condition as well as normal playback. When the desired chapter appears after search, playback will continue in the same mode.

To check the current chapter and frame/time numbers

These numbers appear in the display window on the player. Or to display them on the screen, press the DISPLAY button on the Remote Commander.

To enter a number greater than 10

Use the +10 and 0 buttons.

Examples: 10: $+10 \rightarrow 0$
14: $+10 \rightarrow 4$
20: $+10 \rightarrow +10 \rightarrow 0$

If the +10 button is pressed by mistake

Press the CLEAR button, then press +10 and other buttons for desired number.

Notes

 
- The chapter search feature will not function if the disc does not include chapter numbers. In this case, the screen message will give only frame or time numbers.
- As for a disc with TOC (see p. 18), if a chapter number not included in the disc is entered, the entry will be ignored.
- As for a disc without TOC, if a chapter number not included in the disc is entered, the last picture will be displayed and the player will stop.
If the REPEAT function is pressed (see p. 18), playback will resume from the beginning of the disc.
If the REPEAT function is not on, press \triangleright to resume playback.

Skip chapter search

Press the \lll button once to return to the beginning of the current chapter.


Press the \lll button twice – before the picture reappears – to return to the beginning of the previous chapter.

Press the \ggg button to advance to the beginning of the next chapter.




Example: Current chapter = 12

 Press the \lll button once.



Press the \ggg button once.

 

Beginning of chapter 12



Beginning of chapter 13

Searching by Frame Number/Time – Frame/Time Search

For CAV (standard-play) discs only (Frame search)


Enter the frame number to search for a particular scene.

- Each picture on a standard-play disc is called as a frame.


For CLV (extended-play) discs only (Time search)

Enter the time to search for a particular scene.

- Extended-play discs keep track of positions as elapsed time from the beginning of the disc.

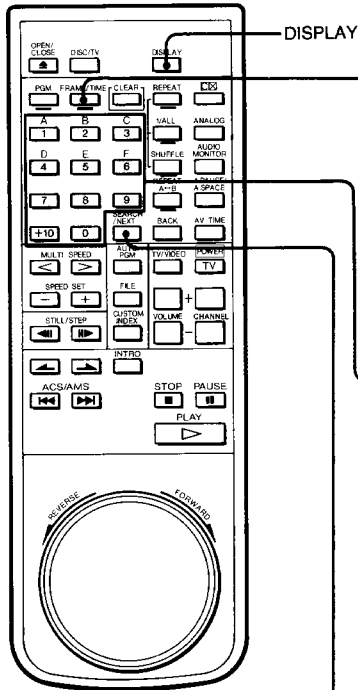

1 Press the FRAME/TIME button.

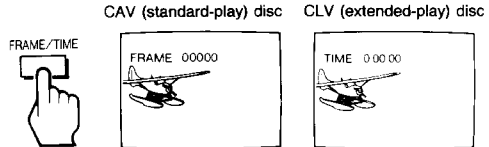

2 Enter the desired frame or time numerals.

- CAV (standard-play) disc

Example: Locate frame number 12340.

Press the number buttons in the following order.

[1] → [2] → [3] → [4] → [0]

- CLV (extended-play) disc

Example: Locate the 12 min 05 sec point.

Press the number buttons in the following order.

[1] → [2] → [0] → [5]

If you make a mistake

Press the FRAME/TIME button once more to return the display indication to zero, and then enter the correct numbers as follows.

For CAV – five digits

For CLV with seconds – four digits

For CLV without seconds – two digits

3 Press the SEARCH/NEXT button.



Playback starts at the specified number in step 2.

Search can be conducted while in freeze-frame, speed play, and pause condition as well as normal playback.

When the desired frame or time appears after search, playback will continue in the same mode.

To cancel frame/time search

Before pressing the SEARCH/NEXT button, press the CLEAR button.

After pressing the SEARCH/NEXT button, press the ■ button.

To check the current frame/time numbers


These numbers appear in the display window on the player.

Or to display them on the screen, press the DISPLAY button on the Remote Commander.

Notes

- If a frame/time number not contained on a disc is entered, the playback stops. If the REPEAT button is pressed and REPEAT is shown in the display window (see p. 10), playback will resume from the beginning of the disc.
- If the disc does not include seconds-unit time data, enter the time in minutes only.

To Play Repeatedly – Repeat Playback

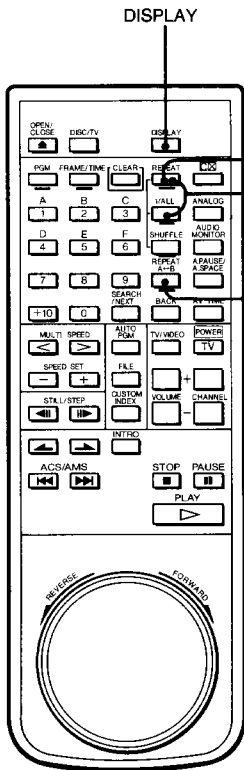

To repeat the entire side of the disc

Remote Commander Main unit

Current chapter/track

(Shown on the screen when DISPLAY button is pressed) REPEAT lights up in the player's display window.

When the player reaches the end of the side, it automatically repeats the side.

To repeat the current chapter

Current chapter

(Shown on the screen when DISPLAY button is pressed) REPEAT, SINGLE lights up in the player's display window.

When the player reaches the end of the current chapter, it automatically repeats that chapter.

To repeat a specific section of a disc

At the beginning of desired section

(Shown on the screen when DISPLAY button is pressed) A ↔ B lights up in the player's display window.

At the end of desired section

Unit returns to the beginning of specified section and repeats playback.

To cancel A ↔ B repeat
Press the CLEAR button.

To cancel repeat functions other than A ↔ B
Press the REPEAT button again to cancel the REPEAT indication in the display window. (The same button that was used to activate repeat either from the main unit or the Remote Commander – must be pressed to cancel the repeat function.)


To check the current status
Check the indicators in the display window on the player. Or to display them on the screen, press the DISPLAY button on the Remote Commander.

To use custom repeat
To repeat playback between two predefined points on the disc, refer to page 20.

repeat button on the unit
Press to repeat the entire disc side.

To Play Only Certain Chapters – Program Playback

Example Play LD chapters 5, 4, 2, 6 – in that order.


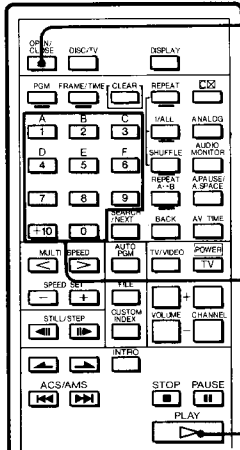


1 Press the PGM button.



PGM indication lights in the player's display window.

 2 Press the Number buttons 5 4 2 6.

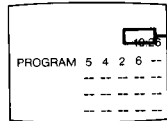

For LDs containing TOC (Table of Contents) data, the total playback time of programmed chapters is shown.

To release or cancel program playback

Press the CLEAR button or the 1/ALL button. The unit resumes normal playback.

To repeat program playback

Press the REPEAT button, then the REPEAT is displayed.

To move to a preceding or following programmed chapter

Press the \ll or \gg button.

To check the program contents during program playback

Press the PGM button. The program is displayed for about 3 seconds. The currently playing program number will flash.

Cautions

- When the shuttle ring is kept turned to the forward direction during program playback and the playback comes to the end of the current selection, the next programmed chapter will be played back. When the shuttle ring is kept turned to the reverse direction, the unit will not go back to previous chapters. If you want to move a preceding programmed chapter, keep \ll button pressed until the desired programmed number comes up.
- If not-existing chapter numbers on a disc are entered, the program cannot be conducted.
- Programmed contents are stored until the disc is removed or the power is switched off.

If you make a mistake

To start over	To change a number
Press the CLEAR and PGM button and enter the correct number.	Press the SEARCH/NEXT (to advance) or BACK (to back up) buttons until the incorrect number on the screen flashes.
	Then enter a new number.

To enter chapter numbers over 10

Use the +10 and 0 buttons.

- Examples: To enter 10: $+10 \rightarrow 0$
 To enter 14: $+10 \rightarrow 4$
 To enter 20: $+10 \rightarrow +10 \rightarrow 0$

If the +10 button is pressed by mistake

Press the CLEAR button, then press +10 and other buttons for desired number.

LD with TOC Data

When you program for an LD with TOC data, the following display is shown.

 

Example: 5, 4, 2, 6 are entered.




Currently playing chapter
 Total playback time of all programmed chapters
 Order in which the currently playing chapter is programmed

If the chapter number 0 or chapter numbers higher than 21 are entered, or if the total playback time exceeds 100 minutes, the total playback time will not be shown.

3 Press the \triangleright button.

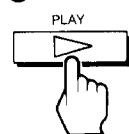


 
Searching for the first programmed chapter



Playback starts from the beginning of chapter 5.

After playing all programmed chapters 5, 4, 2, 6, in order, playback stops.

To Play a CD

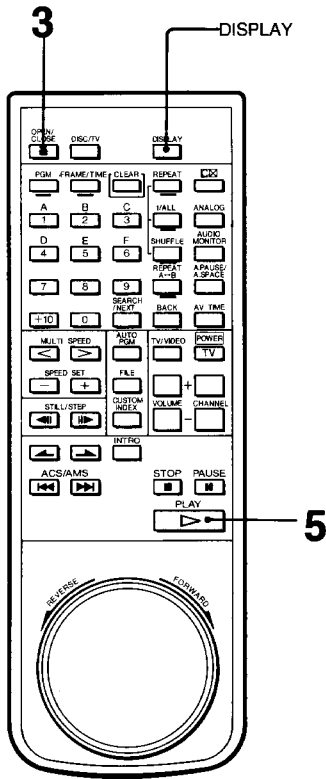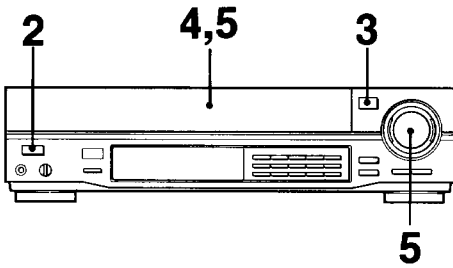

Notes on disc tray

 
Do not insert a hand or finger in the player while it is operating. The player will stop automatically. If an object is inserted while in play, serious injury may result. Be sure to place the unit out of the reach of your child. Insert only one disc at a time. Incorrect placement of two or more discs may lead to malfunction.

Identical buttons on the main unit can also be used.


1 Turn on the stereo system.

Turn on the amplifier or receiver and select [CD] or the desired audio input.

2 Turn on the player.




3 Open the disc tray.

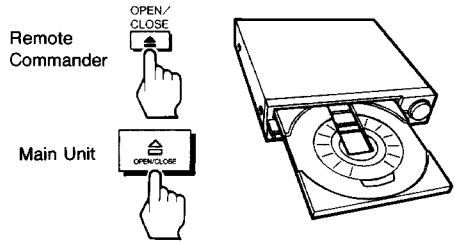


4 Place the disc on the tray.

Place the disc on the center of the tray. If the disc is not placed correctly, playback may not start.

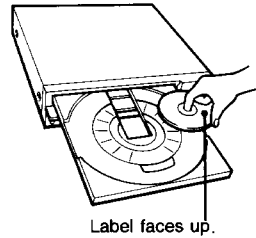

5 Start playback.

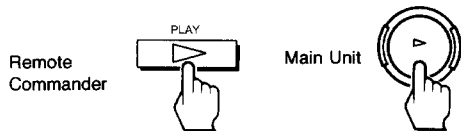

Or push the disc tray compartment, then playback will also begin.

Using an optional timer

To start playback with an optional timer automatically, leave the POWER switch of the disc player in the depressed position. When the timer supplies power at the preset time, the unit turns on and playback begins.

To pause at the beginning of a disc


Press the **II** button on the player or the Remote Commander. The tray closes, and the player pauses at the beginning of the disc.

AV calendar

When playing a CD, the AV calendar shows information on the total number of selections. As selections are played, the corresponding numbers on the display disappear.

When listening with headphones

Plug stereo headphones into the PHONES jack and adjust the listening volume with the LEVEL control.

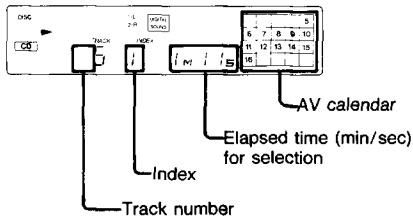Playback display**Screen Messages**

Information on the operating condition of the unit and track numbers can be superimposed on the TV or monitor screen. Information for CD is shown on a green background.


To call up the on-screen display

DISPLAY



Remote Commander


Press the button again to turn the display off.

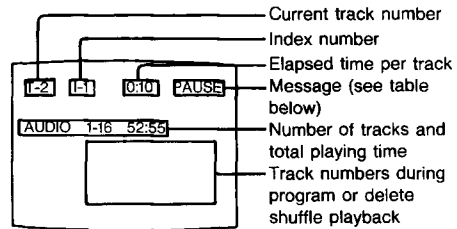**Message**

(Examples)

Display	Explanation
OPEN	Disc tray open
CLOSE	Disc tray closed
PLAY	Playback
STOP	Stop
PAUSE	Pause
⏮ / ⏭	Manual search (Forward/reverse speed scan)
SEARCH	Search

To Play a CD

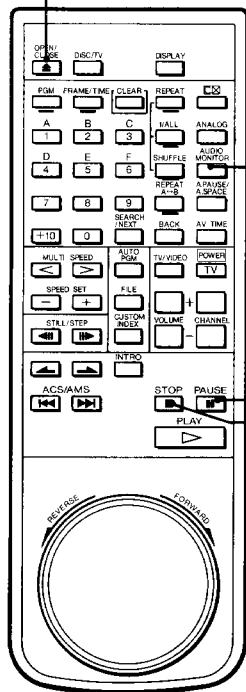

To stop playback and remove disc



Remove the disc and press the OPEN/CLOSE button again to close the tray.

To play a stereo CD or a second audio program (SAP) CD

After playback has started

Each time the AUDIO MONITOR button is pressed, the mode changes in the following order.

Reproduced sound		Indicator lights
Stereo disc	SAP disc	
Stereo	Audio signal 1 (left channel) Audio signal 2 (right channel)	1/L 2/R
Press ↓		
Left channel	Audio signal 1 (left channel)	1/L
Press ↓		
Right channel	Audio signal 2 (Right channel)	2/R

To temporarily interrupt playback



To resume play from the same point, press the or button.


To stop playback




To restart playback from the beginning of the disc, press the button.

Identical buttons on the main unit can also be used.

To Search for a Particular Selection – Search

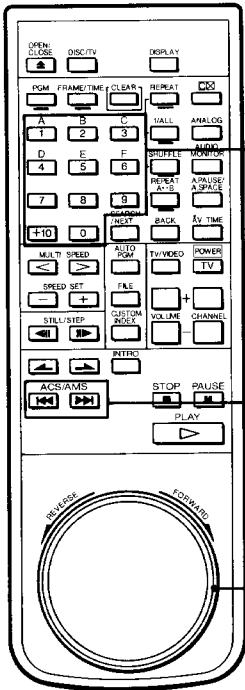

To search by track number

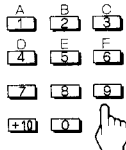

Enter the track number.

To play a single track once


1. Press the 1/ALL button on the remote commander to display the SINGLE display.
2. Then select the track with the number buttons. When the track has been played, the unit enters the stop mode. To release the setting, press the 1/ALL button again.

If you press the wrong numbers, simply press the correct ones.

To skip selections


Press once to return to the beginning of the current selection. Press again to return to the previous selection.

Press to advance to the next selection.

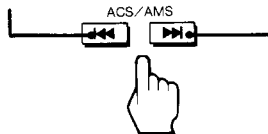

To search for a particular point – Dual Speed Scan

The playback speed can be changed depending on the degree of the shuttle ring.

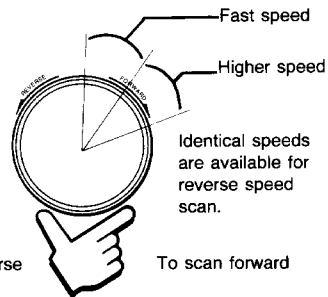

Scanning continues until the shuttle ring is released.

To enter track numbers over 10

Use the +10 and 0 buttons.


- Examples: To enter 10: **+10** → **0**
 To enter 14: **+10** → **4**
 To enter 20: **+10** → **+10** → **0**

If the +10 button is pressed by mistake



Press the CLEAR button, then press +10 and other buttons for desired number.

To Play a CD

To Play Repeatedly – Repeat Playback


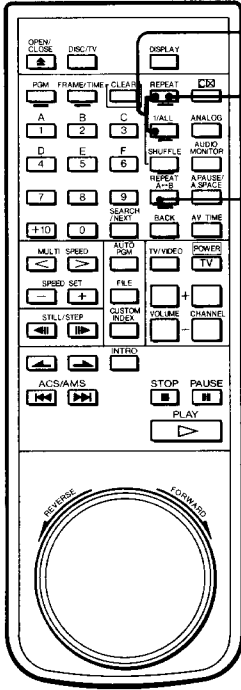


  To repeat the current selection – SINGLE Repeat



Current selection (track) is continuously repeated. Deactivate REPEAT display to playback a selection only once.

 
 
To repeat all selections – ALL Repeat



The entire disc is continuously repeated.

To repeat a specific section of a disc – A ↔ B Repeat

  
At the beginning of desired section



At the end of desired section



 Flashing of A ↔ B indicator stops and the specified section is continuously repeated.



To cancel A ↔ B Repeat, press the CLEAR button.

To cancel ALL or SINGLE Repeat

Press the REPEAT button that was used to activate repeat either from the main unit or the remote commander – again.


 repeat button on the unit

Press to repeat the entire disc side.


To Play Only Certain Selections – Program Playback

You can program up to 20 tracks playback in a specified order.

Example: Play CD tracks 5, 4, 2, 6 – in that order.

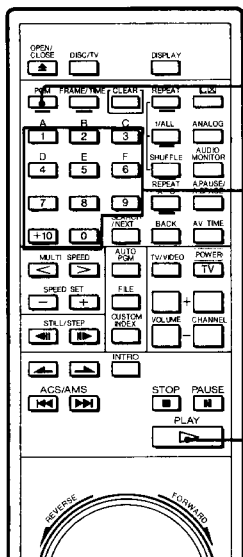


1 Press the PGM button.

 

PGM indication lights in the player's display window.

 2 Press the Number buttons 5 4 2 6.



If you make a mistake

To start over	To change a number
Press the CLEAR and PGM button and enter the correct number.	Press the SEARCH/NEXT (to advance) or BACK (to back up) buttons until the incorrect number on the screen flashes.
	Then enter a new number.


To enter track numbers over 10
Use the +10 and 0 buttons.

Examples: To enter 10: $\boxed{+10} \rightarrow \boxed{0}$
To enter 14: $\boxed{+10} \rightarrow \boxed{4}$
To enter 20: $\boxed{+10} \rightarrow \boxed{+10} \rightarrow \boxed{0}$

If the +10 button is pressed by mistake

Press CLEAR button, then press +10 and other buttons for desired number.

3 Press the button.

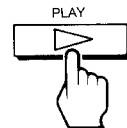

After searching and playing all programmed selections 5, 4, 2, 6, in order, playback stops.

Notes

- When the shuttle ring is kept turned to the forward direction during program playback and the playback comes to the end of the current selection the next programmed track will be played back. When the shuttle ring is kept turned to the reverse direction, the unit will not go back to previous tracks.
- If not existing track numbers on a disc are entered, the program may not be conducted.

To release or cancel program playback

Press the CLEAR button or the 1/ALL button. The unit resumes normal playback.

To check track and time information on the screen

Turn on the power of the TV or monitor. Time and track for the CD/CDV will be turn on the screen.

To repeat program playback

Use the REPEAT button to turn the REPEAT display on.

repeat button on the unit

Press to repeat the entire disc side.

During program playback

The numbers on the AV calendar display disappears as selections are played. The contents of a program are stored until the disc is removed or the player is turned off.

To move to a preceding programmed track

Press the  button.

To move to a following programmed track

Press  button.


Program playing time

The total playing time of the program is displayed only when tracks with numbers under 20 are programmed.

To Play Only Certain Selections Within a Designated Time – Auto Program Playback


You can designate a length of time and make 2 different programs of selections fitting within that period. When there is only minimal time left within the designated length of time, a selection with the longest playing time shorter than the left time will be entered.

This section explains how to conduct Auto Program Playback on a CD, but the function can also be used for LDs with TOC, and CDVs.

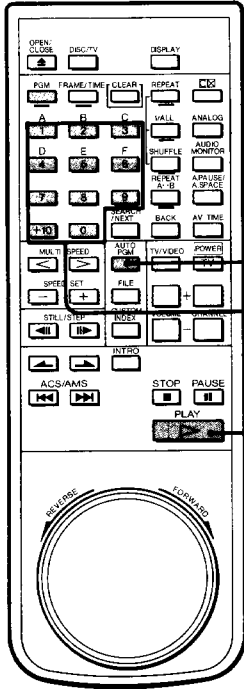

1 Press the AUTO PGM button.

 
AUTO PGM



PGM blinks in the player display window.

2 Designate the time length for a single side of your tape.

 Example: For 30 minutes of playback



Program A

 


Program A

(corresponding to Side A of tape)

Program A and B appears alternately.

Program B



Program B

(corresponding to Side B of tape)

If you press the wrong number, simply press the correct one.


3 Press the ▷ button.



The selections for Program A will be played and then the unit will pause.

The number of the selection that finishes its play disappears from the AV calendar display.

4 Press the ▷ button to play back Program B.

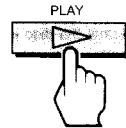

To resume normal playback

Press the CLEAR button or the 1/ALL button.

AV calendar on the screen

The AV calendar shows information on the contents of two different programs: program A and program B, separated with a pause.

Auto Program contents

Program contents are stored until the disc is removed or the power is turned off.



If your disc contains more than 20 selections

Selection with numbers over 20 may not be programmed with the Auto Program function.

Note

Auto Program will not be run if your selection is larger than the designated playing time.

To Change Time Display – Time Counter

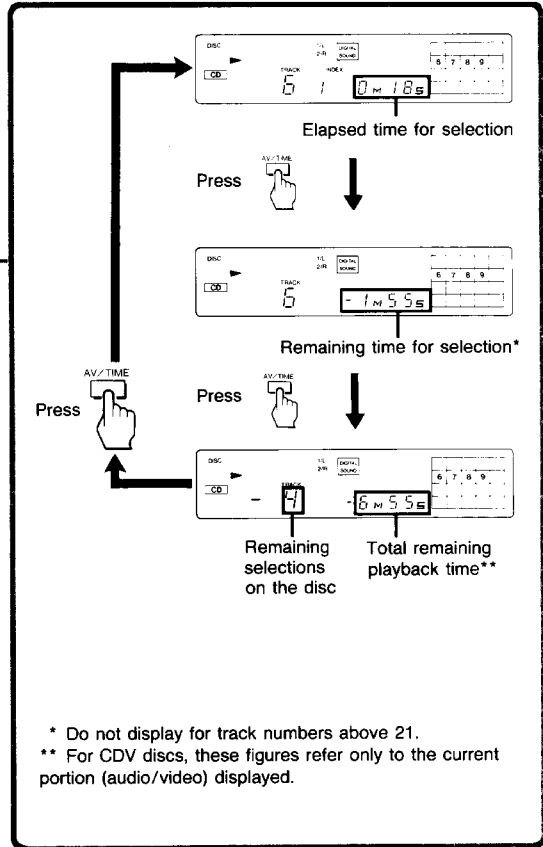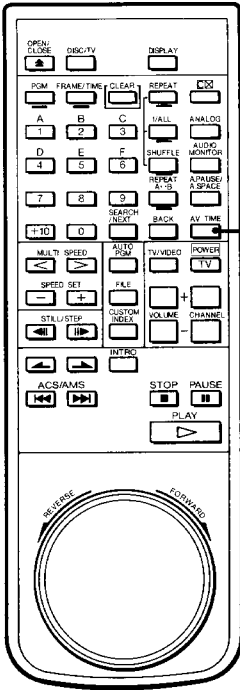

Display on TV screen

If the TV set or monitor connected to the player is on and the DISPLAY button is pressed, the track number, time, and other information recorded on the CD/CDV will appear on a green background on the monitor.

Note on LD discs

The time display function is available only with LDs containing TOC data.

First, the elapsed time or the number of frames is displayed. Pressing the AV TIME button then changes the time display as shown above.

AV TIME button


Pressing the AV TIME button during the stop mode will display the total number of tracks and total playing time for CDs and LDs with TOC data.

For CDVs, the total number of tracks and total playing time for both audio portion and video portion are displayed alternately in the display window on the player.

To Pause After a Each Selection – Auto Pause To Insert a Blank Space Between Selections – Auto Space


Auto Pause – After a selection is played, the player enters the pause mode.

Auto Space – A blank interval of 3 seconds is inserted between the playback of each selection.

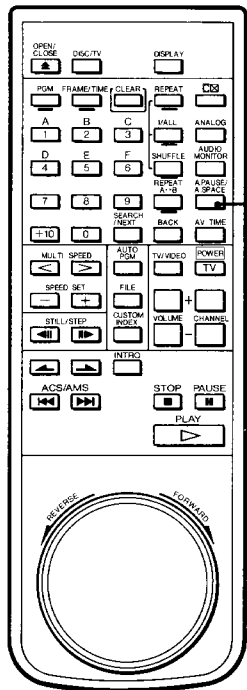

Auto Pause

 
Press the A.PAUSE/A.SPACE button once.



To start playback of the next selection
Press the ▷ button.


Auto Space

 Press the A.PAUSE/A.SPACE button twice.



To resume normal playback


Each time the A.PAUSE/A.SPACE button is pressed, the mode changes to give you in the following order.

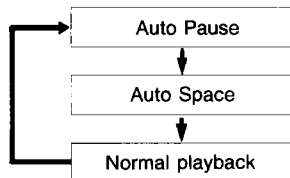

For the button of Auto Pause and Auto Space should use the same one.

If you playback in auto program, program, shuffle or delete shuffle mode, auto space may insert a space more than 3 seconds.

To Playback an Introduction of Each Chapter/Track – INTRO Scan

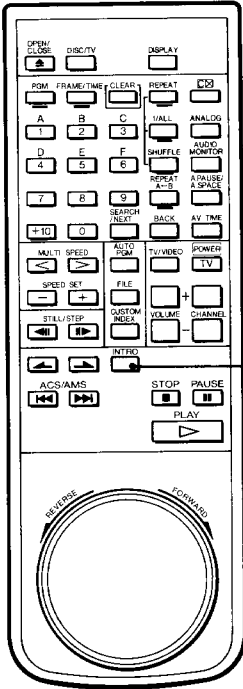

The INTRO scan plays back only the beginning (introduction) of each chapter/track on a disc for approximately 8 seconds. The INTRO scan will also play back the scenes of the video chapter for LD and CDV.

INTRO



LD

CD/CDV

Chapter 1



8-second playback

Chapter 2



8-second playback


Chapter 3



8-second playback


After the playback of the last chapter, the player will be paused.

 Track 1




8-second playback

 Track 2



8-second playback

 Track 3




8-second playback

After the playback of the last track, the player will be paused.

- Playback will begin from the video portion for CDV discs.

 To resume normal playback



or




To resume normal playback, press the ▷ button. During search functions, normal playback will resume from the selection to be searched when the ▷ button is pressed.

Press the ■ button to stop.

To Set an Index at a Desired Point – Custom Index


What is the Custom Index?

The Custom Index function lets you set up to six index marks at any point on the disc. Playback can then be started from an index point at the push of a button, and repeat playback between index points is also possible. This section explains how to set custom index marks on an LDs, and the function can also be used for CDs and CDVs.

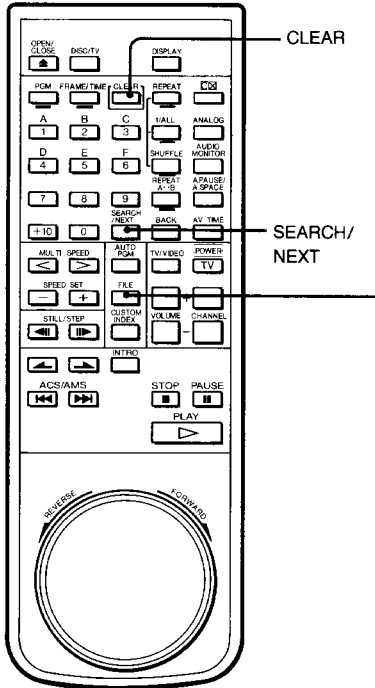


To set a custom index mark

 Press the FILE button during playback.




 
Up to six locations anywhere on the disc can be marked.



Indicators A, B, C, etc. light up for each custom index mark.

If you make a mistake

  
- 1 Use the SEARCH/NEXT button to cause the file indicator to flash.



Press the CLEAR button and then press the FILE button at the correct location.


Note
When the disc is removed or the player is turned off, the contents of the custom index are lost.

While custom index search is performed, the A, B, C, ... file search indicators disappear one by one, but the indicator for the last index point remains.

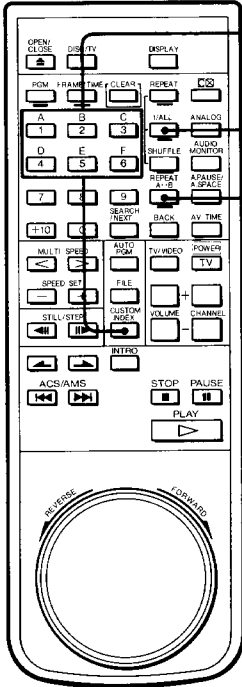


Custom Index Search

 1 Press the CUSTOM INDEX button.



The AV calendar disappears and the number buttons 1 – 6 function as file search buttons A – F.

2 Press the file search button for the desired location.

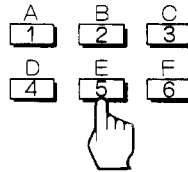

Playback starts from the specified index point and continues until the end of the disc.

To skip to another index point

Press the corresponding file search button.

To resume normal playback

Press the CUSTOM INDEX button or the CLEAR button.

To play a section between custom index points once

Press the 1/ALL button, so that the indication SINGLE is shown on the display window. Then perform custom index search to the desired index start point.

The section between this point and the next custom index point is played once.

To play a section between custom index points repeatedly

Press the 1/ALL button, so that the indication SINGLE is shown on the display window and press the REPEAT button to activate the REPEAT display. Then perform custom index search to the desired index start point.

The section between this point and the next custom index point is continuously repeated.

Index point rearrangement

The custom index points are arranged on the disc not by the order in which they were input but by their relative location from the start of the disc. If a new index mark is set before an old one, the A, B, C, ... order is rearranged.

Custom index with a CDV disc

Although playback begins from the video portion, files will be arranged from the audio portion in A, B, C ... order.

How is the custom index stored?


The custom index data are not actually recorded on the disc but stored in the memory of the player.

Therefore, the custom index points set with one player cannot be used when the disc is played on another unit.

To clear a custom index mark

Information on index marks is retained also when the player is switched to normal playback. To cancel a stored index mark, use the SEARCH/NEXT button to cause the corresponding file search indicator to flash, and then press the CLEAR button.

Playing in a Random Order – Shuffle Playback

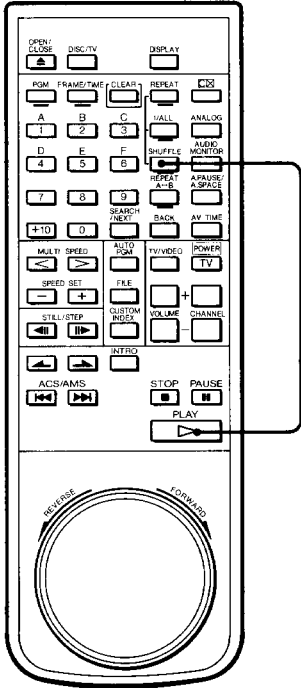

To play all tracks or chapters on a disc

- 1 Press the SHUFFLE button.**

- 2 Press the > button.**

All selections on the disc are played once in a random order. After all selections have been played, the unit enters the stop mode.


To cancel shuffle playback
Press the CLEAR button or the 1/ALL button. Normal playback resumes from the next selection.

When a LD without TOC data, the indication "NO TOC" appears on the display window, and shuffle playback cannot be conducted.

To skip to the next selection during shuffle playback
Press the >>> button. Returning to a previous selection with the <<< button is not possible.

Shuffle playback with CDV discs
Selections from the audio portion and video portion are played in random order.

SHUFFLE button timing
To ensure correct operation, do not press the SHUFFLE button immediately after the disc tray has closed. Instead, press the SHUFFLE button only after the > (play) indication in the display has stopped flashing. The selections on the disc can be played back in a random order.

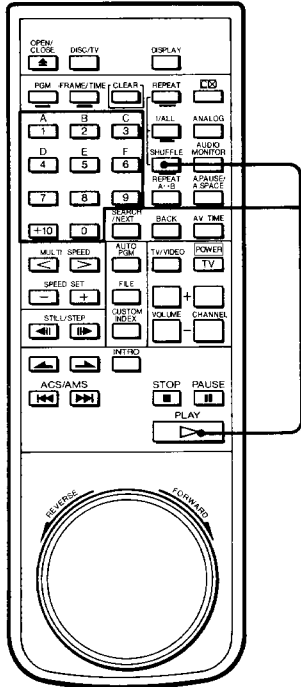


To play only certain selections – Delete Shuffle

1 Press the SHUFFLE button.



 
2 Enter the chapter number or track number of the selection you do not wish to play.



If you make a mistake

To start over	To change a number
Press the CLEAR button and then press the SHUFFLE button again and enter the correct number.	Press the SEARCH/NEXT (to advance) or BACK (to back up) buttons until the incorrect number on the screen flashes.
	Then enter a new number.

3 Press the ▷ button.

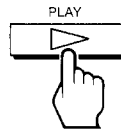

The player automatically selects a random program without the deleted selections.

To resume normal playback

Press the CLEAR button or the 1/ALL button.


Delete shuffle

This function lets you exclude specific chapters or tracks from shuffle playback. When the function is used, DELETE SHUFFLE appears on the screen.

To repeat shuffle or delete shuffle playback

Press the REPEAT button on the Remote Commander to activate the REPEAT indication on the display window. When the unit is turned off or the disc is removed, shuffle functions are cancelled.

To Play a CDV

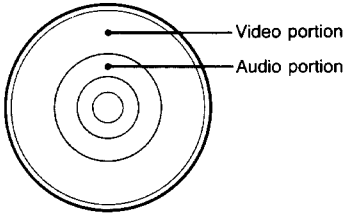

The Compact Disc Video (CDV) format divides a CD into two sections. One section consists of 20 minutes of digital audio playable on any CD player. The other section which consists of 5 minutes of video and digital audio, requires a CDV player. Please note the following when playing a CDV.

- Time search is not applicable for CDV.
- To display the remaining time, simply press the AV TIME button.
- CDVs are divided into track numbers which are assigned to each selection for the audio and video portion. The track of the video portion corresponds to the chapter of the LD.

 
To play

Press the PLAY button. Playback will begin from the video portion. After the completion of the video portion, the audio portion will be played back.
To play back from the audio portion, search by entering the desired track number (see p. 36).


Screen Messages

Information on the operating condition of the unit and chapter or track numbers can be superimposed on the screen. During audio portion playback, information for CDV is shown on a blue background.

To call up the on-screen display



CDV

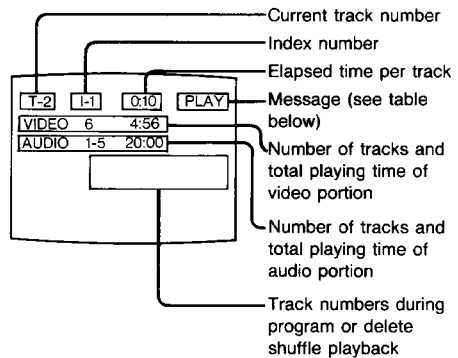

Message

(Examples)

Display	Explanation
OPEN	Disc tray open
CLOSE	Disc tray closed
PLAY	Playback
STOP	Stop
PAUSE	Pause
⏪ / ⏩	Manual search (Forward/reverse speed scan)
SEARCH	Search

Specifications

Type
Signal readout
Signal format

CD/CDV/LD Player
Optical (Laser beam reflection)
EIA standard, NTSC color
system
(minutes)

Playing time

LD	CAV	30 cm (12 in) double-sided	60
		20 cm (8 in) double-sided	28
		20 cm (8 in) single-sided	14
	CLV	30 cm (12 in) double-sided	120
		20 cm (8 in) double-sided	40
		20 cm (8 in) single-sided	20
CD	12 cm (5 in) single-sided	74	
	8 cm (3 in) single-sided	20	
CDV	Audio portion	20	
	Video portion	5	

Digital audio specifications

Frequency response 4 Hz to 20kHz (± 0.2 dB)
Signal-to-noise ratio More than 112 dB (EIAJ)*
Dynamic range More than 99 dB (EIAJ)
Total harmonic distortion 0.002% or less (at 1kHz, EIAJ)
Channel separation More than 110 dB (EIAJ)
Wow and flutter Below measurement limit ($\pm 0.001\%$ W.PEAK) (EIAJ)

Video specifications

Horizontal video resolution 425 lines
Signal-to-noise ratio More than 48 dB

Input/output specifications

Video output 1.0 Vp-p, 75 ohms, unbalanced
Audio output Stereo L, R
Analog: 200 mVrms (1 kHz, 40% modulation)
Digital: 200 mVrms (1 kHz, -20 dB)
Monaural (only for RFU adaptor)
MIX output: 77.5 mVrms (1 kHz, -20 dB)
Audio digital output (optical) -18 dBm, wavelength 660 nm
Headphone output 28 mW (32 ohms) impedance = 8 ohms
RFU DC output Mini mini jack DC 5V

Power requirements

Power requirements MDP-333: 120 V AC, 60 Hz
MDP-355GX: 100/120/220/240 V AC adjustable, 50/60 Hz
Power consumption 40 W
Weight 8 kg (16 lb 12 oz)
Dimensions Approx. 430 × 115 × 420 mm (w/h/d)
(17 × 4¹/₂ × 17 inches)
Operating temperature +5°C to +35°C
Ambient humidity 5 to 90%
* Measured according to EIAJ (Electronic Industries Association of Japan) standards.

Remote Commander RMT-333A

Principle of operation Infrared pulse
Power requirements 3 V DC (2 size AA batteries)
Dimensions Approx. 62 × 44.5 × 185 mm (w/h/d)
(2⁷/₁₆ × 1¹³/₁₆ × 7³/₈ inches)
Weight Approx. 170 g (including batteries), (6 oz)

Supplied accessories

Remote Commander RMT-333A (1)
Size AA (R6) batteries (2)
RFU adaptor RFU-90 UC (1) (supplied with the MDP-333 and the PX model of MDP-355GX)
Video connecting cord (phono plug 1 ↔ phono plug 1) (1)
Audio connecting cord (phono plug 2 ↔ phono plug 2) (1)
Operating Instructions
Spacer (1)
AC plug adaptor (MDP-355GX only) 1

Design and specifications are subject to change without notice.

Notes on Handling Discs

Handle the disc by its edge, and to keep the disc clean, do not touch the rainbow colored surface.

CD

CDV



Correct

LD



Correct

 
Do not stick paper or tape on the labeled surface.



Wrong

Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight where there can be a considerable rise in the temperature.

Before playing, clean the disc with the cleaning cloth. Wipe the disc from the center out.



Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for analog record discs.

After playing, remove the disc and store it in its case.

Do not use the discs with being cracked, severe damaged on the disc repaired with adhesives.

Glossary

CAV disc

The Constant Angular Velocity (CAV) or standard-play disc rotates at a constant 1800 rpm. Each track, or the path traced by the laser for a single rotation of the disc, produces a single frame. Each side of the disc holds up to 54,000 frames, the equivalent of 30 minutes of playback. Each frame has a number that is stored with the data on the disc.

CLV disc

The Constant Linear Velocity (CLV) or extended-play disc doubles the maximum playing time to 60 minutes by varying the rotational speed from a maximum of 1800 rpm to a minimum of 600 rpm as the laser beam moves away from the center of the disc. The disc surface therefore moves past the laser head at a constant rate, and each track is longer than its predecessor.

Digital sound disc

Some LDs include a high-quality digital audio signal as well as a more conventional analog signal. This unit reproduces both signals with priority placed on the digital audio signal.

Chapter number

Some discs are divided into sections, called chapters. Such discs usually have a list of chapters on the jacket or label. Each chapter is numbered for easy location with the chapter search function, or for use with the repeat and program functions.

Frame number

The frames on standard-play (CAV) discs are sequentially numbered for rapid access with the frame search function.

Time number

Extended-play (CLV) discs calculate position in terms of playing time from the start of the disc. The time search function provides rapid access to desired scenes.

Track number

CD and CDV discs assign track numbers to each selection. Rapid access to desired tracks is possible with the track search function. Track numbers are also used with repeat and program functions.

LD with TOC (Table of Contents)

Among various LD software, there are discs with TOC (Table of Contents) signals recorded. When playing back LDs with TOC signals, the additional features given below can be enjoyed.

- Playback time display for one chapter (CAV, CLV)
- Remaining playback time (CAV, CLV)
- Time display for CAV disc
- AV calendar display
- Shuffle, delete shuffle

Troubleshooting Check the following before requesting service

Symptom	Point to check
No power	<ul style="list-style-type: none"> • Power cord properly plugged into AC outlet?
Playback ▷ button does not produce playback.	<ul style="list-style-type: none"> • Unit correctly plugged in? • Disc inserted? • Disc properly seated? • Recorded side facing upward?
▷ indicator lights, but there is no picture or sound.	<ul style="list-style-type: none"> • TV or monitor switched out? • TV properly connected to player? • Input selector of TV, TV tuner, or monitor set to required position? <p>TV without audio/video inputs</p> <ul style="list-style-type: none"> • Channel selectors on RFU adaptor and TV set to the same number? • TV channel properly adjusted? • TV/DISC selector on the remote commander set to DISC? (Is the DISC indicator lit?)
Poor picture or sound quality	<ul style="list-style-type: none"> • TV properly connected? • Any source of noise nearby? • Disc dirty or scratched? • Any condensation on player objective lens? <p>TV without audio/video inputs</p> <ul style="list-style-type: none"> • Channel selectors on RFU adaptor and TV set to the same number?
No sound	<ul style="list-style-type: none"> • TV properly connected to player? • Volume control on TV, monitor, TV tuner or amplifier high enough? • Playback at normal speed? (The videodisc player produces sound only during normal playback and speed play at normal speed in the forward direction.)
No TV programs	<ul style="list-style-type: none"> • TV properly connected RFU adaptor? • TV/DISC selector on the remote commander set to TV? (Is the DISC indication out?)
Remote Commander does not operate.	<ul style="list-style-type: none"> • Player switched on? • Batteries correctly inserted? • Batteries exhausted? • Any obstacles between the Remote Commander and the player sensor? • The remote commander is pointed at the player sensor?
Picture distorted during scan.	<ul style="list-style-type: none"> • Some distortion in the lower part of the picture is normal – even for CAV discs.
Unit does not operate and LD/CD indication in display window flashes.	<ul style="list-style-type: none"> • Turn power off and then on again.