

*LDD-1*  
*AC-3/RF Demodulator*

*User Guide*

**lexicon**

## Unpacking and Inspection

Save all packing materials in case you ever need to ship the unit. Thoroughly inspect the unit and packing materials for signs of damage. Report any shipment damage to the carrier at once; report equipment malfunction to your dealer.

## Precautions

Save these instructions for later use.

Follow all instructions and warnings marked on the unit.

Always use with the correct line voltage. Refer to the manufacturer's operating instructions for power requirements. Be advised that different operating voltages may require the use of a different line cord and/or attachment plug.

Do not install the unit in an unventilated rack, or directly above heat producing equipment such as power amplifiers. Observe the maximum ambient operating temperature listed in the product specification.

Slots and openings on the case are provided for ventilation; to ensure reliable operation and prevent it from overheating, these openings must not be blocked or covered. Never push objects of any kind through any of the ventilation slots. Never spill a liquid of any kind on the unit.

This product is equipped with a 3-wire grounding type plug. This is a safety feature and should not be defeated.

To prevent shock or fire hazard, do not expose the unit to rain or moisture, or operate it where it will be exposed to water.

Do not attempt to operate the unit if it has been dropped, damaged, exposed to liquids, or if it exhibits a distinct change in performance indicating the need for service.

This unit should only be opened by qualified service personnel. Removing covers will expose you to hazardous voltages.

This triangle, which appears on your component, alerts you to the presence of uninsulated, dangerous voltage inside the enclosure... voltage that may be sufficient to constitute a risk of shock.



This triangle, which appears on your component, alerts you to important operating and maintenance instructions in this accompanying literature.

## Acknowledgements

The CP and DC Series are manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,632,886, 3,746,792 and 3,959,590; Canadian numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

# LDD-1

## AC-3/RF Demodulator User Guide

---

### Introduction

Congratulations on your purchase of the Lexicon LDD-1. The LDD-1 is designed to interface between a laser disc player (with an AC-3/RF output), and any Dolby Digital decoder which accepts a standard AC-3 signal (like our DC-1). Because “AC-3 ready” laser disc players use a separate Radio Frequency (RF) modulated output to carry the Dolby Digital information, special considerations must be made. While this type of transmission works perfectly well, our engineers were rightfully reluctant to inject line-level RF directly into the meticulously designed DC-1. The solution is the LDD-1.

The LDD-1 keeps potential RF interference away from the sensitive preamp/processor stage while providing highly useful improvements in AC-3 signal quality. By placing the requisite demodulation circuitry in its own enclosure with dedicated power supplies and grounding, the potential to degrade digital-to-analog conversion and analog audio signals within the preamp/processor is eliminated.

The LDD-1 incorporates fully automated “intelligent” switching between S/PDIF and AC-3/RF inputs, meaning that any laser disc will be decoded to its maximum inherent quality. A low voltage “turn on trigger” input and output are included for interconnection to the Lexicon DC-1 and NT Series Amplifiers. The stringently designed outboard power supply ensures maximum signal purity.

We have designed this manual to provide a brief overview of the demodulator, as well as to provide the information necessary for safe installation and operation. We trust that the time you invest in reviewing these brief instructions will be rewarded by the best possible performance and longevity of your equipment.

# Front Panel

**NOTE: When power is off, the LDD-1 automatically outputs the COAXial digital input.**


## POWER

This LED will light whenever power to the unit is supplied and enabled.

## LOCK

This LED will light whenever the unit senses an AC-3/RF signal. When no such signal is present, the LED will remain off, and the INPUT SELECT LED will light.

2

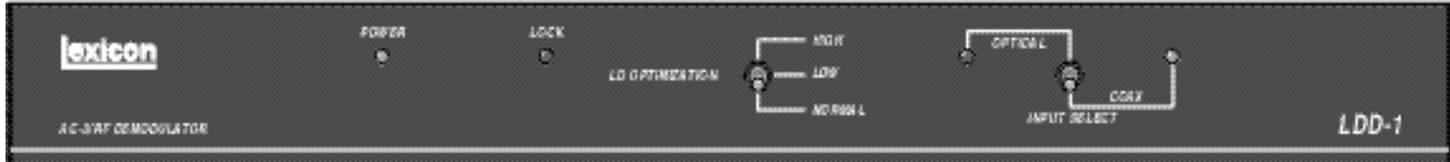

## LD OPTIMIZATION

3-position switch which minimizes signal errors, providing optimal timing for specific brands of laser disc players.

## INPUT SELECT

2-position switch for selection of the type of NON-AC-3/ RF digital output you are using from your laser disc player.

### Recommended Settings

<b>High</b>	Panasonic, Pioneer CLD-97 (MSB modified version), Runco
<b>Low</b>	Denon, Enlightened Audio Designs, Pioneer LD-S2 (MSB modified version)
<b>Normal</b>	Marantz, Mitsubishi, McIntosh, MSB, Theta, Pioneer (including Elite), Yamaha

# Rear Panel

**Connections between the LDD-1 and associated equipment should be made with all units UNPLUGGED!**

### POWER


Connect the AC adapter here. Use only the supplied Lexicon MSA AC adapter.

### RF IN

Connect this input to the laserdisc player's RF/AC-3 output with a 75Ω coaxial cable. Keep this cable as short as possible to minimize RF interference.

### OUTPUT

Connect this S/PDIF output to DC-1 digital input COAX1 with a 75Ω coaxial cable.

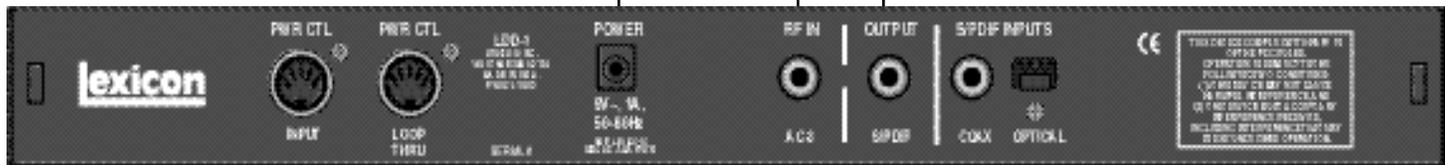


### INPUT

Connect a 5-pin DIN cord (not supplied) from this input to the DC-1 PWR CTL Output. This allows the LDD-1 to power on and off with the DC-1. If nothing is hooked up here, the unit will turn on whenever the AC adapter is supplied power. This set-up allows use of a switched outlet or continuous power. (As power consumption and heat generation are both minimal, this will not harm the LDD-1.)


### LOOP THRU

Allows the hook-up and power cycling of additional components such as the Lexicon NT Series of power amplifiers. Refer to the DIN configuration diagram below.

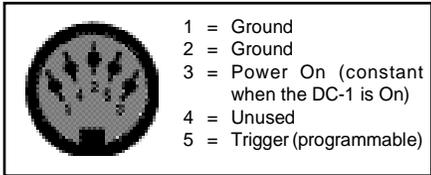

### S/PDIF INPUTS

Connect this input to the laserdisc player's NON-AC-3 digital output using the appropriate 75Ω coaxial cable. Because you can switch between these inputs from the front panel, you may use both; which gives you an extra digital input.

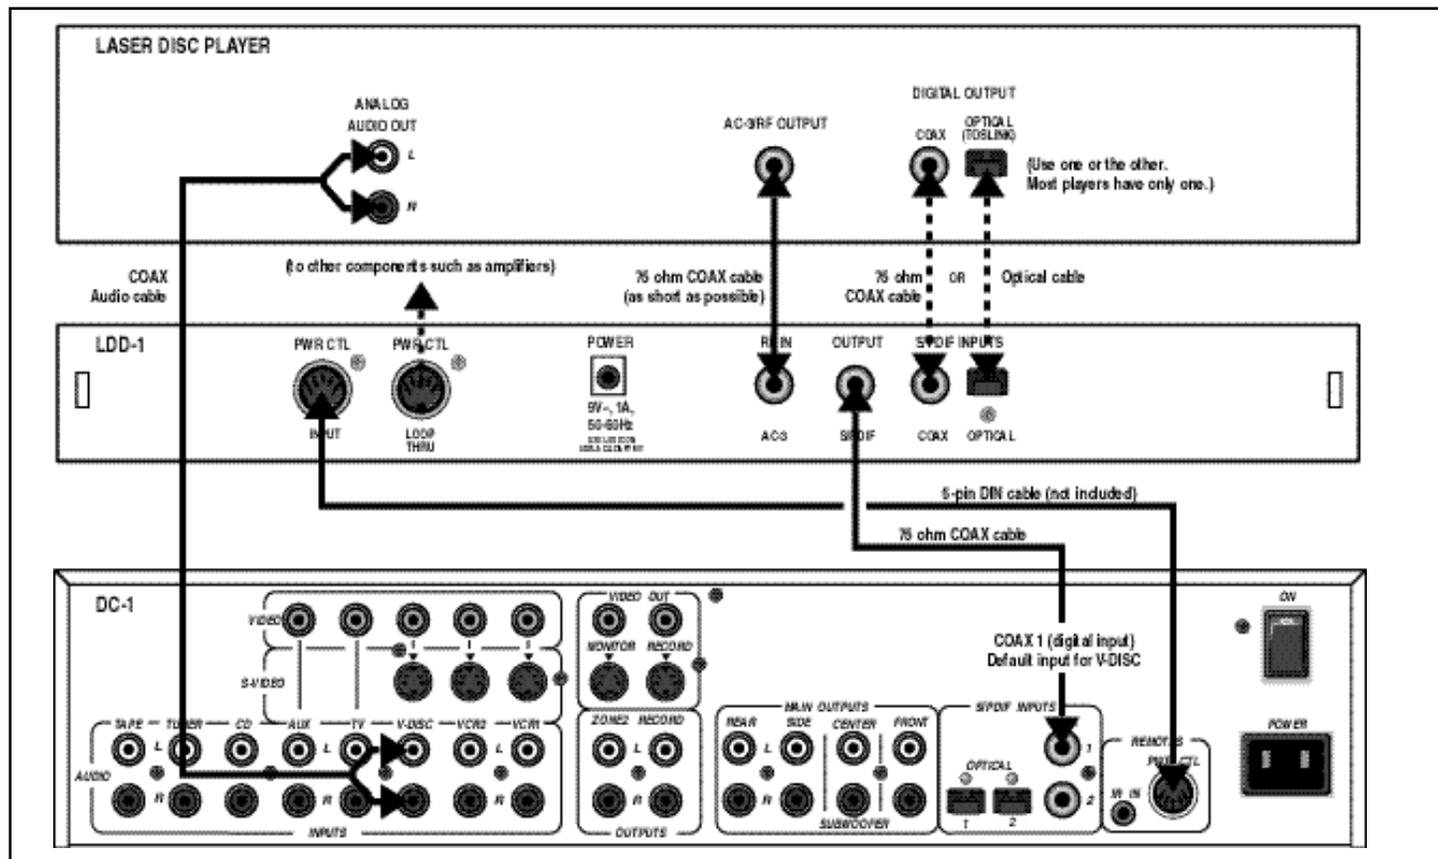

## Setup

The LDD-1 chassis is barely four inches deep to allow it to be positioned adjacent to an AC-3-capable player's RF output. This minimizes the required RF-signal cable length to reduce any RF interference. As the unit uses automated switching, and draws very little power, you can literally set it and forget it.

To set up the LDD-1:

- Connect a 75Ω coaxial cable between the LDD-1 rear panel RF (AC-3) input and the laser disc player's RF/AC-3 output. Keep this cable as short as possible to minimize RF interference.
- Connect a 75Ω coaxial (or optical) cable between the LDD-1 S/PDIF input and the laser disc player's digital output.
- Connect a 75Ω coaxial cable between the LDD-1 S/PDIF output and the DC-1 COAX 1 digital input.
- *Recommended:* Connect a 5-pin DIN cord (not supplied) between the LDD-1 PWR CTL input and the DC-1 PWR CTL output. This allows the LDD-1 to power on and off with the DC-1. If this connection is not made, the LDD-1 will turn on whenever its AC adapter is supplied power.
- *Optional:* Connect any additional components which allow remote turn on (such as Lexicon's NT Series of power amplifiers) to the LDD-1 rear panel PWR CTL (LOOP THRU) connector.
- Connect the AC adapter provided to the POWER jack.

Once the LDD-1 is properly connected, set the front panel INPUT SELECT switch for the appropriate type of NON-AC-3/RF digital output you are using on your laser disc player. (Most laser disc players have only one.) Set the LD OPTIMIZATION switch according to the chart provided on page 2. Once you have completed the connections and setting of the front panel switches, all functions are performed automatically. LEDs on the front panel are provided to identify the operational state.

The LDD-1 requires no maintenance. However, it is good electrical practice to clean all connectors once a year. Clean the exterior surfaces of the unit with a soft, lint-free cloth, dampened with warm water.

## Maintenance

## Specifications

<b>Inputs</b>	2: 1AC-3/RF via COAX; 2 Digital (1 COAX; 1 Optical)
<b>Outputs</b>	One (1) Digital via COAX
<b>Optimization</b>	3-position toggle switch, decoder pulse settings
<b>Controls and Indicators</b>	LEDs indicate operational status Toggle switches for: LD Optimization: High, Low, Normal; Input Select: Optical, COAX
<b>Connectors</b>	Inputs: 4: 2 RCA (COAX); 1 TOSLINK (Optical); 1 5-pin DIN (PWR CTL) Outputs: 2: 1 RCA (COAX); 1 5-pin DIN (PWR CTL Thru) Power connector: 2.5mm, 9VAC, 1A
<b>General</b>	Dimensions: 17.0"X x 1.75"H x 4"D Weight: 2.4 lbs net; 4.4 lbs shipping Power Requirements: 120VAC, 60Hz or 230VAC, 50Hz. Use Lexicon MSA AC Power Adapter.  Rack mount adapters are available through your Lexicon dealer.

*All specifications subject to change without notice.*

Lexicon Inc.  
3 Oak Park  
Bedford MA 01730-1441  
Telephone 617-280-0300  
Fax 617-280-0490

Lexicon Part # 070-11659 Rev 1

Printed in U.S.A.