

# MDP-A600K

## RMT-M24A

### SERVICE MANUAL

*E Model*  
*Tourist Model*



#### SPECIFICATIONS

##### System

###### Type

CD/CDV/LD player

###### Signal readout

Optical (Laser beam reflection)

###### Signal format system

EIA standard, NTSC colour system

###### Playing time

See "Optical discs" on page 27.

##### Digital audio specifications

###### Frequency response

4 Hz to 20 kHz ( $\pm 1.0$  dB)

###### Signal-to-noise ratio

More than 110 dB (EIAJ)\*

###### Dynamic range

More than 99 dB (EIAJ)

###### Wow and flutter

Below measurement limit  
(+0.001 % W.PEAK)(EIAJ)

##### Video specification

###### Horizontal video resolution

425 lines

##### Signal-to-noise ratio

More than 49 dB

\* Measured according to EIAJ (Electric Industries Association of Japan) standards.

##### Input and Output

###### LINE OUT 1,2

VIDEO output, Phono jack (1)  
Output signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced  
AUDIO output, Phono jacks (2)  
Stereo L, R  
Analog: 200 mV<sub>rms</sub>  
(1 kHz, 40 % modulation)  
Digital: 200 mV<sub>rms</sub>  
(1 kHz, -20 dB)

###### LINE IN

VIDEO input, Phono jack (1)  
Input signal: 1 V<sub>p-p</sub>, 75 ohms, unbalanced, sync negative  
AUDIO input, Phono jacks (2)  
Stereo L, R  
Input signal: 2 V<sub>rms</sub>  
Input impedance:  
more than 47 kilohms

###### MIC 1/2 jacks

Standard jacks  
1 mV  
(Impedance below 1 kilohm)

##### General

###### Power requirements

120/220/240 V AC, adjustable,  
50/60 Hz

###### Power consumption

40 W

###### Operating temperature

5°C to 35°C

###### Ambient humidity

5% to 90 %

###### Dimensions

Approx. 430 × 117 × 429 mm  
(w/h/d)  
including projecting parts and controls

###### Mass

Approx. 10.3 kg

##### Supplied accessories


Remote Commander RMT-M24A (1)  
R6 (size AA) batteries (2)  
Audio/Video Cable  
(phono plug 3←→phono plug 3)(1)  
AC plug adaptor (1)

Design and specifications are subject to change without notice.


CD/CDV/LD PLAYER  
**SONY**®

**Check that you have the following items:**


- Remote commander

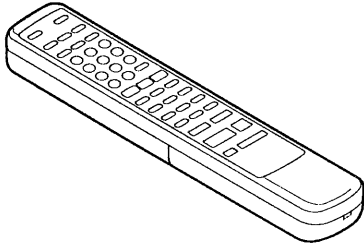


- Audio/Video cable



- Two R6 (size AA) batteries



- AC plug adaptor



## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

This CD CDV LD Player is classified as a CLASS 1 LASER product.


### CAUTION

The use of optical instruments with the product will increase eye hazard.



As the laser beam used in this player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

### Operating voltage

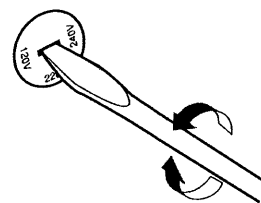- Before operating the player, make sure that the operating voltage of your unit is identical with that of your local power supply. If necessary, reset the selector at the rear of the player to the voltage corresponding to your local power supply (120, 220 or 240 volts AC). The voltage selector of this unit is set to 220 V AC originally. When using in Malaysia, reset the selector to 240 V AC.
- To reset the voltage selector, disconnect the mains lead and turn the selector with a blade screwdriver so that the arrow on the rear panel points to the appropriate voltage.



### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

## **SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

## TABLE OF CONTENTS

<b>1. GENERAL</b>	<b>7. ELECTRICAL ADJUSTMENTS</b>
<b>2. DISASSEMBLY</b> .....1-1	7-1. LIST OF SERVICING JIGS .....7-1
2-1. UPPER CASE, FRONT PANEL ASSEMBLY .....2-1	7-2. CAUTIONS ON ADJUSTMENT.....7-1
2-2. MB-712 BOARD .....2-2	7-3. DEBUGGING MODE .....7-1
2-3. CHUCKING ASSEMBLY .....2-2	1. How to enter the debugging mode .....7-1
2-4. OPTICAL PICK-UP BLOCK .....2-3	2. How to exit the debugging mode .....7-1
2-5. MD CHASSIS ASSEMBLY.....2-5	3. Switching the screen display .....7-2
2-6. CONTROL GEAR .....2-7	4. Explanation of the debugging display .....7-2
2-7. TRAY ASSEMBLY .....2-8	4-1. [FRAME/TIME] Version number of the microprocessor .....7-2
2-8. PUTTING OUT DISC WHEN A TROUBLE HAS OCCURRED WITH THE DISC LOADED .....2-9	4-2. [1] History of the function modes .....7-2
2-9. TURNTABLE ASSEMBLY HEIGHT ADJUSTMENT.....2-9	4-3. [2] History of the emergency occurrence .....7-3
2-10. INTERNAL VIEWS .....2-10	4-4. [3] Information for repair service, sent from the mechanism controller .....7-4
2-11. CIRCUIT BOARDS LOCATION .....2-11	4-5. [4] Trap-flag .....7-7
<b>3. DIAGRAMS</b>	4-6. [5] Key/remote control data .....7-7
3-1. OVERALL BLOCK DIAGRAM .....3-1	4-7. [7] Information on communication with the mechanism.....7-8
3-2. VIDEO BLOCK DIAGRAM .....3-4	7-4. SERVICE MODE .....7-9
3-3. SERVO BLOCK DIAGRAM .....3-7	1. How to enter the service mode .....7-9
3-4. SYSTEM CONTROL BLOCK DIAGRAM.....3-9	2. How to exit the service mode .....7-9
3-5. MODE CONTROL BLOCK DIAGRAM.....3-11	3. How to use the special key functions .....7-9
3-6. AUDIO BLOCK DIAGRAM .....3-13	3-1. PLAY key ..... Focusing search .....7-9
3-7. LINE IN BLOCK DIAGRAM .....3-15	3-2. SIDE A key ..... Sledding in reverse direction .....7-9
3-8. POWER SUPPLY BLOCK DIAGRAM .....3-17	3-3. SIDE B key ..... Sledding in normal direction .....7-10
<b>4. PRINTED WIRING BOARDS AND     SCHEMATIC DIAGRAMS</b>	3-4. PAUSE key ..... Tilt servo ON .....7-10
4-1. FRAME SCHEMATIC DIAGRAM .....4-1	7-5. OPERATING THE MDP-A600K WITH HIDDEN KEY FUNCTION .....7-10
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS .....4-5	1. How to use the “simultaneous main-unit-key-press functions” .....7-10
•MB-712 board .....4-6	2. How to use the “simultaneous main-and-remote- control-units-key-press functions” .....7-12
•MT-712, SW-719 boards.....4-15	7-6. 7-SEGMENT-DISPLAY-DURING-STANDBY FUNCTION .....7-13
•FP-734, PW-710, SW-728 boards .....4-27	1. How to use the “7-segment-display-during- standby”.....7-13
•BI-702, FG-704, MD-703, MT-703 boards .....4-31	7-7. ADJUSTMENT AFTER THE ATTACHMENT OF THE OPTICAL PICK-UP BLOCK .....7-13
•KP-707, MA-708, JA-707 Boards .....4-35	7-7-1. JIGS AND TOOLS .....7-13
•PS-716, TR-718, VS-707 boards.....4-40	7-7-2. CD ADJUSTMENT .....7-14
<b>5. REPAIR PARTS LIST</b>	7-8. POWER SUPPLY CHECK (PS-716 BOARD) .....7-16
5-1. EXPLODED VIEWS	7-9. SYSTEM CONTROL SYSTEM ADJUSTMENT.....7-16
5-1-1. UPPER CASE, FRONT PANEL ASSEMBLY ...5-1	7-9-1. Master Clock Adjustment (MB-712 Board) .....7-16
5-1-2. CHUCK FRAME ASSEMBLY .....5-2	7-10. LD SIDE A TILT BALANCE ADJUSTMENT .....7-17
5-1-3. SUB FRONT PANEL ASSEMBLY .....5-3	7-11. LD SIDE B TILT BALANCE .....7-18
5-1-4. CHASSIS ASSEMBLY .....5-4	7-12. VIDEO SYSTEM ADJUSTMENT .....7-19
5-1-5. MD CHASSIS ASSEMBLY .....5-5	7-12-1. Burst Gate Position Adjustment (MB-712 Board) .....7-19
5-2. ELECTRICAL PARTS LIST .....5-6	7-12-2. REF H Adjustment (MB-712 Board) .....7-19
<b>6. INTERFACE ·IC PIN FUNCTION</b>	7-12-3. Color DOC Adjustment (MB-712 Board) .....7-19
6-1. SYSTEM CONTROL MICROPROCESSOR PIN FUNCTION	7-12-4. Video Output Level Adjustment (MB-712 Board) .....7-20
(MB-712 BOARD IC501 MB89094PF-G-117) .....6-1	7-13. PARTS ARRANGEMENT DIAGRAM FOR ADJUSTMENT.....7-21
6-2. EXPANSION OUTPUT PORT IC PIN FUNCTION (MB-712 BOARD IC502 MB606F06).....6-2	
6-3. MODE CONTROL MICROPROCESSOR PIN FUNCTION	
(FP-735 BOARD IC301 MB89094PG-G-119).....6-3	


SECTION 1  
GENERAL

This section is extracted from instruction manual.


Step 3  
Connecting the player

Television hook-up

To play LDs or CDVs, hook up a television to the LD Player. Take out the supplied audio/video connecting cable (yellow, red and white plugs). Use this to connect the player to the television. Once you have hooked-up the television, set the input selector on the TV to "Video." Before connecting or disconnecting any of the cables, turn off all equipment.

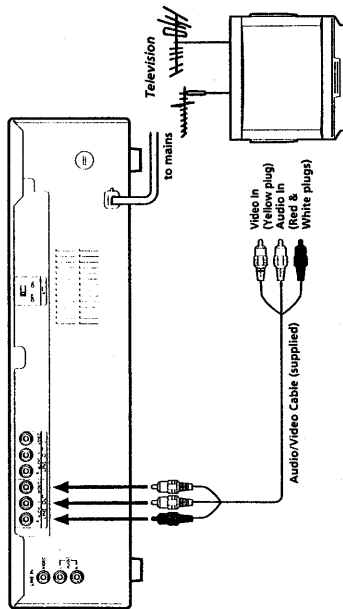


Television/VCR hook-up

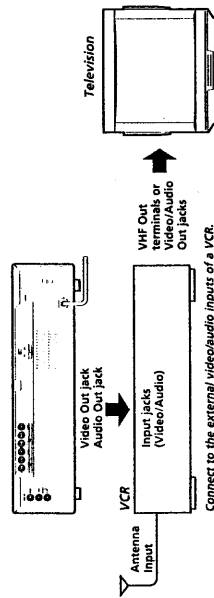

- Notes**
- Make sure all equipment is turned off before connecting or disconnecting any cables.
  - Connection methods may differ, when in doubt about a connection, consult the TV or VCR manufacturer's manual.
  - If the sound or picture is disturbed by noise, try moving the equipment farther apart.
  - Firmly insert plugs into the jacks. A loose connection may cause noise.
  - To prevent later interference with TV broadcast reception, turn off all equipment connected but not currently in use.
  - If the TV only has a monaural phono jack for audio input, use a VMC-910/915 Connecting Cable (not supplied).


Audio equipment hook-up

To achieve full stereo sound from your LD Player, hook up a stereo system following the diagram below. Use an RK-C310 (or RK-C315) audio connecting cable (not supplied) to connect the LD Player to your amplifier or receiver. Before connecting or disconnecting any of the below cables, turn off all equipment.

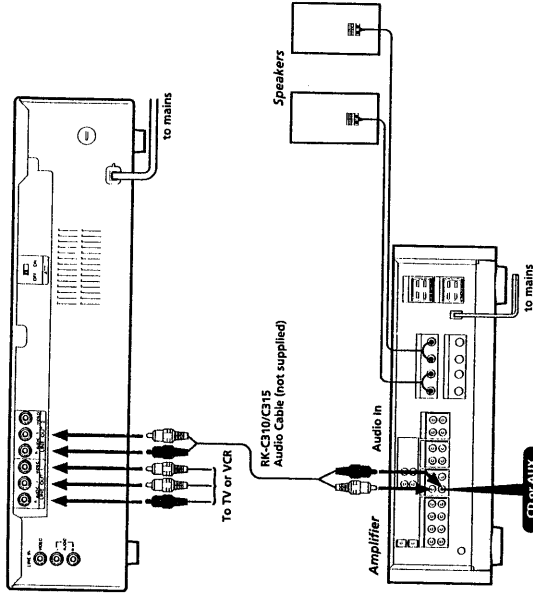

- Notes**
- Make sure all equipment is turned off before making any of the above connections.
  - Firmly insert plugs into the jacks. A loose connection may cause noise.
  - When listening to a radio broadcast, switch off the LD Player to get better reception.

## Basic Operations Playing a disc

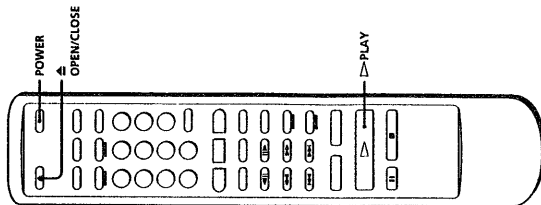

This section shows you how to play an LD, CD or CDV.

### Loading and playing a disc


#### 1 Press POWER to switch on the player.

You can also directly switch on the player by pressing **OPEN/CLOSE** or **PLAY** on the player.

#### 2 Press **OPEN/CLOSE** to open the disc tray.

The front cover of the player automatically slides down and the disc tray comes out.

#### 3 Place a disc on the disc tray.

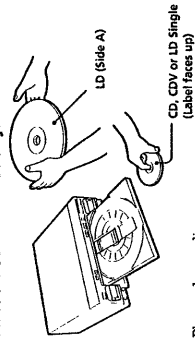

Place only one disc, carefully fitting it in the circle on the tray.

#### 4 Press **PLAY**.

The disc tray closes and the upper side of the disc starts playing. You can also start playing by pressing the disc tray to close it manually.

When playback of the upper side of an LD (side A) ends, the other side (side B) starts playing automatically.

#### Additional features

To	Press
Stop play	<b>STOP</b>
Pause play	<b>PAUSE</b>
Resume play after pause	<b>PAUSE</b> or <b>PLAY</b>
Scan forward or backward	<b>SKIP</b> or <b>SKIP</b>
Skip chapters or tracks	<b>CH</b> or <b>TR</b>
Remove the disc.	<b>OPEN/CLOSE</b>

**To start playing from the beginning of each LD side**  
Press **DISC SIDE A** to play the upper side of the LD from the beginning. Press **DISC SIDE B** to play the other side of the LD from the beginning.

#### To play only one side of an LD.

Press **1/SIDE/ALL** twice. "ONE SIDE" appears briefly. Press **▷ (Play)** or **DISC SIDE A/B**. The current side of the LD is played once.



#### To stop playing and turn off the player

Press **POWER**. You can resume playback from the point you stopped at by simply pressing **▷ (Play)** on the player (Not operable on the remote commander. See "Resuming LD playback" on page 18).

#### To stop playing and remove the disc

Press **OPEN/CLOSE**. Remove the disc and press **▶** again to close the empty tray.

#### To pause playing just before starting

Press **II PAUSE** instead of doing step 4 on page 8. The disc tray closes and the player waits at the start of the disc until you press **▷ PLAY** or **II PAUSE**. If you want to start from side B of an LD, press **II PAUSE**, then **DISC SIDE B**.

### Chapter/Track number display on the front panel

Indication	Current status of the player
12	Playing chapter/track 12
- -	Searching for the beginning of the disc side
00	Playing chapter "0" of an LD
0	Stopped
- 4	Modulated key level (appears briefly)
Not lit	No disc is loaded


#### Tips

- When playing a double-sided LD, the player determines that the upper side of the disc is side "A" and the other side is "B", regardless of the label "A" or "B" printed on the disc.
- When playback of LD side B ends, the player stops.
- When playing a CD or CDV, the player stops if you press **DISC SIDE B**. side A of an LD, CD or CDV or when the LD, CD or CDV is removed, the **SIDE A** indicator on the player lights up. When playing side B of an LD, the **SIDE B** indicator lights up. When no disc is loaded, both indicators go off.

#### Note

- When you play a VCR etc. using **LINE IN**, the current key level always appears on the front panel instead of a chapter/track number.

## Playing Karaoke



### Tips

- You can plug in two microphones.
- To control the player from the microphone, plug the control plug into the CONTROL jack (see "Using the optional karaoke microphone" on page 17).
- You can enjoy playing karaoke, using auxiliary equipment such as a VCR (see "Playing karaoke using auxiliary equipment" on page 17).


This section gives you short instructions for playing "karaoke" (singing along with a disc).

- Set the MIC 1/2 control on the player to MIN.



- Plug a microphone into the MIC 1 or 2 jack on the LD player.

When using the karaoke microphone F-KM1 (not supplied), plug the CONTROL plug into the CONTROL (MIC 1/2) jack.

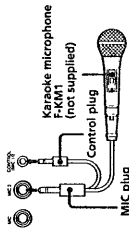

- Press POWER to switch on the player.

- Turn on the TV and stereo system.


TV:  
Set to "Video."

Stereo system:

Turn on the amplifier or receiver and select CD or ALX for audio output.

- Press  $\square$  OPEN/CLOSE. The disc tray comes out.



- Place a disc on the disc tray.

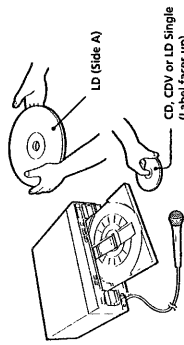

Place only one disc, carefully fitting it in the circle on the tray.

### Notes

- If you insert more than one disc, or if the disc is not seated properly, the disc may not start playing. It may become damaged to the disc or the player.
- When playing a double-sided LD, the player determines that the upper side of the disc is side "A" and the other side is "B," regardless of the label "A" or "B" printed on the disc.

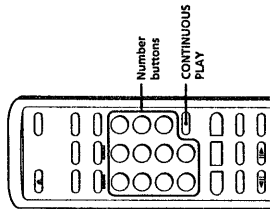

### Tips

- The MDP-Ad60K is automatically set to karaoke mode by connecting a microphone. In karaoke mode, the player pauses every 10 seconds (Auto Pause). To play selections on the disc continuously, press CONTINUOUS PLAY on the remote commander.
- "A. PAUSE OFF" appears on the screen. To reactivate Auto Pause, press CONTINUOUS PLAY again.
- "A. PAUSE" appears on the screen. If you reserve the next selections to be played (see "Specifying the next selections" on page 12), the player plays them continuously, then pauses.
- If howling occurs:
  - Move the microphone away from the speakers.
  - Lower the microphone volume or echo level.
  - Lower the volume.
- If the sound is distorted or the picture flickers when listening through your TV speakers, set the ATT control on the rear of the player to lower the output level.

- Press one of the number buttons to enter the selection you want to play. The disc tray automatically closes and the selection starts playing. To choose a selection on side B of the LD, press (DISC) SIDE B, then press the number button.

- Set the ON/OFF switch on the microphone to ON and turn the MIC 1/2 control to adjust the microphone volume. The same volume is applied to both MIC 1 and MIC 2.




- Turn the ECHO control to adjust the strength of echo. The same echo level is applied to both MIC 1 and MIC 2.



Now you can enjoy playing karaoke. After the selection is played, the player pauses and waits for the next selection.


## Displaying the on-screen indications

Press DISPLAY twice to turn on the on-screen indications. To turn off the indications, press DISPLAY once again.

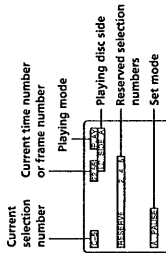


## Specifying the next selections (Reserve)

You can specify up to 9 selections to be played in any order, regardless of disc side, even while a selection is being played. The selections are played continuously in the order you specify so that you can enjoy non-stop karaoke playing. The MDP-A600K also allows you to specify selections on another disc in advance (Next Disc Reserve).

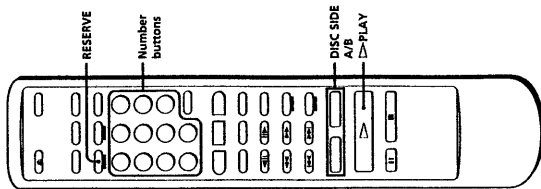


### Specifying selections on the current disc

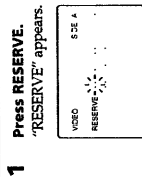


**1 Press RESERVE.**  
"RESERVE" appears.

**2 Select the disc side by pressing DISC SIDE A (or B), then press the number buttons to specify selections in the order you want them to play.**




If you enter a wrong number, press CLEAR. With each press, the selection you have entered last is deleted.

**3 To enter selections from the other disc side, press DISC SIDE B (or A), then press the number buttons to specify the selections in the order you want them to play.**



**4 Repeat steps 2 and 3 until finished.**

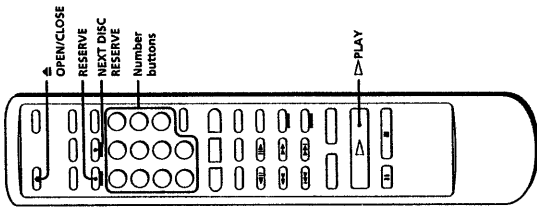


**5 Press RESERVE.**  
On-screen indications disappear.

When you have specified selections while playing a selection, the selections start playing without pausing after the current selection.

When you have specified selections while the player is stopped, press **▶** PLAY. The selections start playing.


### Specifying selections on another disc (Next Disc Reserve) LD disc only

**1 Press NEXT DISC RESERVE after steps 1 to 4 above.**  
"NEXT DISC RESERVE" appears on the screen, rotating. Now you can specify selections on another disc. Follow steps 2 (and 3) above to specify the selections.



**2 Press RESERVE (then ▶ PLAY).**

The selections on the current disc are played, then the player stops automatically, and prompts you to change the disc.



**3 Press ◀ OPEN/CLOSE to open the disc tray, then change the disc.**

**4 Press ▶ PLAY or push in the disc tray.**

The specified selections on the new disc start playing automatically.



## Specifying the next selections (continued)


### To enter a number greater than 10

Press **0** on the remote commander, then one of the number buttons. If you press **0** by mistake, press **0** repeatedly until "...-" flashes, then enter the correct number.

To	Press
Enter 14	<b>0</b> , then <b>4</b>
Enter 25	<b>0</b> , <b>0</b> , then <b>5</b>
Enter 30	<b>0</b> , <b>0</b> , <b>0</b> , then <b>0</b>

### To check the selections to be played

Press **DISPLAY** twice. The selection numbers to be played appear. When a selection has been played, its number disappears.



### To skip the current selection

Press **▶▶**.


The next reserved selection starts playing.

### To cancel Reserve

Press **CLEAR**.

"CLEAR" appears briefly and the player exits Reserve mode. All the reserved selections are cleared.

## Using karaoke functions

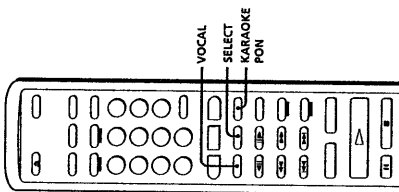

### Tip

- You can also use Vocal Select to select the sound when playing karaoke video tapes through the LINE IN inputs.

### Notes

- When playing multiplex CDs or multiplex digital LDs in Karaoke mode, the player automatically outputs the backup sound. To listen to the vocals, press **VOCAL SELECT**. Only **VOCAL 1** is available.
- Karaoke Pon is only available for discs recorded in stereo. With monaural discs, the backup level is also lowered.
- You cannot completely shut off the vocals by using Karaoke Pon. Even with stereo discs, if the voice deviates from the centre, its level may not be lowered well.
- When using Karaoke Pon, stereo effect is reduced.

You can enjoy karaoke using various functions.

### Singing along with the original vocals (Vocal Select)

You can correct the words or melody you miss by listening to the original vocals. This is available for **MULTI AUDIO** or multiplex discs, or multiplex tapes.

#### To listen to the original vocals on MULTI AUDIO LDs

On **MULTI AUDIO** karaoke LDs, vocals are recorded on an analog track. When playing **MULTI AUDIO** karaoke LDs, the player automatically outputs the backup sound recorded on digital tracks in stereo. To listen to the vocals, use **Vocal Select**. You can easily select the analog track on which the vocals are recorded.

- Press **VOCAL** to turn on the **SELECT** button indicator.
- Press **SELECT** repeatedly until the vocals are heard. With each press, the on-screen indication changes as follows:  
 → **VOCAL 1** → **VOCAL 2** → **VOCAL 3**

Indication	Output sound recorded on
VOCAL 1	Right analog track
VOCAL 2	Left analog track
VOCAL 3	Right analog track (with stereo sound on digital tracks)

### To select the sound when playing multiplex karaoke discs

When playing multiplex karaoke discs (CDs or analog LDs), select whether to output only the backup sound or the sound with the original vocals by using **Vocal Select**.

- Press **VOCAL** to turn on the **SELECT** button indicator.
- Press **SELECT** repeatedly to select the sound. With each press, the on-screen indication changes as follows:  
 → **VOCAL 1** → **VOCAL 2**


Indication	Output
VOCAL 1	Also with vocals
VOCAL 2	Only the backup sound

### Enjoying karaoke with non-karaoke discs (Karaoke Pon)

With a disc recorded in stereo, you can enjoy karaoke even if it is a non-karaoke disc.

Press **KARAOKE PON** on the remote commander to turn on the **KARAOKE PON** indicator on the player. The level of the singer's voice is lowered.

## Using karaoke functions (continued)

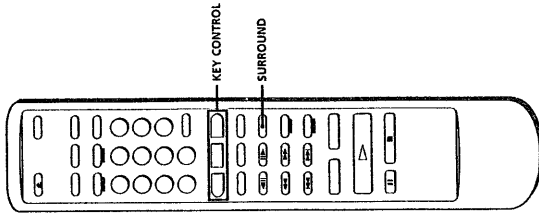

### Tip

- When the higher or lower key is set, the #UP or #DOWN indicator on the player lights up. The NATURAL indicator is always lit.
- The key returns to the original key when playback pauses automatically at the end of a chapter/track.
- If Auto Pause is cancelled, or when playing in single repeat mode, the key does not return.
- The key is adjustable from the karaoke microphone (see "Using the optional karaoke microphone" on page 17).
- You can also use Surround in non-karaoke mode.
- You cannot use Surround and Karaoke Pon at the same time.
- You cannot use Surround and Vocal Select at the same time.


## Changing the backup key (Key Control)

You can adjust the backup key to your singing key.

Press #UP or #DOWN repeatedly to find the backup key that suits your singing.

To	Press
Raise the key	#UP
Lower the key	#DOWN
Return to the original key	#NATURAL

The key is adjustable to one of 17 steps (6 steps higher, 8 steps lower than the original key and the original key). The set step appears on the screen briefly.



To return to the original key, press #NATURAL.

## Playing a disc with sound effect (Surround)

You can play a disc in one of three acoustic atmospheres: SIMULATED, KARAOKE BAR or MOVIE.

Press SURROUND repeatedly to select the mode of effect.

With each press, the mode of effect changes as follows:

→ SIMULATED → KARAOKE BAR → MOVIE → SURROUND OFF

The SURROUND MODE indicator on the player lights up.

To cancel the surround effect, press SURROUND repeatedly until "SURROUND OFF" appears. The SURROUND MODE indicator goes off.

### Effect mode

Effect mode	Atmosphere
SIMULATED	Good for playing software recorded in monoaural. Enhances the dynamic range for monoaural programmes like old movies and news programmes.
KARAOKE BAR	Creates the effect of singing in a bar. Gives your song a rich carrying tone.
MOVIE	Suitable for movie software. Emphasizes the bass and extends the dynamic mid range.

## Using the optional karaoke microphone


You can control the player from the karaoke microphone (F-KM1, not supplied) by connecting the control plug to the CONTROL jack on the LD player.

### Singing Repeatedly

You can go back to any point of a selection using the REPEAT button on the microphone. Hold down REPEAT and release it at the desired point. Playback continues again from the point at which the button is released.

### Using Key Control

You can change the backup key by pressing KEY CONTROL #/b on the microphone. This is the same operation as KEY CONTROL on the LD player or remote commander (see "Changing the backup key" on page 16).

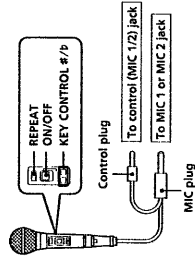


## Playing karaoke using auxiliary equipment

You can also enjoy karaoke by connecting auxiliary equipment such as a VCR to the LINE IN AUDIO/VIDEO inputs on the player. The karaoke functions (Vocal Select, Key Control, Surround Effects and Karaoke Pon) are available as they would be for discs.

- 1 Connect the VCR to the LINE IN AUDIO/VIDEO inputs on the rear.
- 2 Press LINE IN on the player. The LINE IN indicator on the player lights up.

Now you can enjoy playing karaoke with your video tape.

To return to playing a disc, press ▷ PLAY.

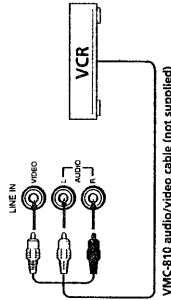

## Additional Operations Resuming LD playback (Auto Resume)


This function can only be used for LDs. Once you stop playing by pressing **STOP** or **POWER**, the player stores the point you stopped at so that you can continue viewing from the same point.

### 1 Press **STOP** (or **POWER**) to stop playback.

The **AUTO RESUME** indicator on the player lights up and the point you stopped at is stored. (When you press **POWER**, the indicator lights up briefly, then goes off with the power.)

### 2 Press **PLAY**.

The player searches for the scene where you stopped playing, then playback starts. If you want to pause playing just before starting, press **II PAUSE** instead of **PLAY**.

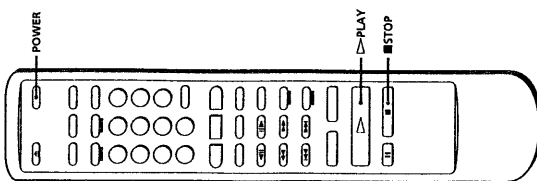


#### TIP

- The point where you stopped playing is cleared when:
  - you press **OPEN** / **CLOSE** (DISC) / **SIDE A/B** or **ACS/AMS**.
  - you carry out a Chapter Search.

#### NOTE

- If the power is off, press **PLAY** on the player. The player turns on automatically and resumes playback. When you use the remote commander, press **POWER**, then **PLAY**.


## Understanding on-screen indications

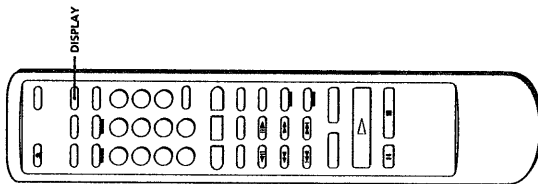

You can check the player operating status or disc information on the TV screen.

### Displaying on-screen indications

Press **DISPLAY** twice. To turn off the indications, press **DISPLAY** once again. When pressing **DISPLAY** once, only the first line appears.

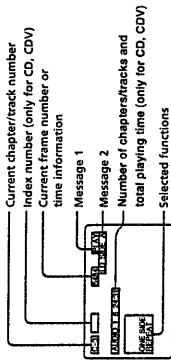

#### Message 1

Display	Current status of the player
OPEN	Disc tray open
CLOSE	Disc tray closed
PLAY	Playing a disc
STOP	Operation stopped
PAUSE	Operation momentarily stopped
<b>SEARCH</b>	Speed scanning
<b>SEARCH</b>	Searching


#### Message 2

Display	Currently playing
LD SIDE A	Side A of LD
LD SIDE B	Side B of LD
CD	CD
CDV	CDV
1/L	First soundtrack/left channel
2/R	Second soundtrack/right channel
<b>DIGITAL</b>	Digital sound
<b>ANALOG</b>	Analog sound

#### Notes

- When playing an LD which does not contain chapters, the chapter number does not appear.
- When playing a CLV LD which does not contain time data to the second, a two-digit number such as "21", meaning 21 minutes, appears.

## Searching for a particular point on the disc

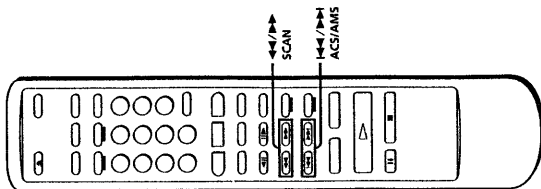

The LD player has various "search" functions. You can locate a particular point on a disc by scanning scenes or skipping chapters/tracks. You can also specify a chapter/track number directly.

### Scanning a disc quickly (Speed Scan)

Hold down **◀◀/▶▶** SCAN while playing the disc.

To	Hold down
Scan forward	<b>▶▶</b> SCAN
Scan backward	<b>◀◀</b> SCAN

To resume normal play/back, release **◀◀/▶▶** SCAN.

### Skipping chapters or tracks (Skip Search)

Press or hold down **◀◀/▶▶** ACS/AMS.

To go to the beginning of	Press
Next chapter/track	<b>▶▶</b> ACS/AMS once
Current chapter/track	<b>◀◀</b> ACS/AMS once
Previous chapter/track	<b>◀◀</b> ACS/AMS twice before the picture or sound resumes

Hold down **▶▶** or **◀◀** to skip chapters/tracks continuously.


**Note**

- When scanning a CLV LD or CDV, frames are skipped.

**Tips**

- ACS/AMS is the abbreviation for Automatic Chapter Sensor/Automatic Music Sensor.
- In addition to normal play mode, you can conduct Speed Scan and Skip Search while in Freeze Frame (CAV LD). Repeat or Pause mode. After the scan or search, playback continues in the same mode.


## Specifying a chapter or track directly (Chapter/Track Search)

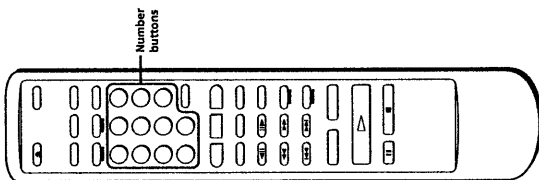

LDs are divided into sections called "chapters." CDs and CDVs are divided into sections called "tracks." Simply enter the desired chapter/track number to go to a chapter or track and start playing it immediately.

### Locating a particular chapter/track

Press one of the number buttons to enter the chapter/track number while playing the disc.




To enter a number greater than 10, press **0**, then one of the **1** - **9** buttons. If you press **0** by mistake, press CLEAR, then enter the correct number.

To	Press
Enter 14	<b>0</b> , then <b>4</b>
Enter 25	<b>0</b> , <b>4</b> , then <b>5</b>
Enter 30	<b>0</b> , <b>4</b> , <b>0</b> , then <b>0</b>

### To check the current chapter/track number

Press DISPLAY to display the chapter track number. The number appears in the upper left-hand corner of the screen. If the LD does not contain chapter numbers, the number is not displayed.



### To play only one chapter/track

Press 1/SIDE/ALL once. "SINGLE" appears briefly.


Enter the chapter/track number using the number buttons. The chapter or track is played once.



**Tips**

- In addition to normal play mode, you can conduct Chapter/Track Search while in Freeze Frame (CAV LD). Repeat or Pause mode. When the specified chapter or track is located after the search, playback continues in the same mode.
- When you carry out Chapter/Track search while a selection is paused in karaoke mode, the selected chapter or track starts playing immediately, without entering pause mode.


## Playing repeatedly (Repeat Play)

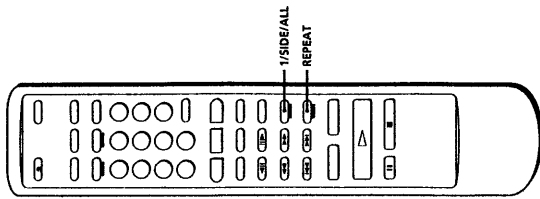

Repeat play allows you to play the disc over and over. You can replay both sides, a single side or one chapter of an LD, and a whole disc or a single track on a CD.


### Repeating the whole disc (All Disc Repeat)

Press REPEAT while playing the disc. "REPEAT" appears briefly. When playing an LD, the player repeats playing both disc sides, side A to B. When playing a CD or CDV, the player repeats playing all the tracks on the disc.




### Repeating the current side of the LD (One Side Repeat)

Press 1/SIDE/ALL twice, then REPEAT while playing the disc. "ONE SIDE" and "REPEAT" appear briefly. The player repeats playing the current disc side.



### Repeating the current chapter/track (Single Repeat)

Press 1/SIDE/ALL once, then REPEAT while playing the disc. "SINGLE" and "REPEAT" appear briefly. The player repeats playing the current chapter/track.




### To check the replaying status

Press DISPLAY twice.

### To cancel Repeat Play

Press CLEAR.  
All Disc, One Side or Single Repeat is cancelled.

## Viewing frame-by-frame action

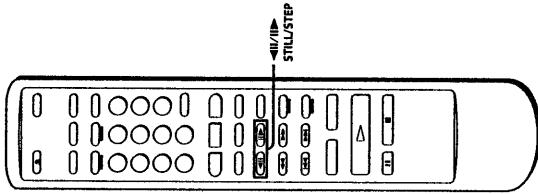

This function can only be used for CAV LDs. On any scene, you can freeze an action into a still picture, or advance or reverse the action frame-by-frame.

### Freezing the action (Freeze Frame)

Press II PAUSE or one of the ◀II/II▶ STILL/STEP buttons while playing a CAV LD.

The sound mutes and the picture freezes.

### To resume normal playback

Press ▷ PLAY.

### Playing frame-by-frame (Step Play)

**1 Press one of the ◀II/II▶ STILL/STEP buttons while playing a CAV LD.**  
The sound mutes and the picture freezes.

**2 Press ◀II or II▶ repeatedly to advance or reverse the action frame-by-frame.**  
Hold down ◀II or II▶ to view continuous frame-by-frame action.


### To resume normal playback

Press ▷ PLAY.

### Tip

- When you play a CLV LD, Freeze Frame and Step Play are not available. When you press II PAUSE, the screen displays "PAUSE". When you press ◀II or II▶ STILL/STEP, CLV SIDE "A" appears briefly.

## Using the sound quality functions

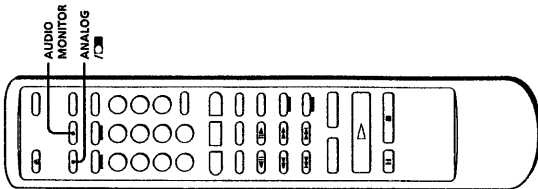

- Note**
- The output level may differ between digital and analog sound.

## Playing a stereo disc or Second Audio Programme (SAP) disc

When playing SAP discs such as bilingual discs, you can alternate the sound output using AUDIO MONITOR.

### Alternating the sound output

Press AUDIO MONITOR while playing the disc. Each time you press AUDIO MONITOR, the on-screen indication changes as follows:

1/L → 2/L → 2/R → 1/L 2/R

Indication	From stereo disc	From SAP disc
1/L	Left channel	Sound track 1 (Left channel)
2/R	Right channel	Sound track 2 (Right channel)
1/L 2/R	Stereo (Both channels)	Sound track 1 (Left channel) Sound track 2 (Right channel)

When you select 1/L (or 2/R), the sound of the left (or right) channel is output from both speakers.

## Listening to analog sound on an LD

If your LD contains digital soundtracks, the player automatically outputs digital sound. To listen to sound recorded on analog soundtracks, use ANALOG/CD.

Press ANALOG/CD while playing the disc.

"J ANALOG" appears briefly and the analog sound is output.

### To return to digital sound

Press ANALOG/CD repeatedly until "J DIGITAL" appears.

## Discs with a CD (CX) logo


LDs bearing the CD logo are recorded with the CX noise reduction system, which gives lower noise level and higher dynamic range on analog sound. The player detects most CD discs and activates the CX noise reduction system automatically when outputting analog sound. If your CD LD does not contain a code to activate the CX noise reduction system, you can activate the CX noise reduction system manually. Press ANALOG/CD repeatedly until "CX ON" appears. The CX noise reduction system is activated.

## Optical discs (continued)

### Optical Disc Maintenance

#### Holding CDs or CDVs

Hold CDs and CDVs by putting your index finger through the centre hole and grasping the edge of the disc with the thumb and other fingers as pictured in the illustration.



#### Holding LDs

Hold LDs by grasping the outside edge in both hands as illustrated.



#### Light Exposure

Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave the disc in a car parked in direct sunlight where there can be a considerable rise in temperature.

#### Cracked or Damaged Discs

Do not play cracked or damaged discs, or try to play discs that have been repaired with adhesive glues.

#### Keeping the Disc Surface Clean

Clean the surface of the disc before playing, using a soft, dry, cleaning cloth. Wipe the disc from the centre out. Do not use solvents such as benzine, paint thinner, commercially available cleaners, or anti-static spray intended for LP record discs.



To prevent marring after playing, remove the disc and put it back into its jacket.


Putting your fingers on, or adhering anything to the surface of the disc such as sticky note pad paper or adhesive tape will deteriorate the quality of the playing surface, and thus the output quality.



## Index to parts and controls

See the pages indicated in ( ) for details.


### Front

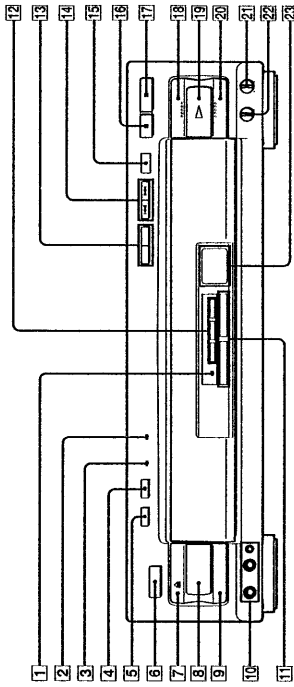

- 1 KARAOKE PON indicator (15)
- 2 LINE IN indicator (17)
- 3 SURROUND indicator (16)
- 4 SELECT button and indicator (15)
- 5 VOCAL button (8)
- 6 POWER switch (8)
- 7 OPEN/CLOSE button (8)
- 8 Remote sensor (25)
- 9 LINE IN button (17)
- 10 MIC 1/2 and CONTROL (MIC 1/2) jacks (10)
- 11 SIDE A/B indicators (9)
- 12 KEY CONTROL indicators (16)
- 13 KEY CONTROL DOWN/# UP buttons (16)
- 14 LEFT/RIGHT/STOP/SCAN buttons (20)
- 15 ALTO RESUME indicator (18)
- 16 PAUSE button (8)
- 17 STOP button (8)
- 18 SIDE A button (9)
- 19 PLAY button (8)
- 20 SIDE B button (9)
- 21 MIC 1/2 control (10)
- 22 ECHO control (11)
- 23 Chapter/track number indicator (9)

## Index to parts and controls (continued)

### Remote commander

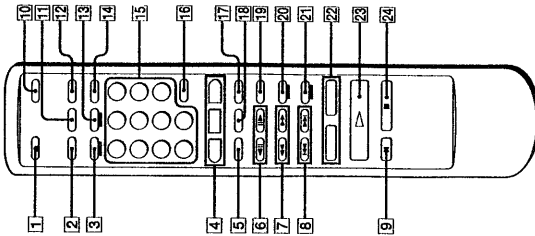

- 1 OPEN/CLOSE button (8)
- 2 ANALOG/VIDEO button (24)
- 3 RESERVE button (12)
- 4 KEY CONTROL buttons (16)
  - # UP
  - # NATURAL
  - # DOWN
- 5 VOCAL button (15)
- 6 STILL/STEP buttons (23)
- 7 LEFT/RIGHT/STOP/SCAN buttons (20)
- 8 LEFT/RIGHT/STOP/SCAN buttons (20)
- 9 PAUSE button (8)
- 10 POWER switch (8)
- 11 AUDIO MONITOR button (24)
- 12 DISPLAY button (19)
- 13 NEXT DISC RESERVE button (13)
- 14 CLEAR button (12) (21)
- 15 Number buttons (21)
- 16 KARAOKE PON button (15)
- 17 SELECT button (15)
- 18 SURROUND button (16)
- 19 1/SIDE/ALL button (22)
- 20 REPEAT button (22)
- 21 DISC SIDE A/B buttons (9)
- 22 PLAY button (8)
- 23 STOP button (8)


A function activated by pressing a button with a yellow mark can be cancelled by pressing the CLEAR button.

## SECTION 2 DISASSEMBLY


NOTE: Follow the disassembly procedure in the numerical order given.

### 2-1. UPPER CASE, FRONT PANEL ASSEMBLY

#### • DISASSEMBLE

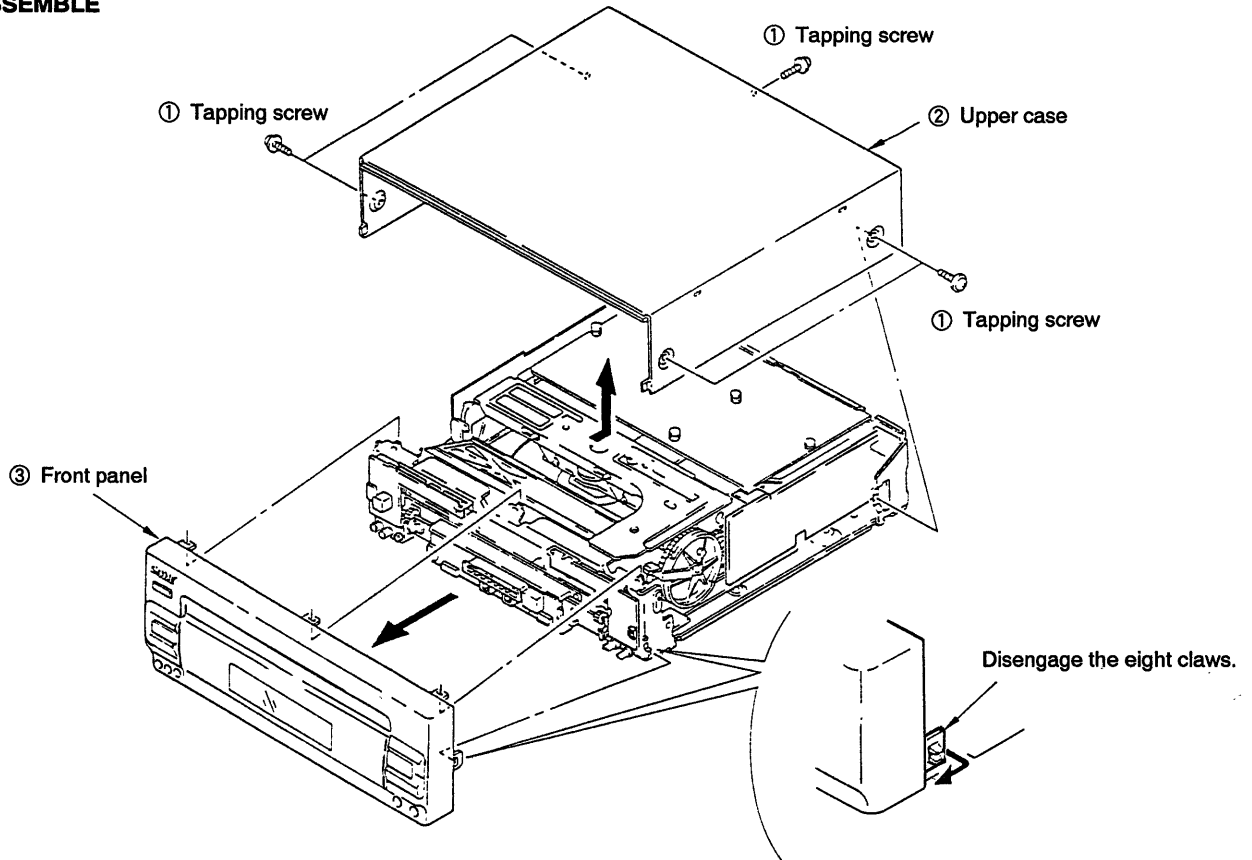


#### • FRONT PANEL ASSEMBLY ASSEMBLE

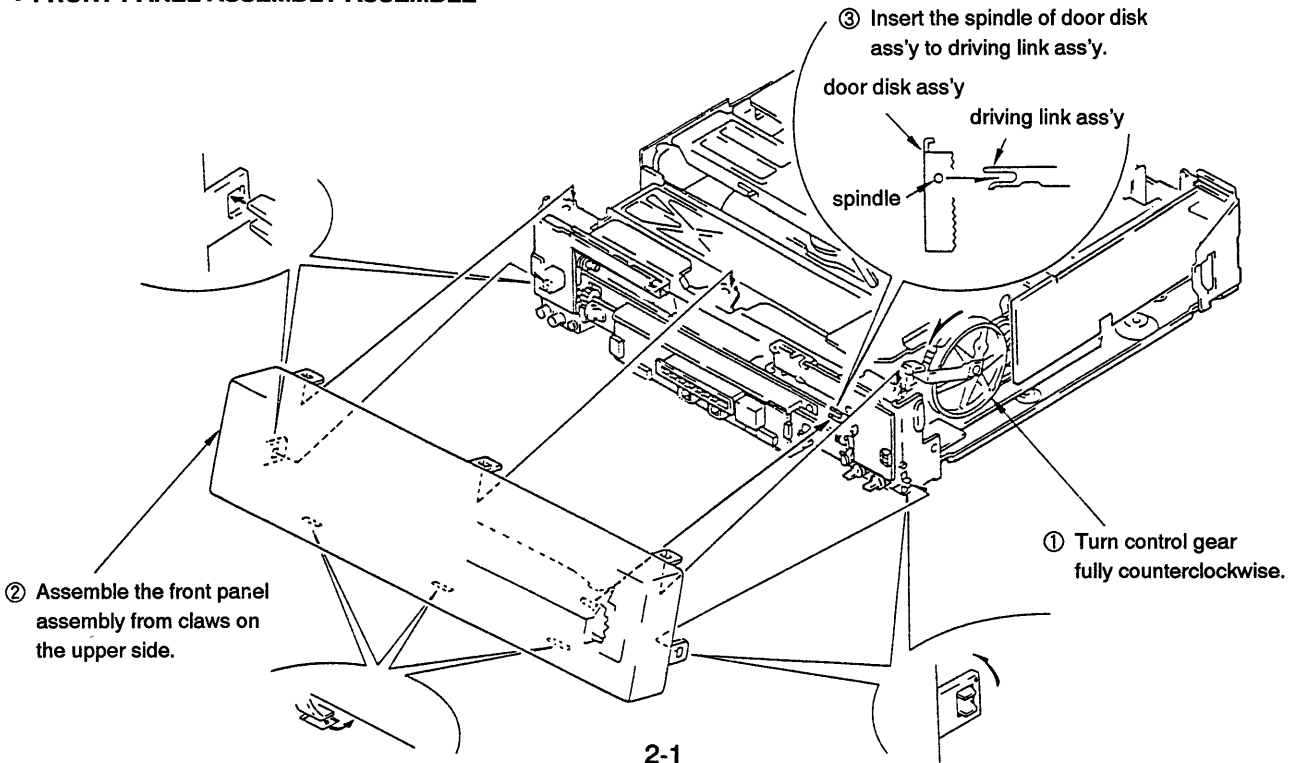




## 2-2. MB-712 BOARD

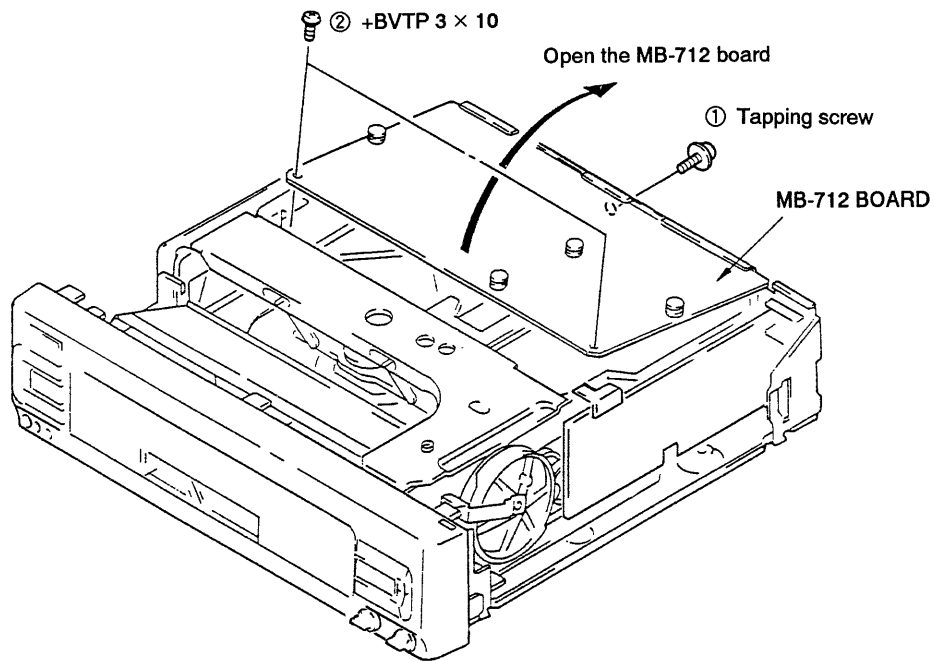


## 2-3. CHUCKING ASSEMBLY

### • DISASSEMBLE

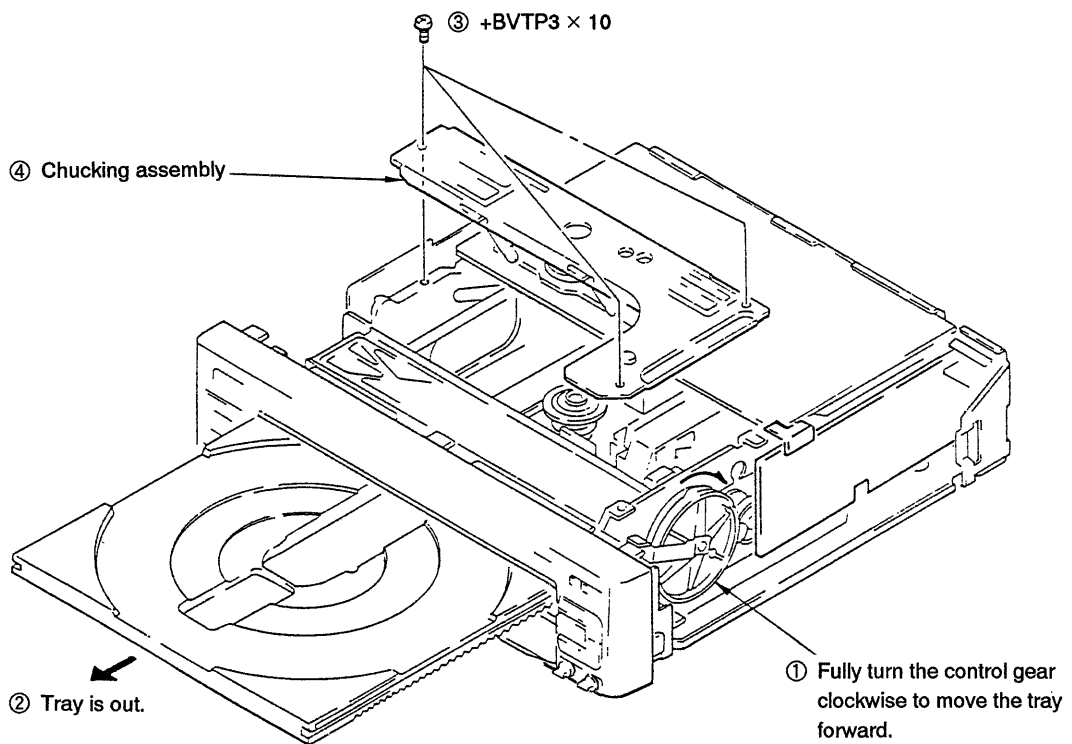


• ASSEMBLE

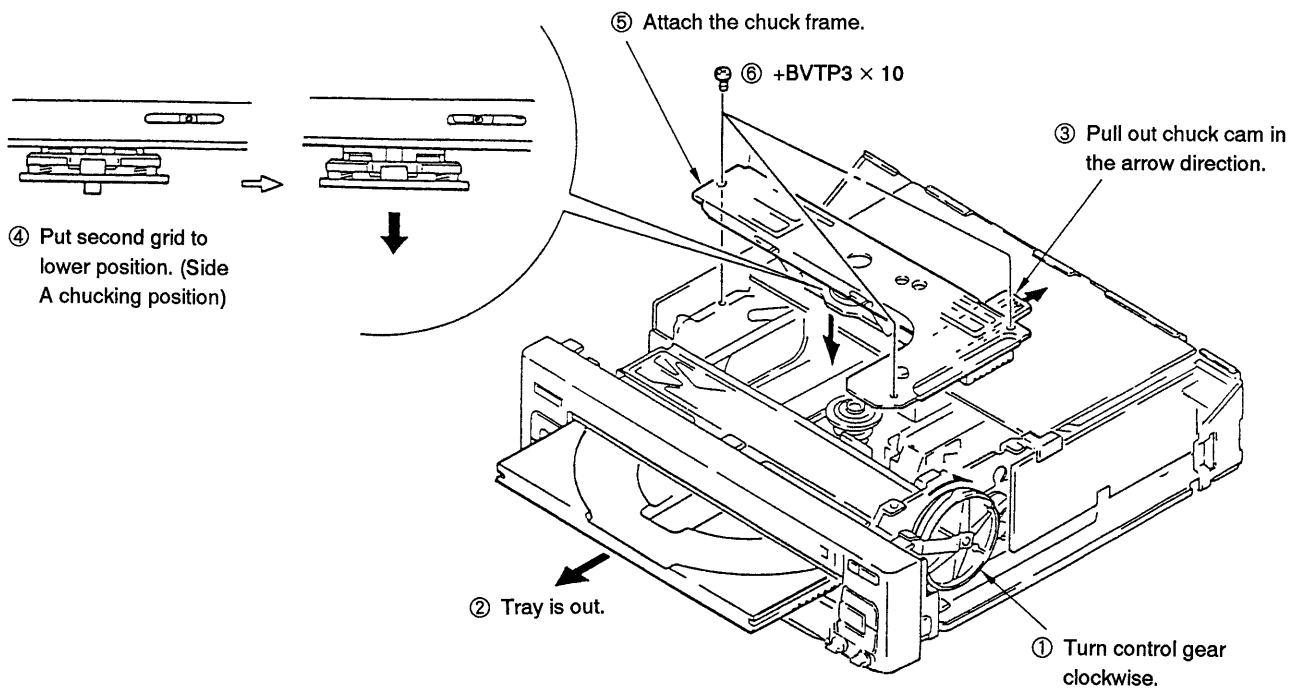


2-4. OPTICAL PICK-UP BLOCK

• DISASSEMBLE I  
(OPTICAL PICK-UP BLOCK MOTOR OPERATES)

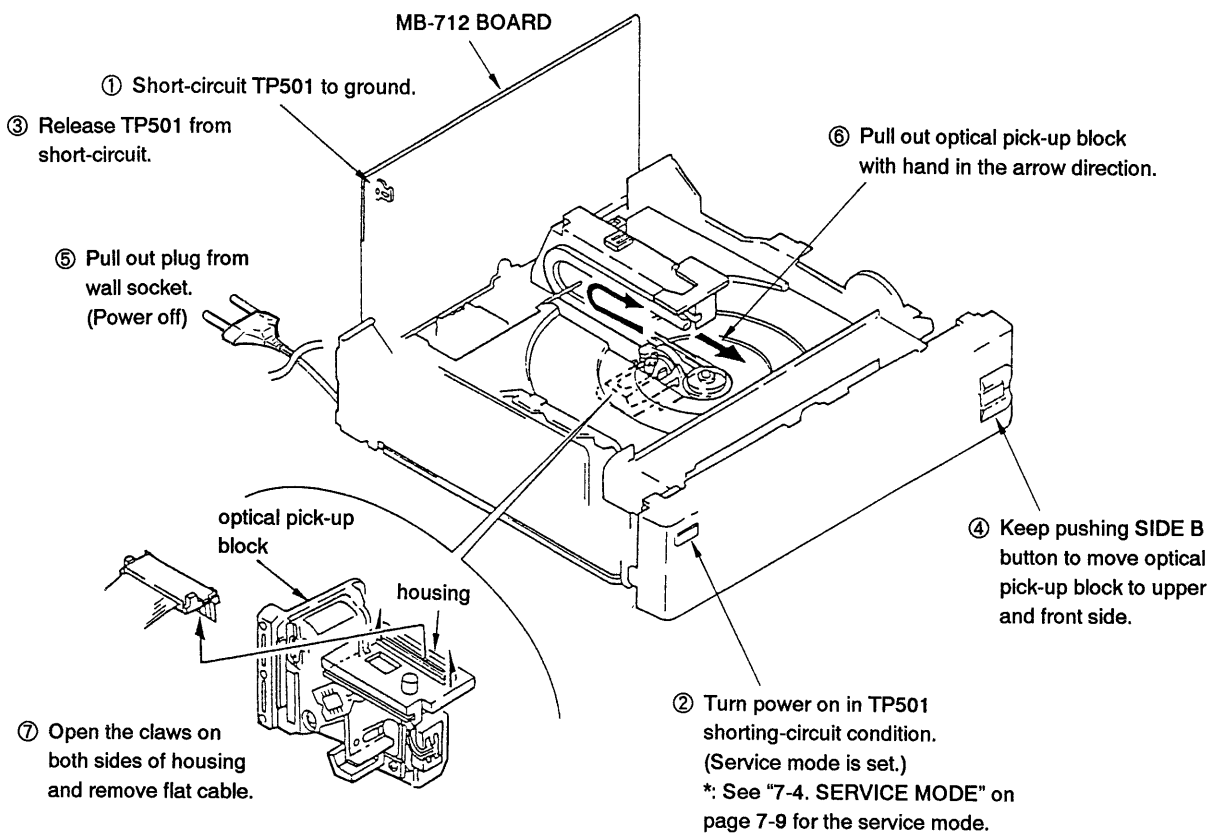


● **DISASSEMBLE II**  
**(OPTICAL PICK-UP BLOCK MOTOR DOESN'T OPERATE)**

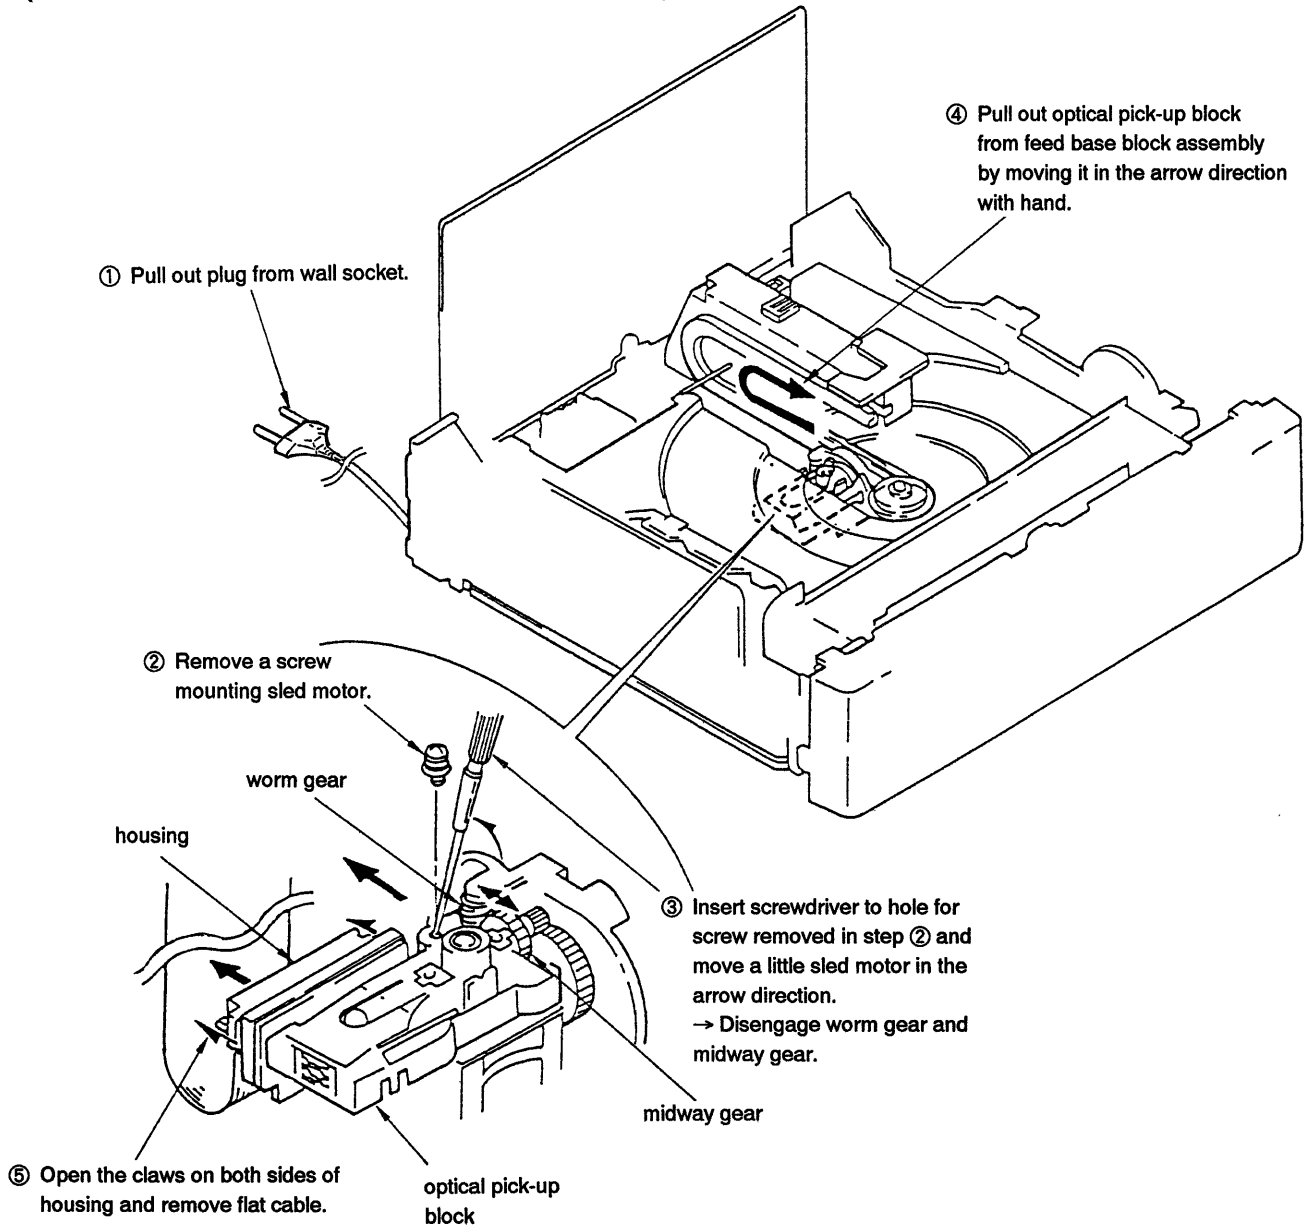


● ASSEMBLE

- ③ Confirm the flat cable goes through the flexible cable retainer spring and over the pin.


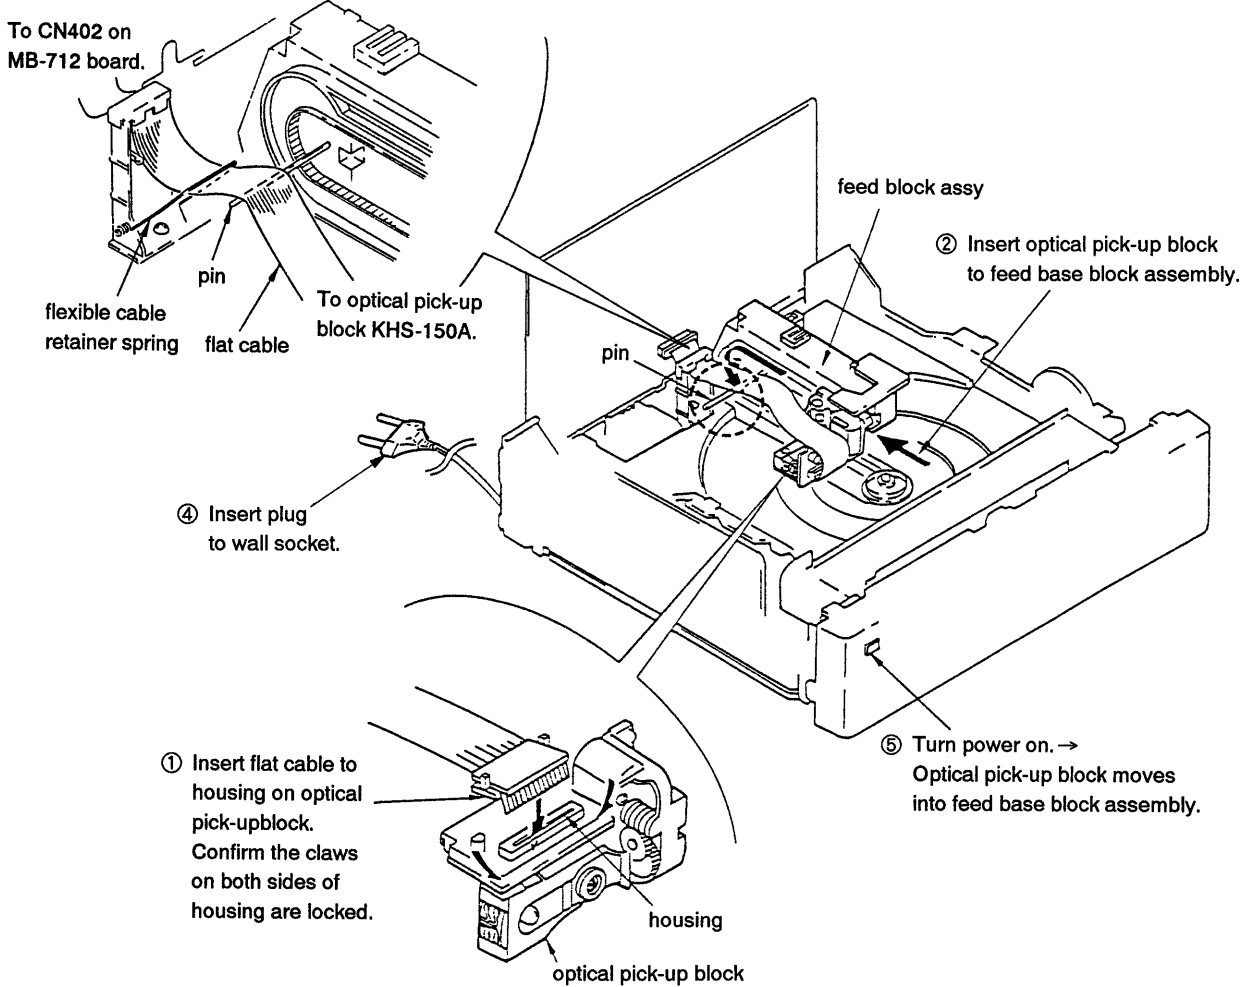


2-5. MD CHASSIS ASSEMBLY

● DISASSEMBLE

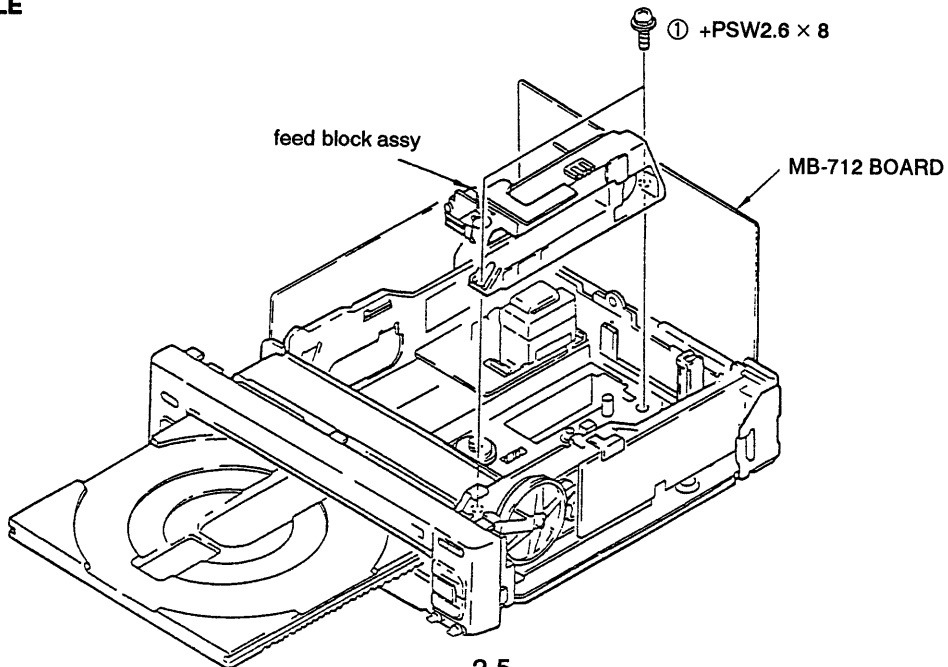


● ASSEMBLE

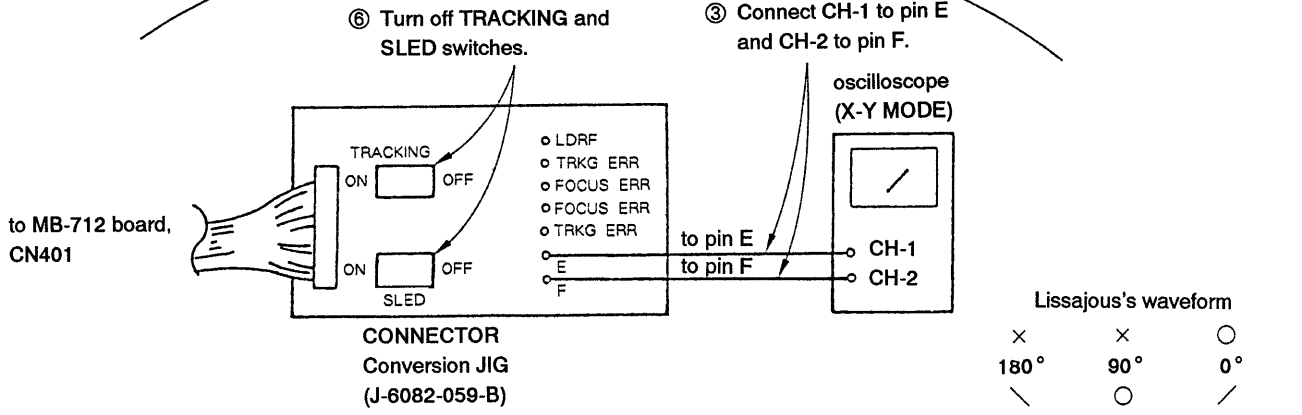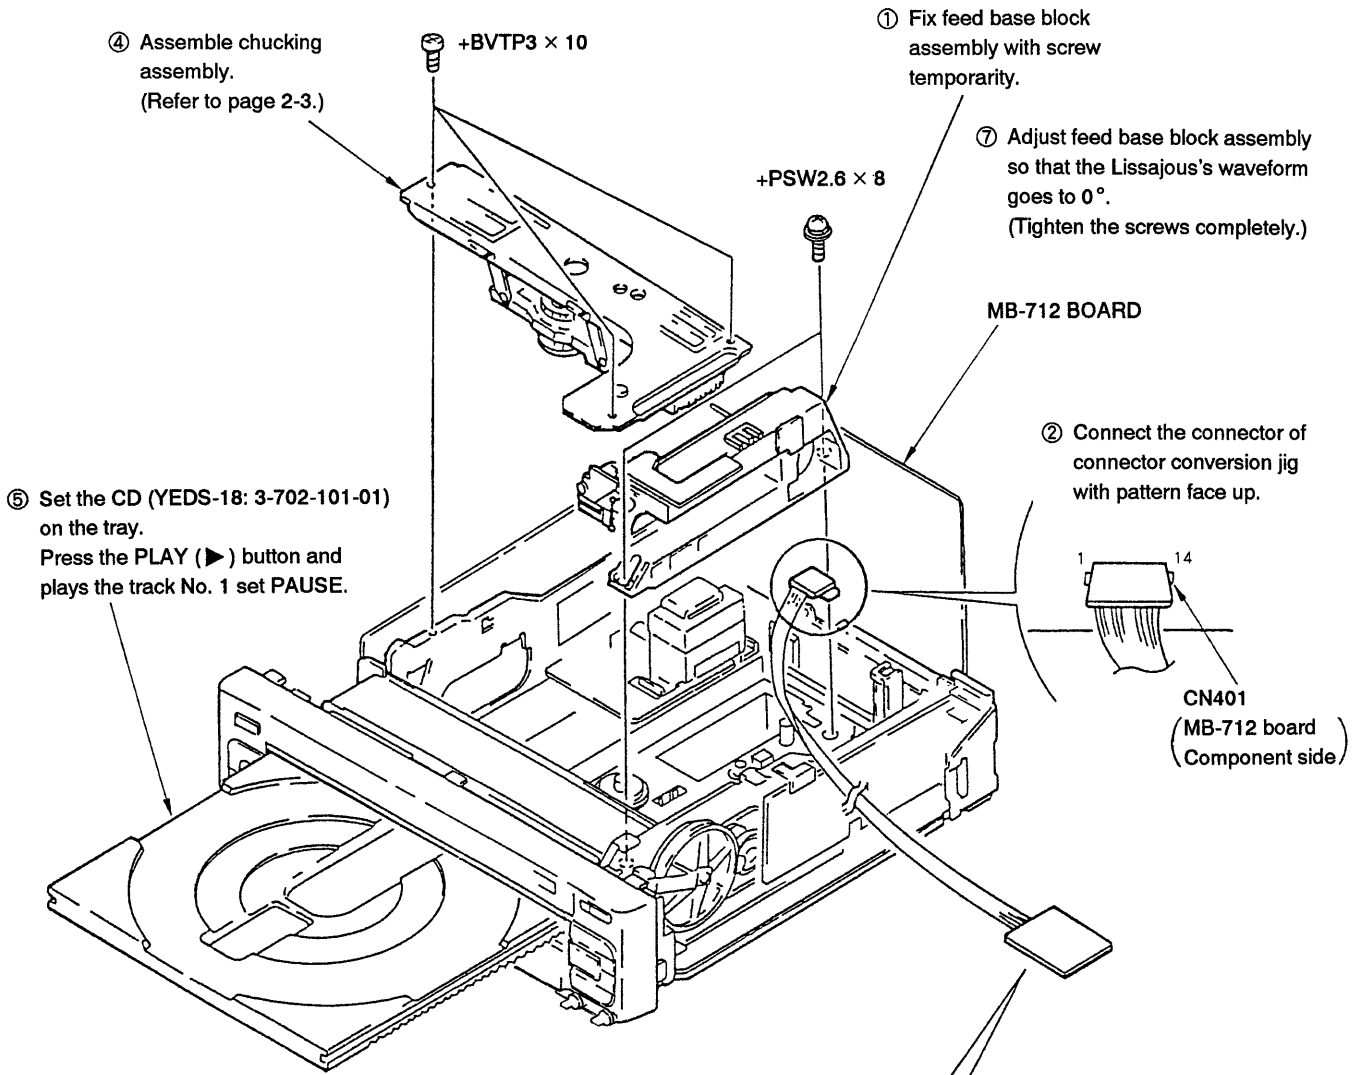


## 2-6. CONTROL GEAR

### • DISASSEMBLE

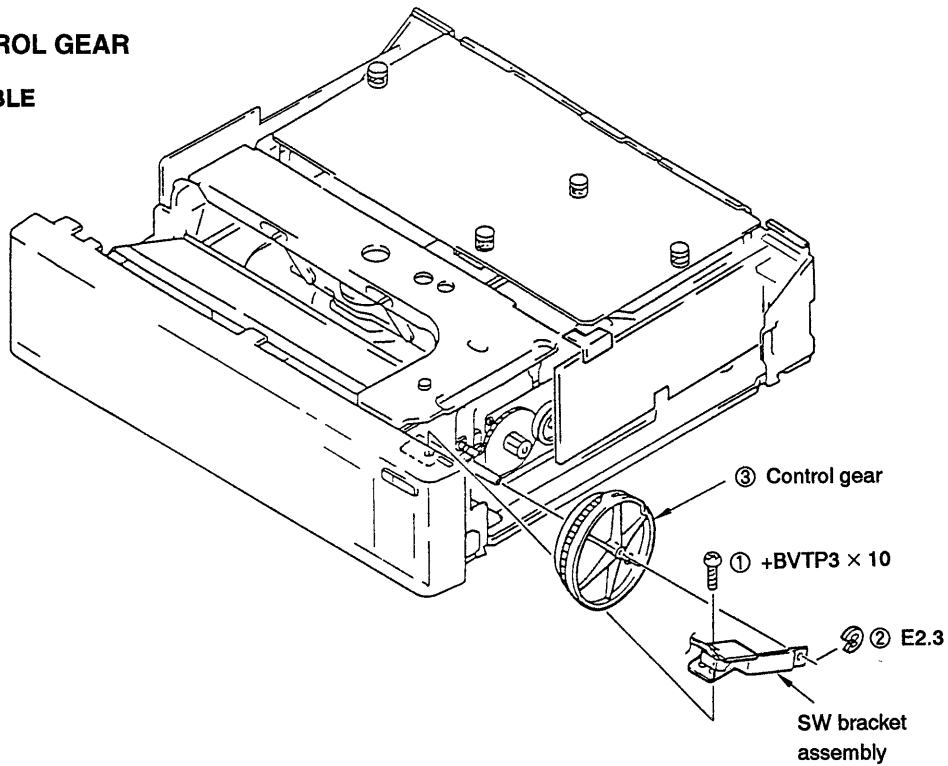

### • ASSEMBLE


① Make tray holding in the set.

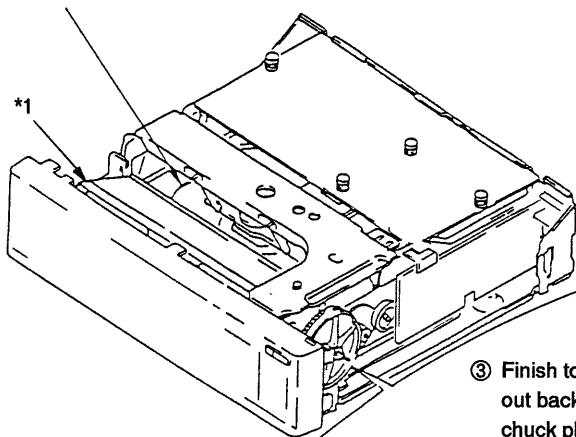

④ Attach the control gear so that its left end tooth on the inner side engages the left end groove on the chuck plate gear. Insert the loading spindle to the loading groove of the control gear while slightly moving the part marked with \*1 up and down.

③ Finish to put chuck cam out backward while pushing chuck plate up.


② Put chuck cam out backward by pushing chuck plate up.

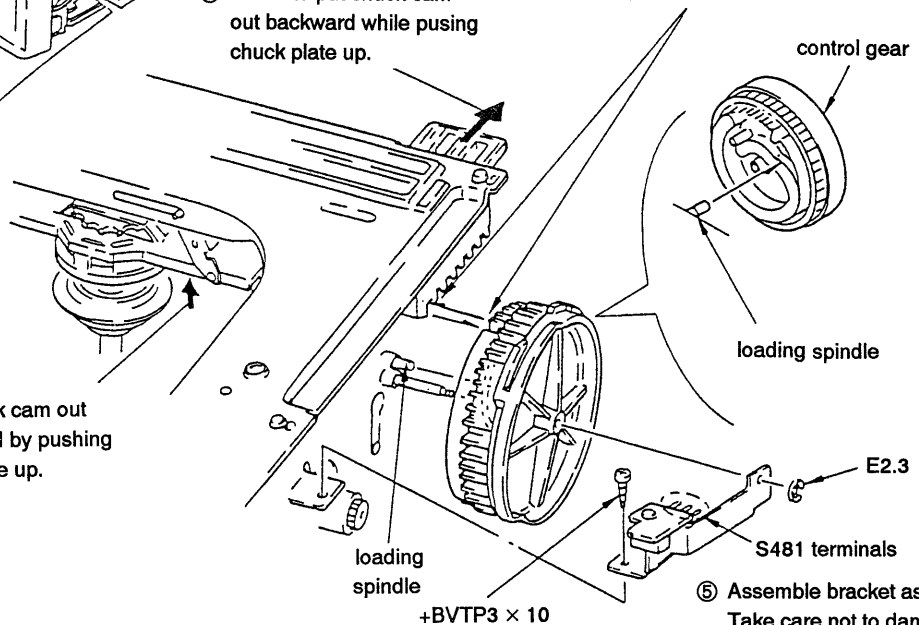


⑤ Assemble bracket assembly. Take care not to damage the terminals of S481.

## 2-7. TRAY ASSEMBLY


### • DISASSEMBLE

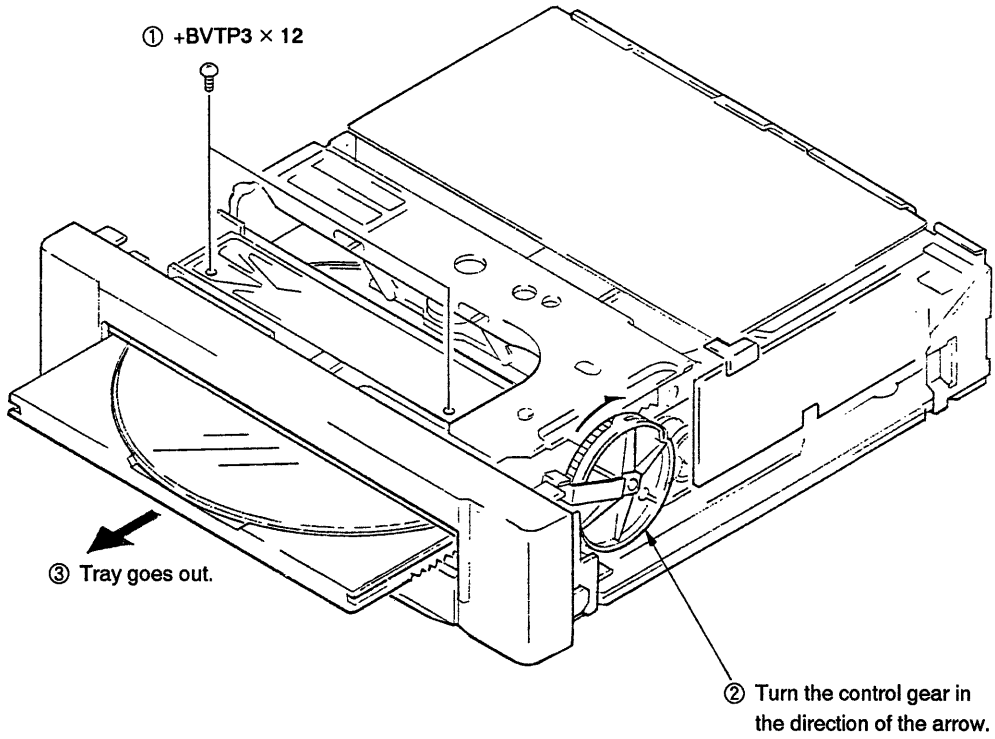

### • ASSEMBLE

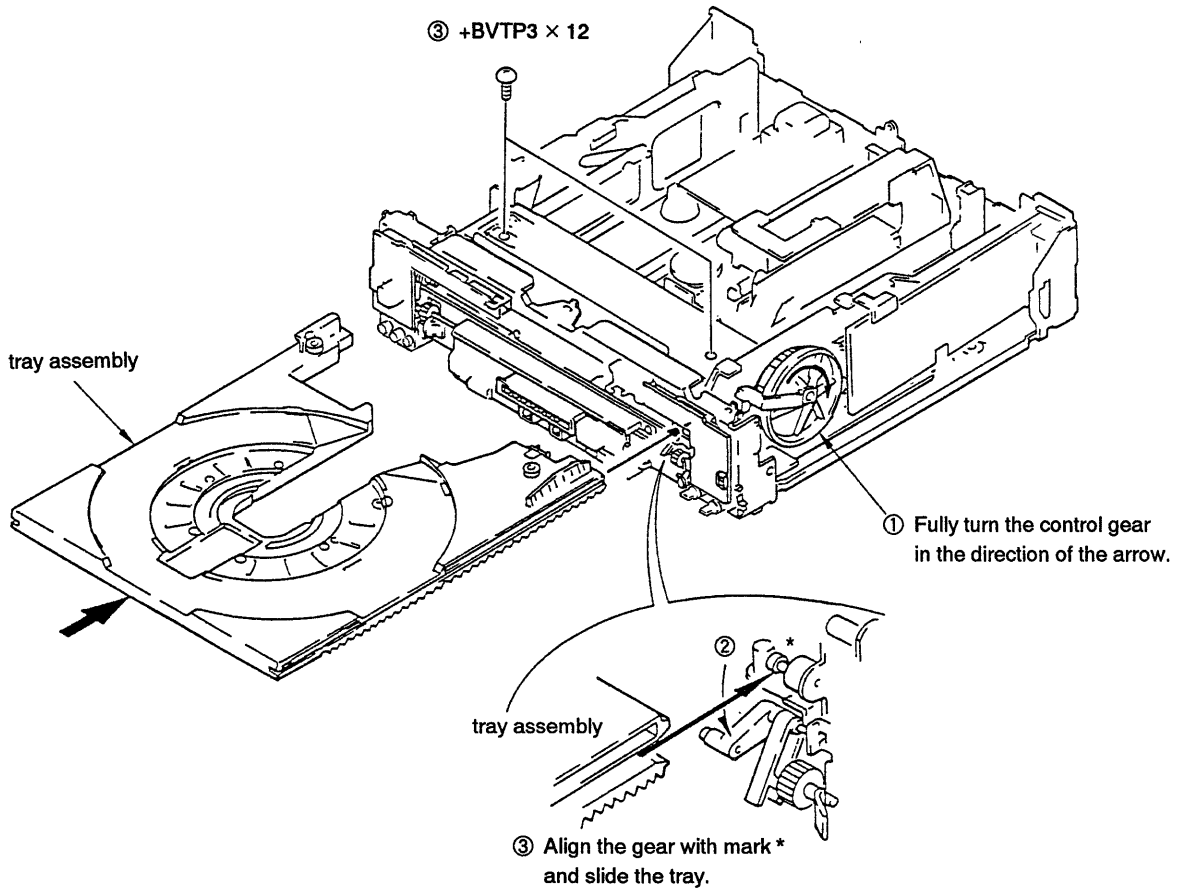


## 2-8. PUTTING OUT DISC WHEN A TROUBLE HAS OCCURRED WITH THE DISC LOADED

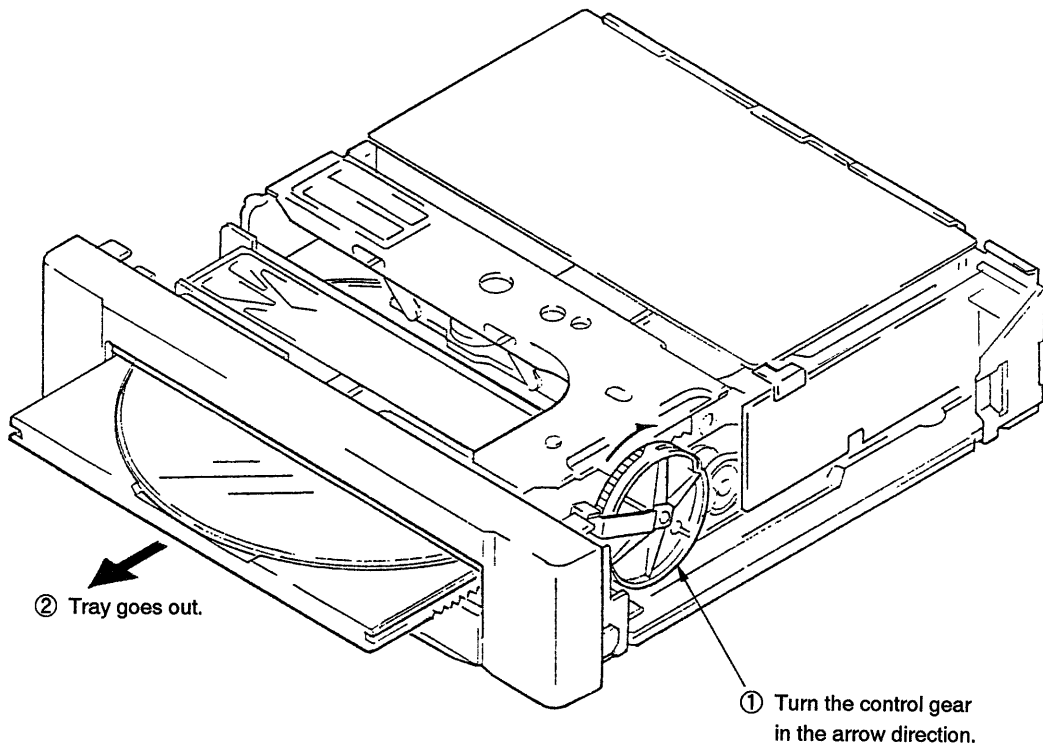

## 2-9. TURNTABLE ASSEMBLY HEIGHT ADJUSTMENT

1. Open the tray by turning the control gear recured on the right side of the set clockwise.
2. Remove chucking assembly. (Refer to page 2-2.)
3. Remove FG bracket with FG board.
4. Replace turntable assembly.

Adjust turntable assembly height using FG bracket(1 mm thickness)as followings.

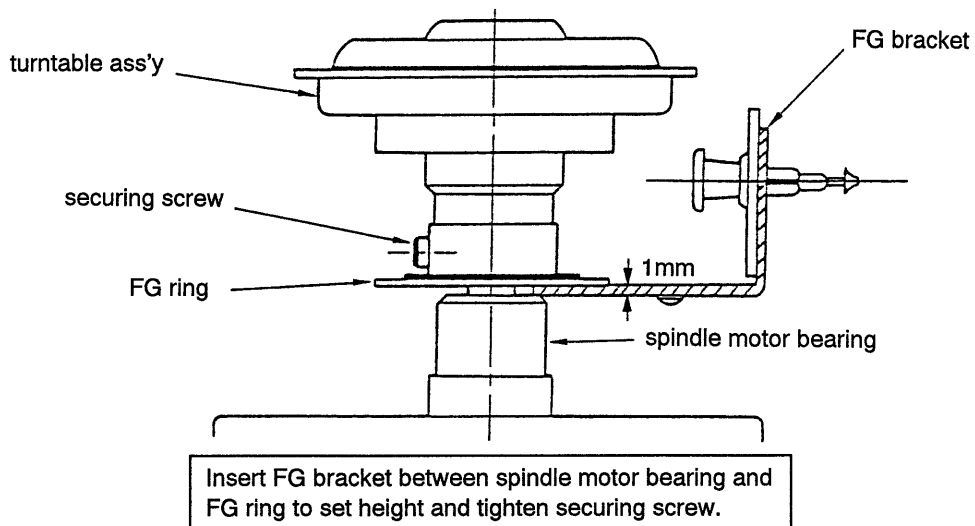


5. Fit FG bracket with FG board in its original position.




## 2-10. INTERNAL VIEWS


– Top Side –

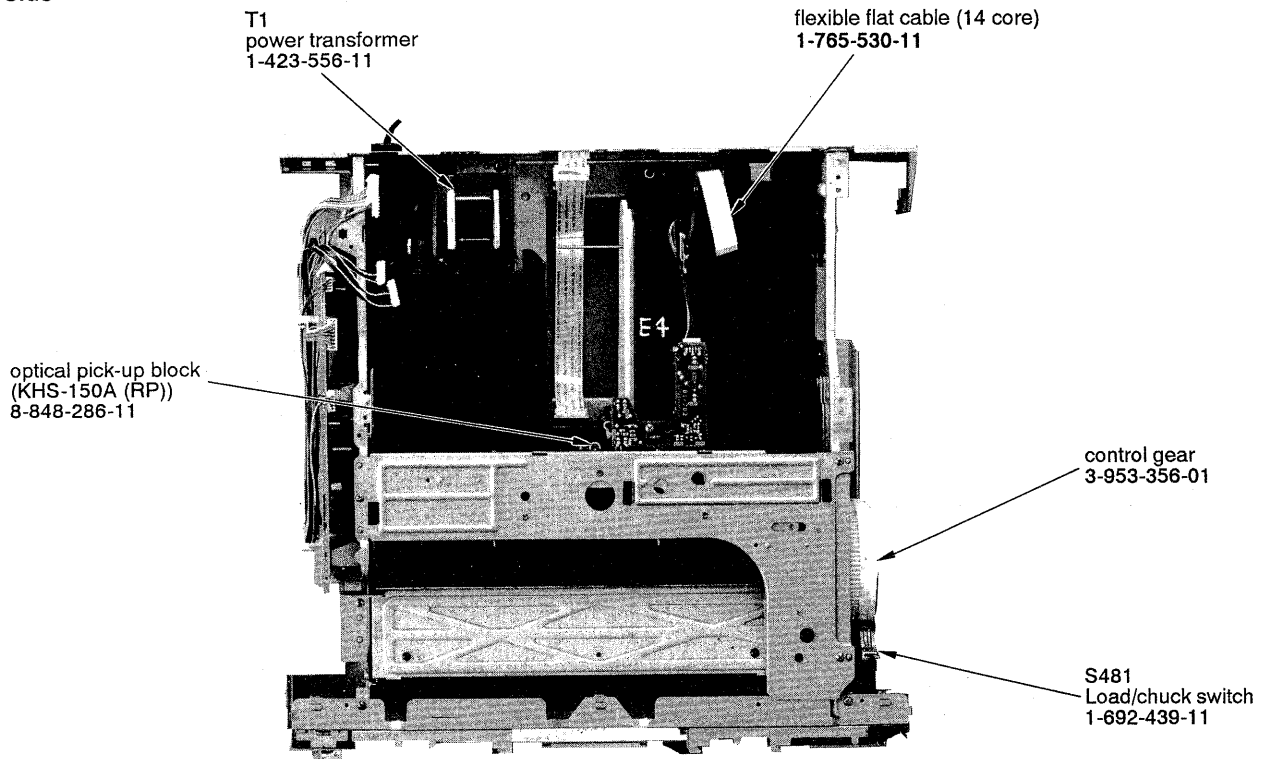

– Bottom Side –

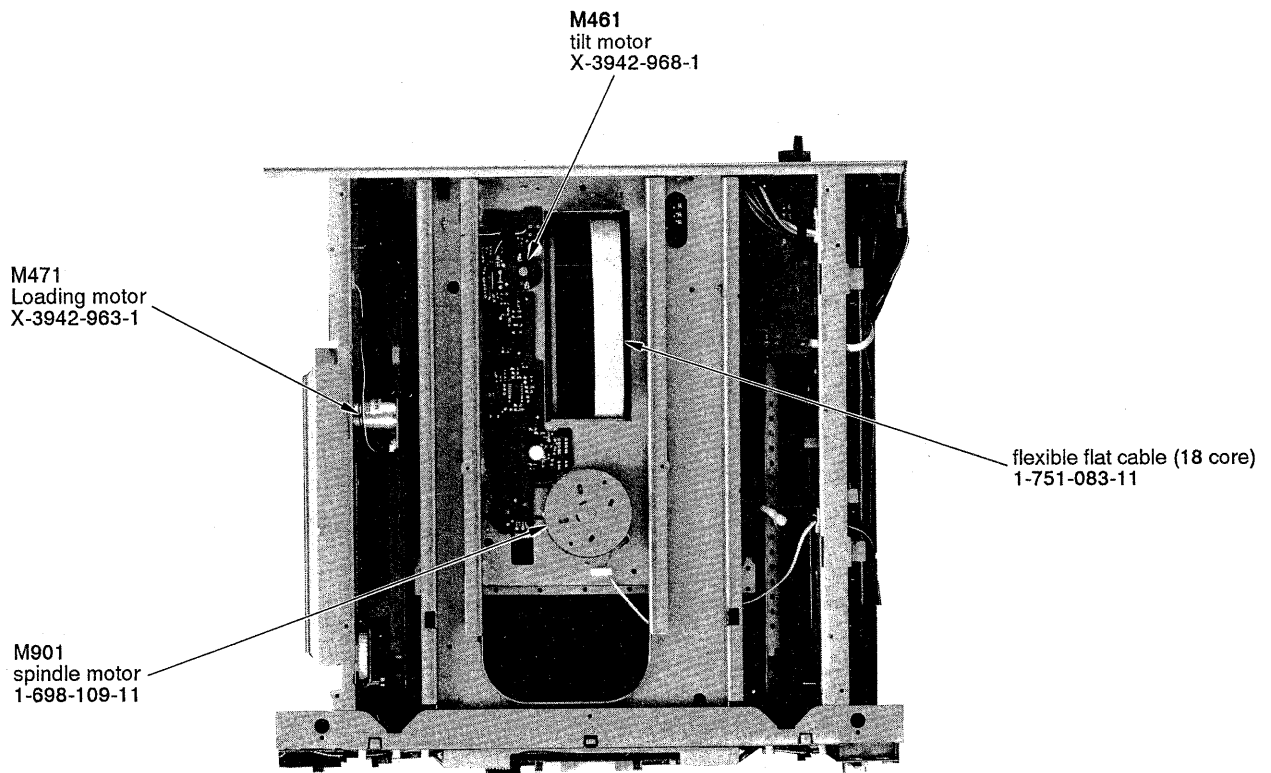


2-11. CIRCUIT BOARDS LOCATION

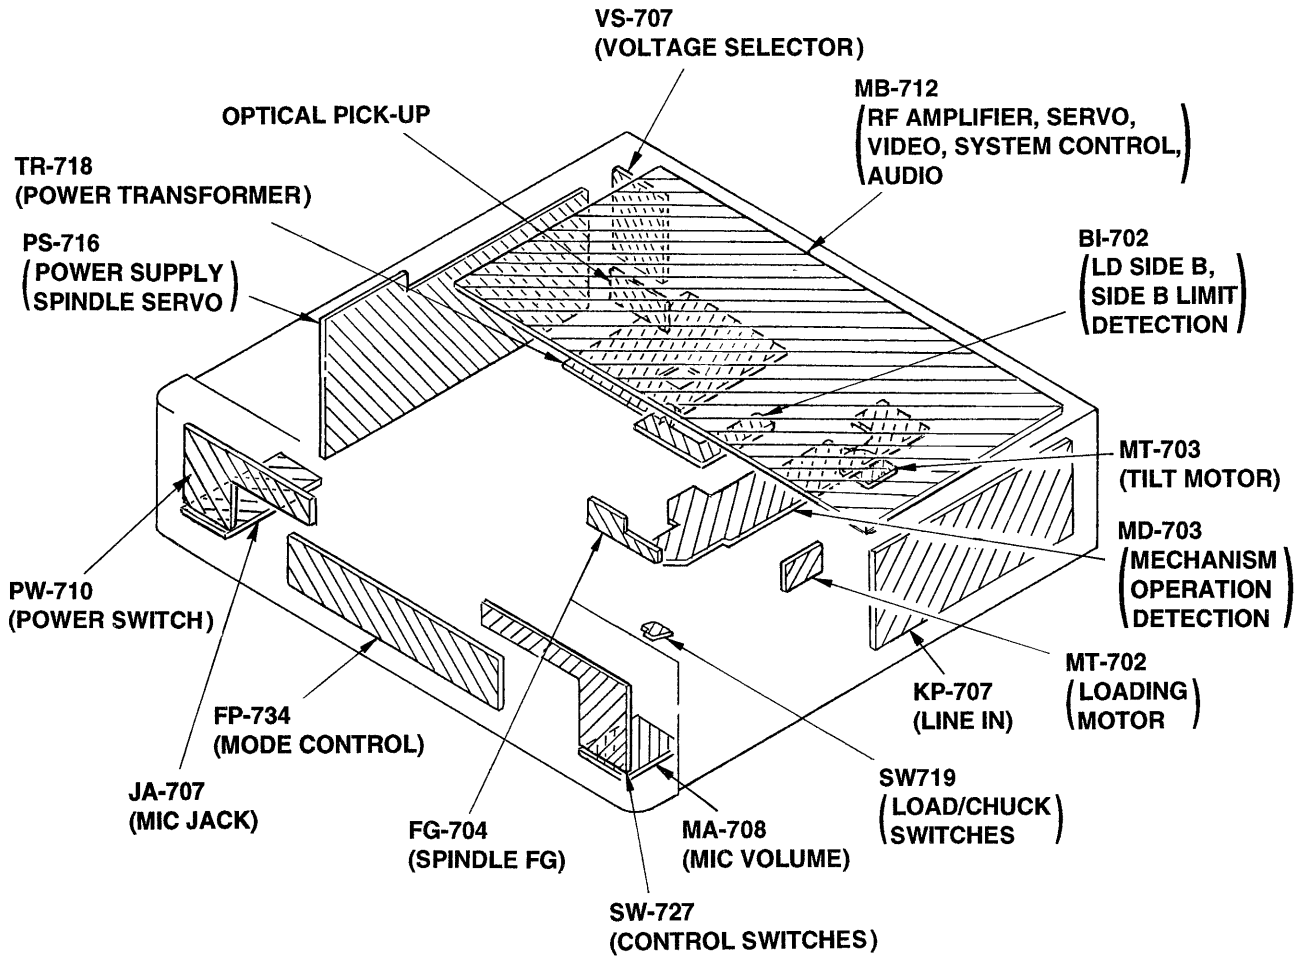





3-2. VIDEO BLOCK DIAGRAM

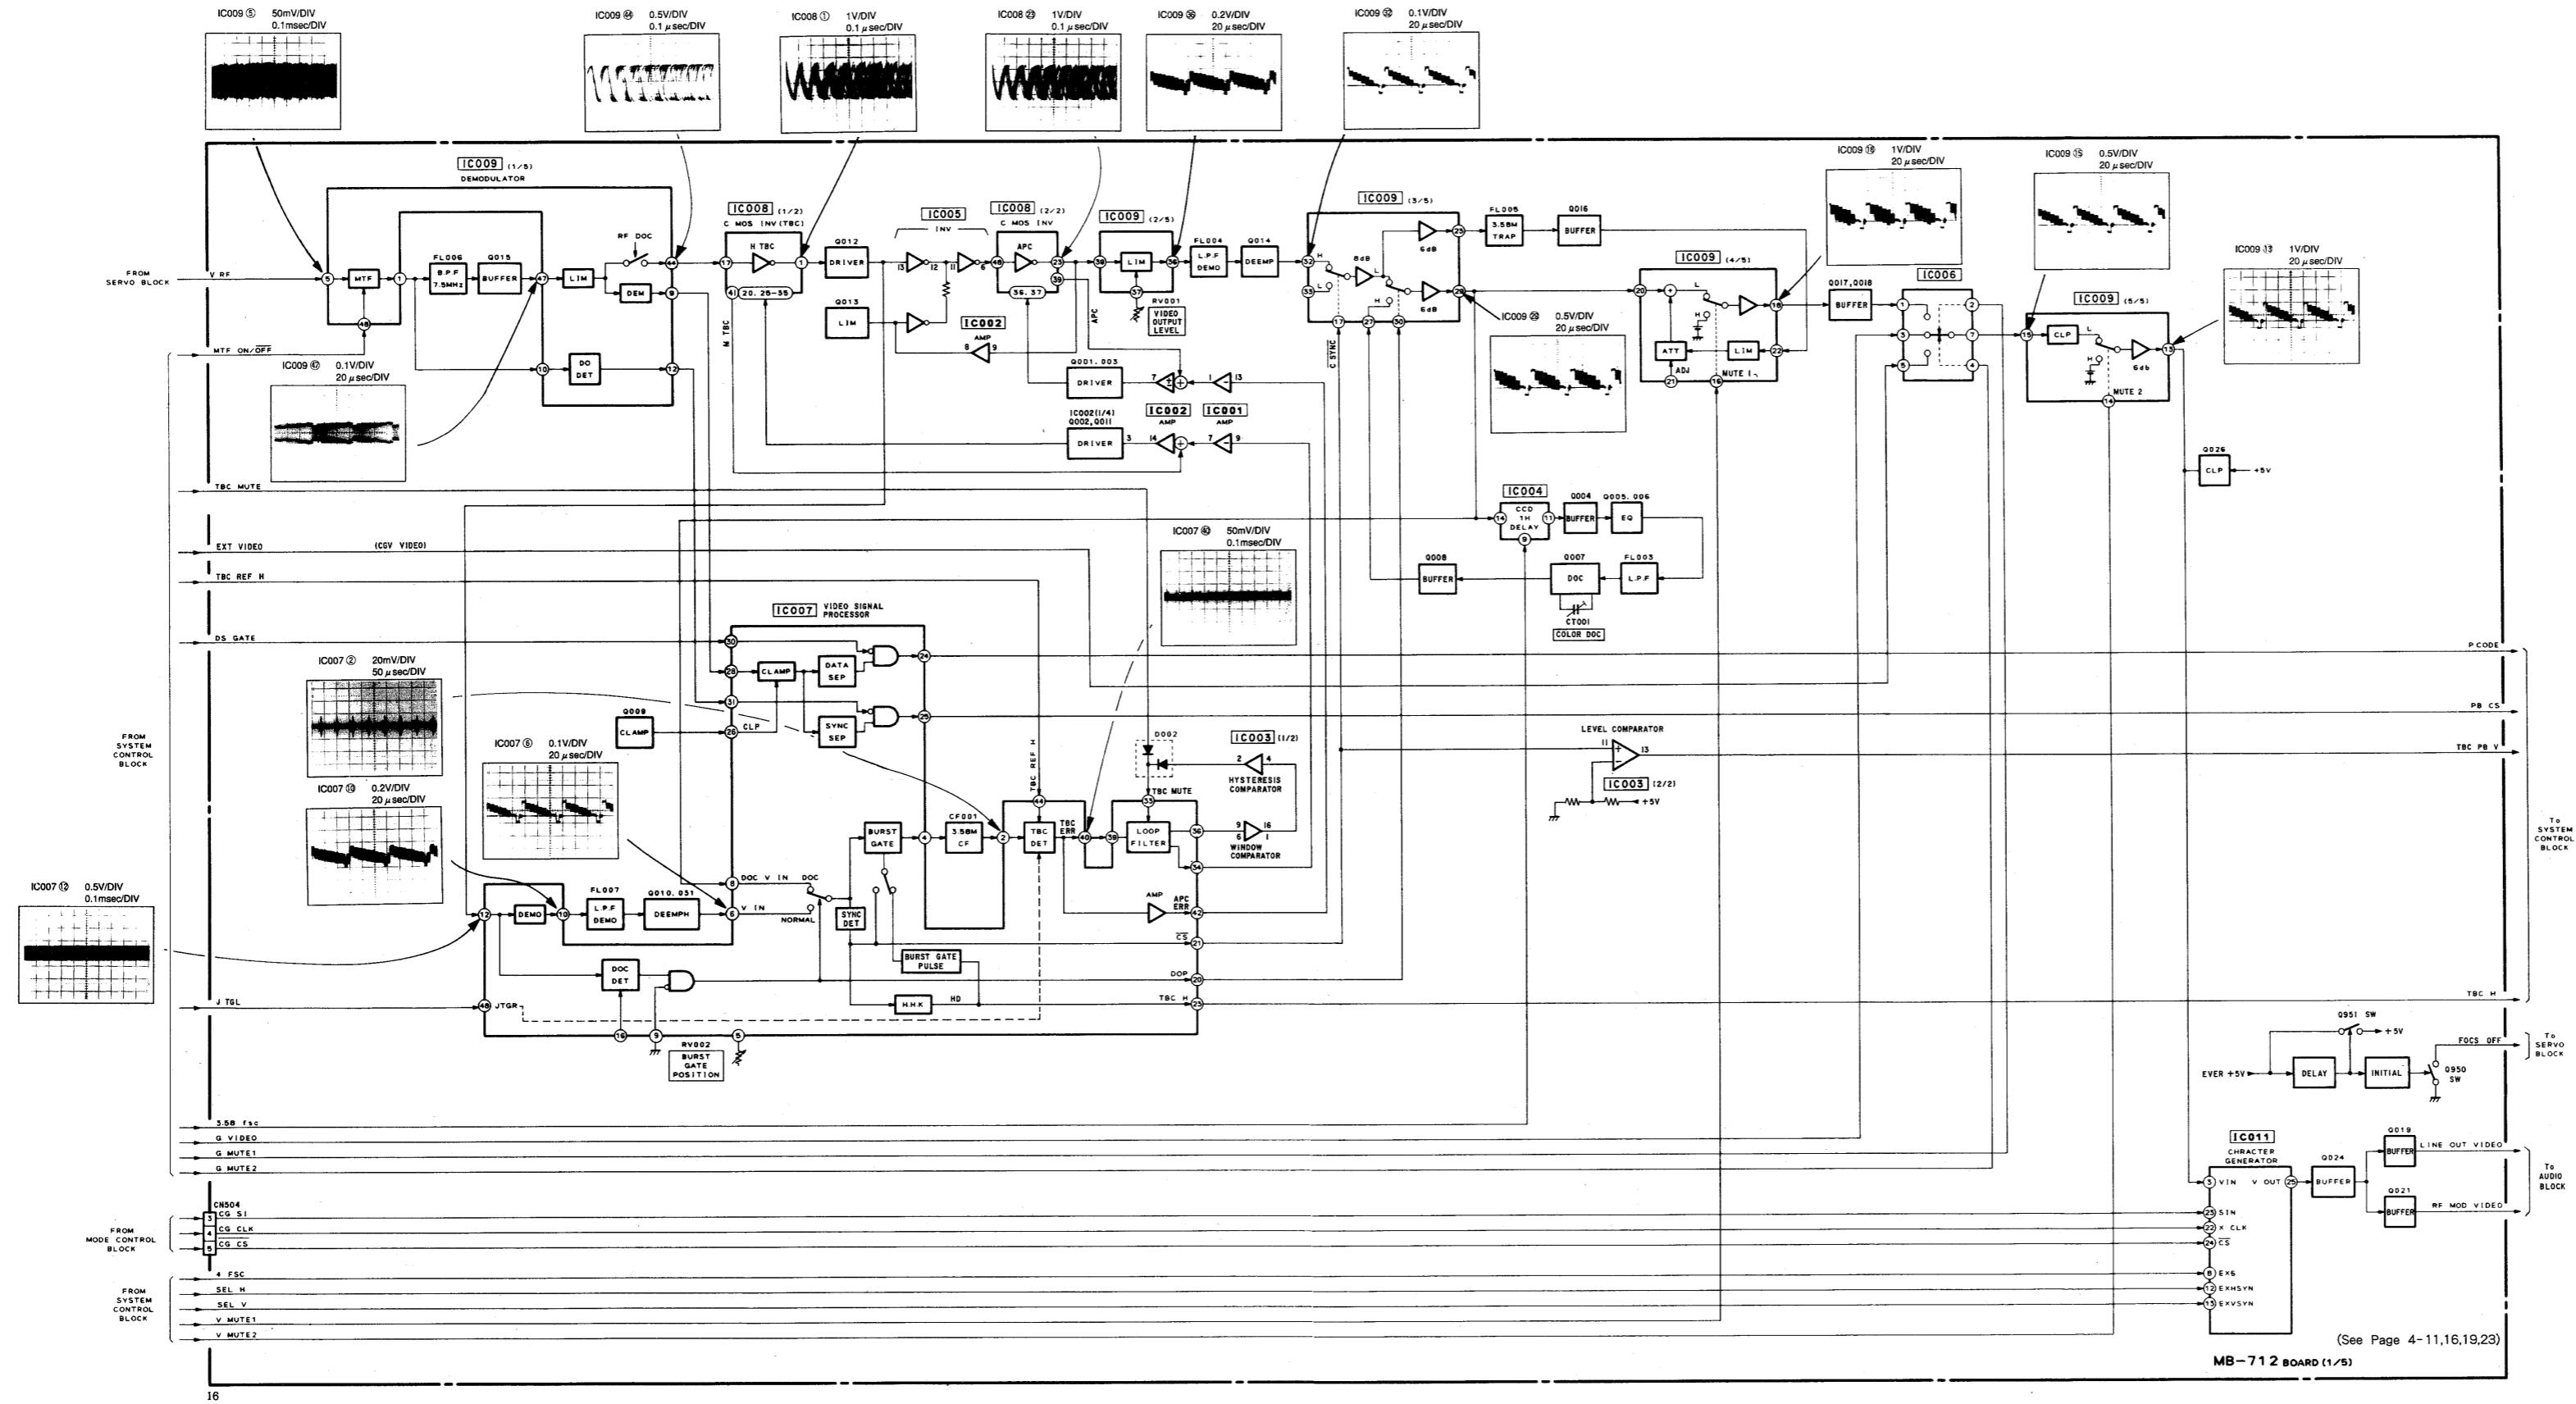

3-3. SERVO BLOCK DIAGRAM

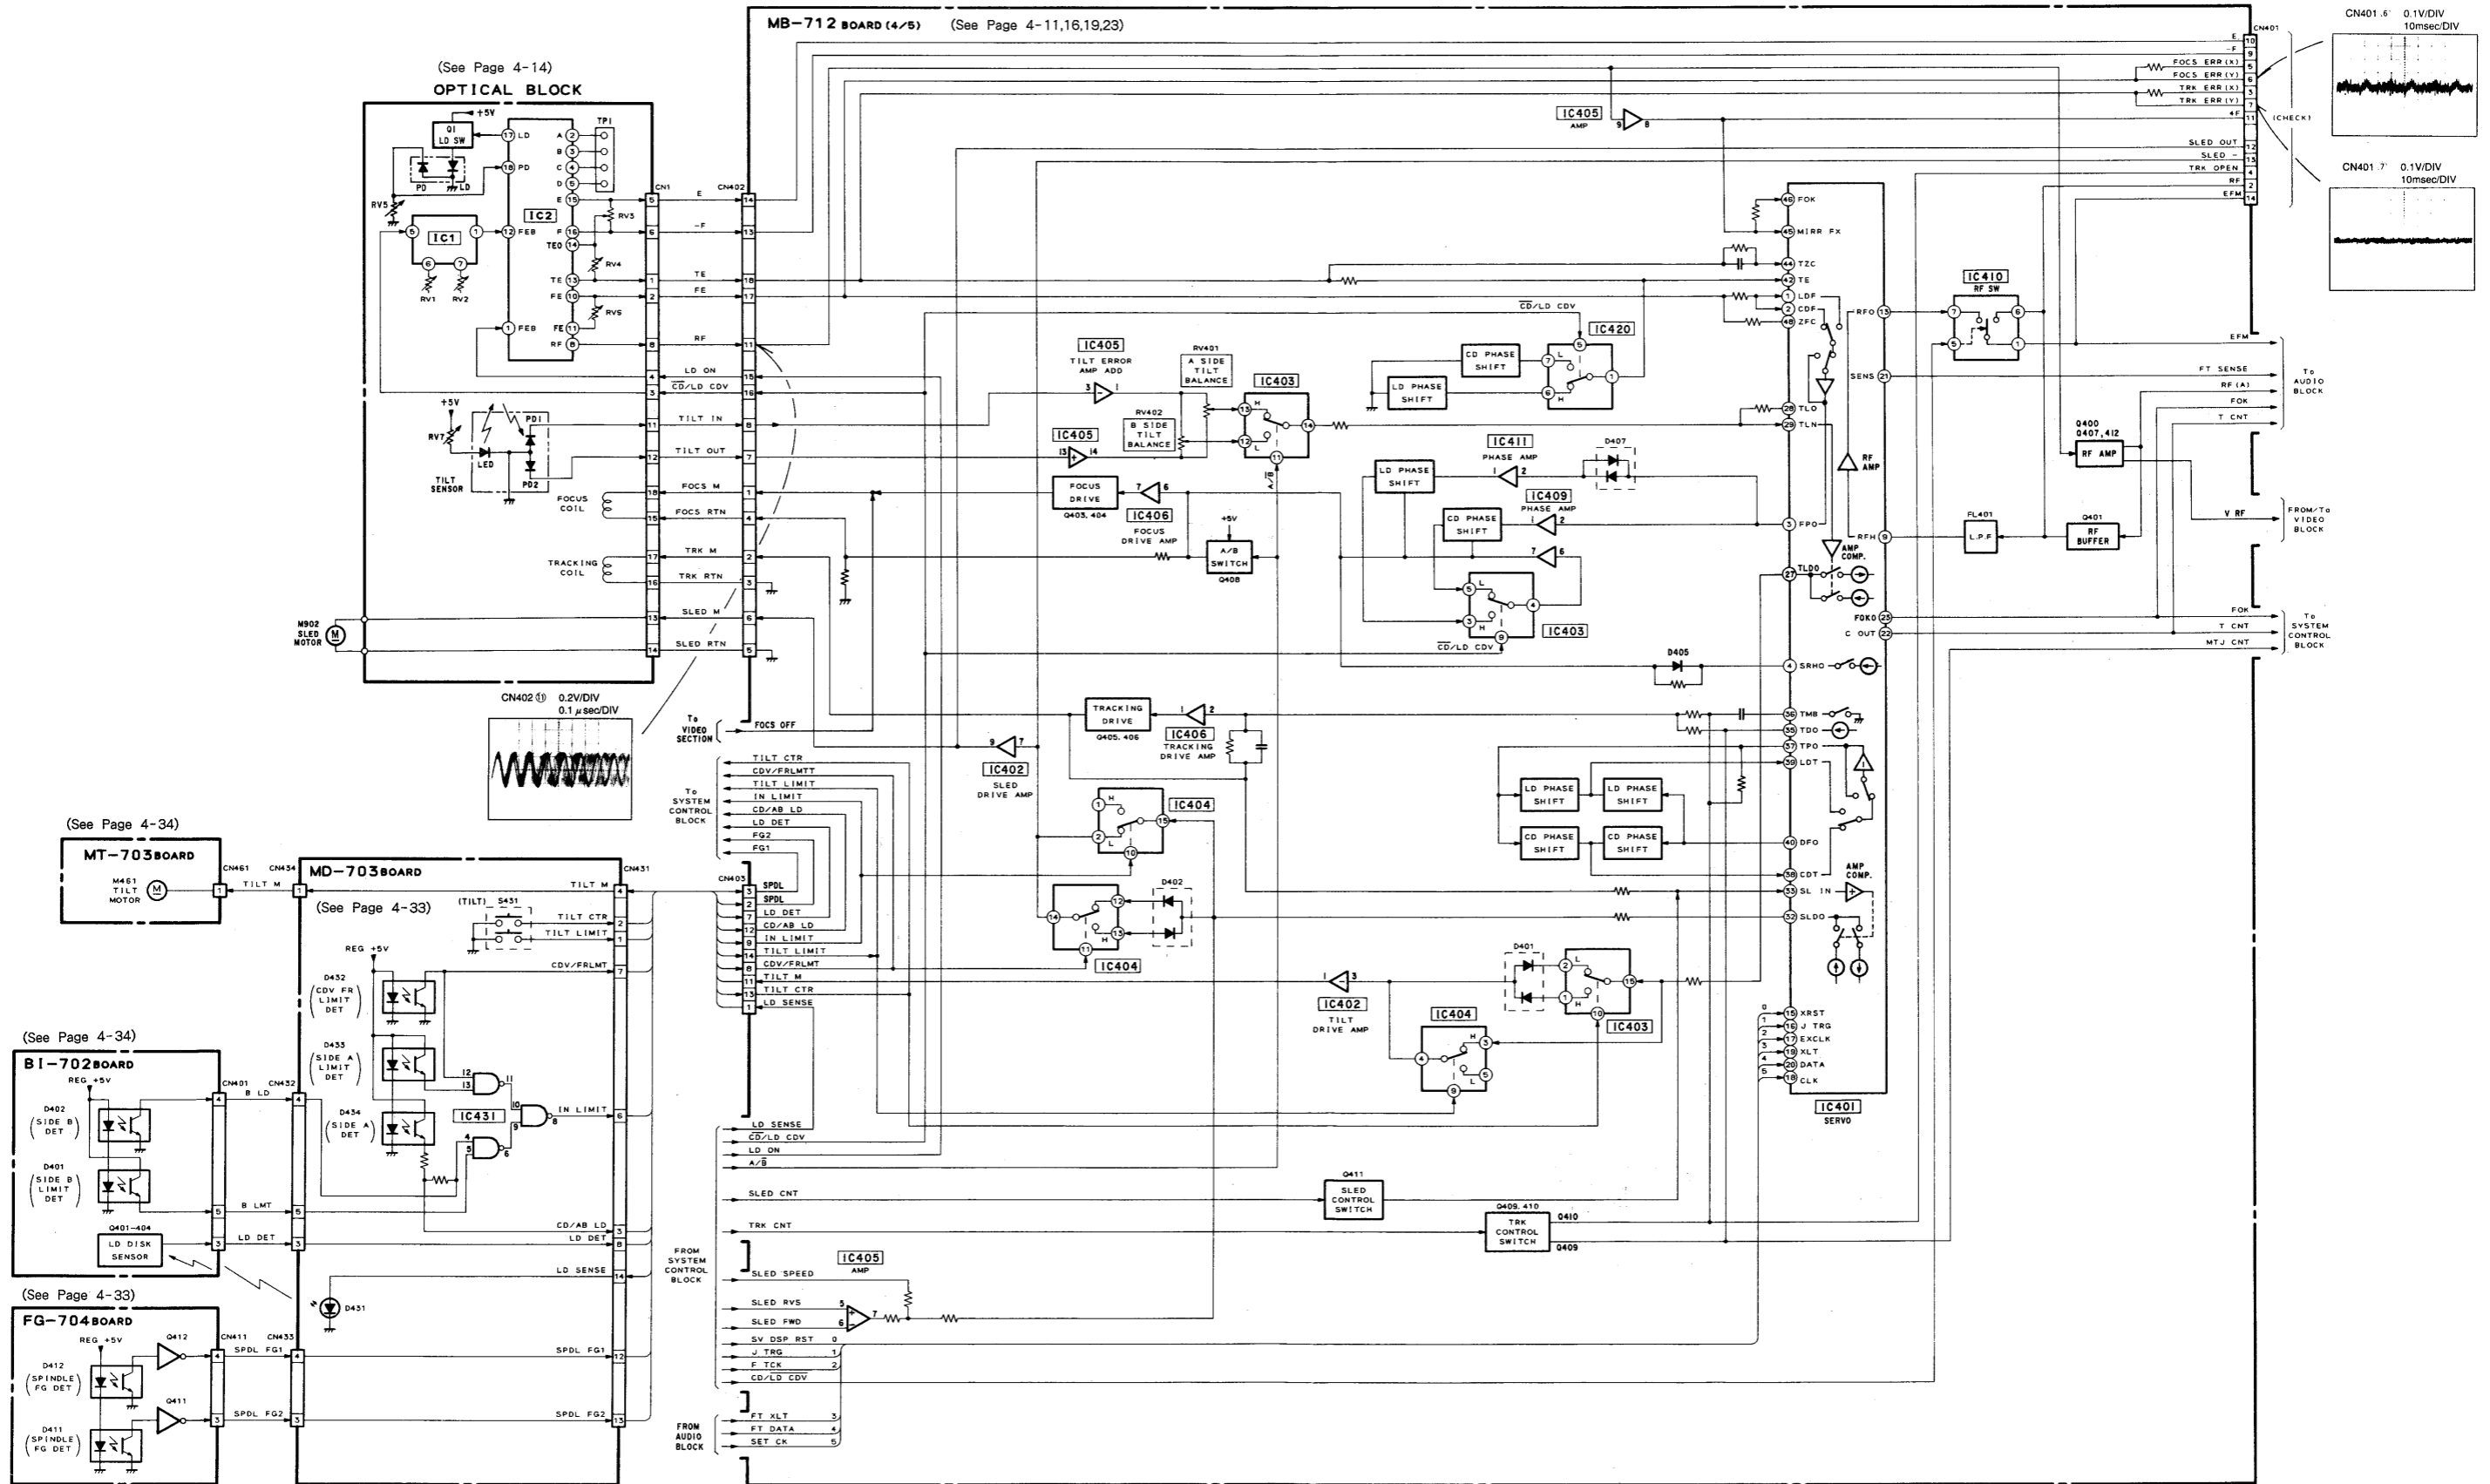


3-4. SYSTEM CONTROL BLOCK DIAGRAM

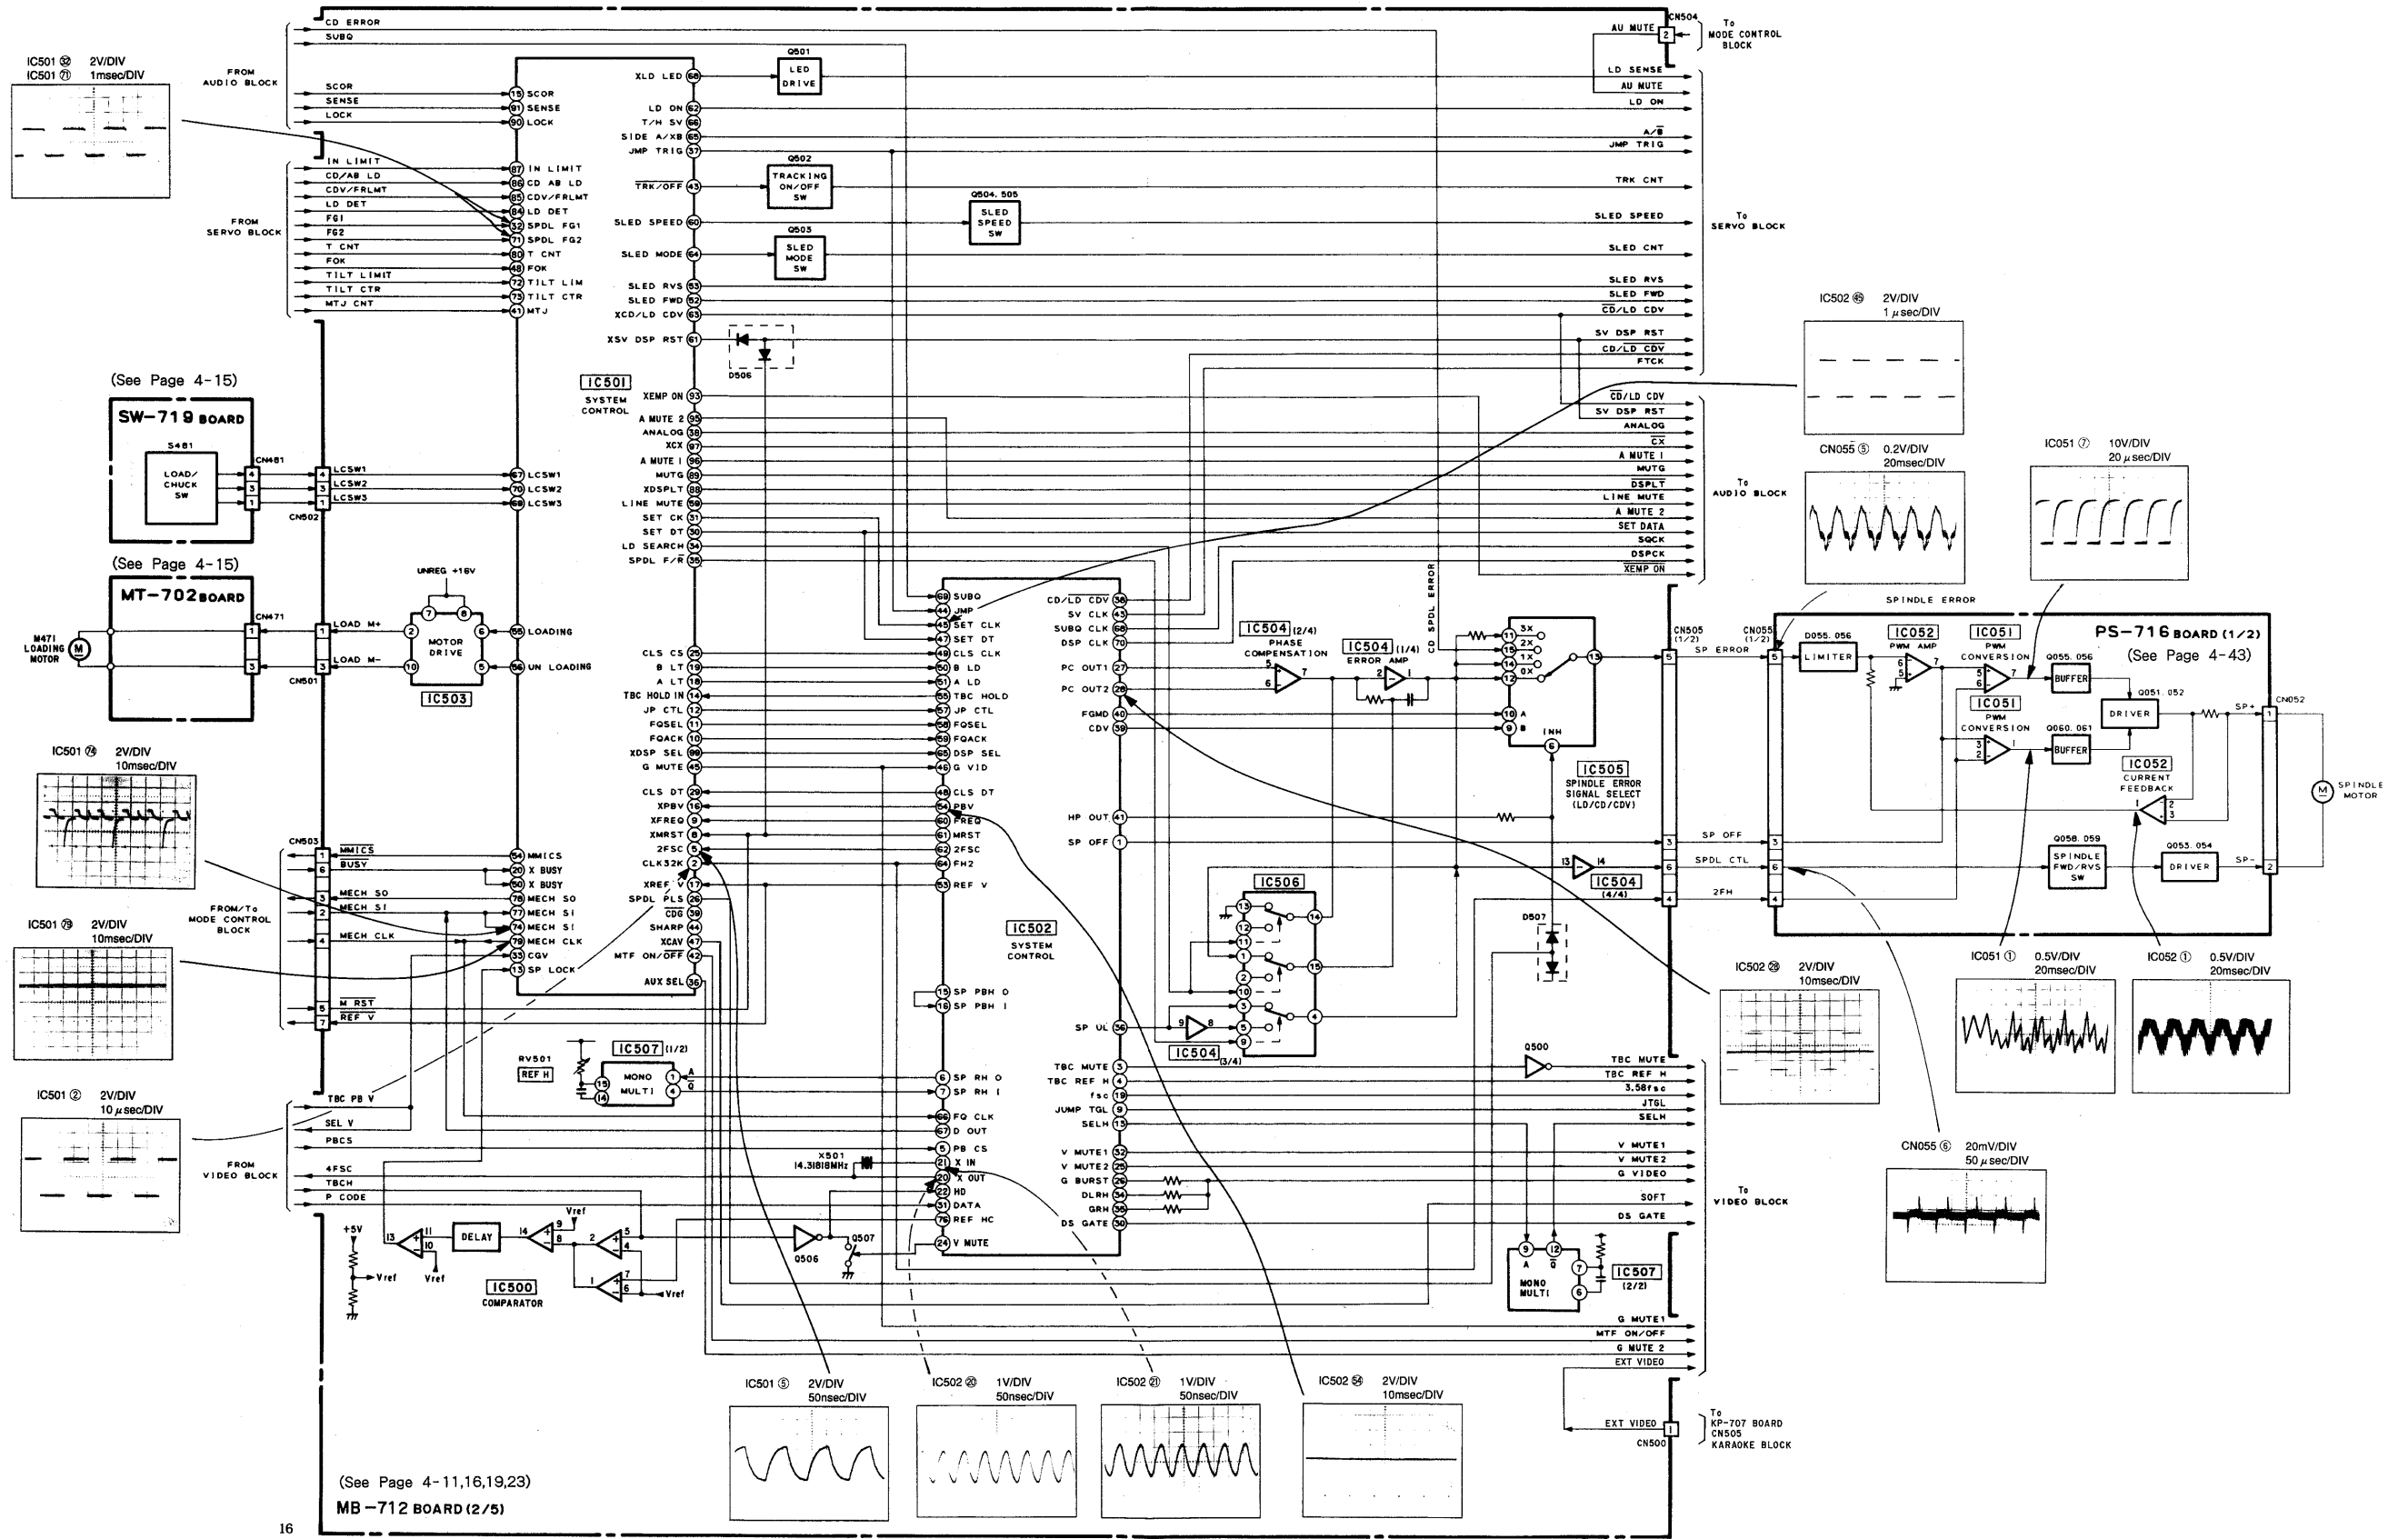


16

3-5. MODE CONTROL BLOCK DIAGRAM

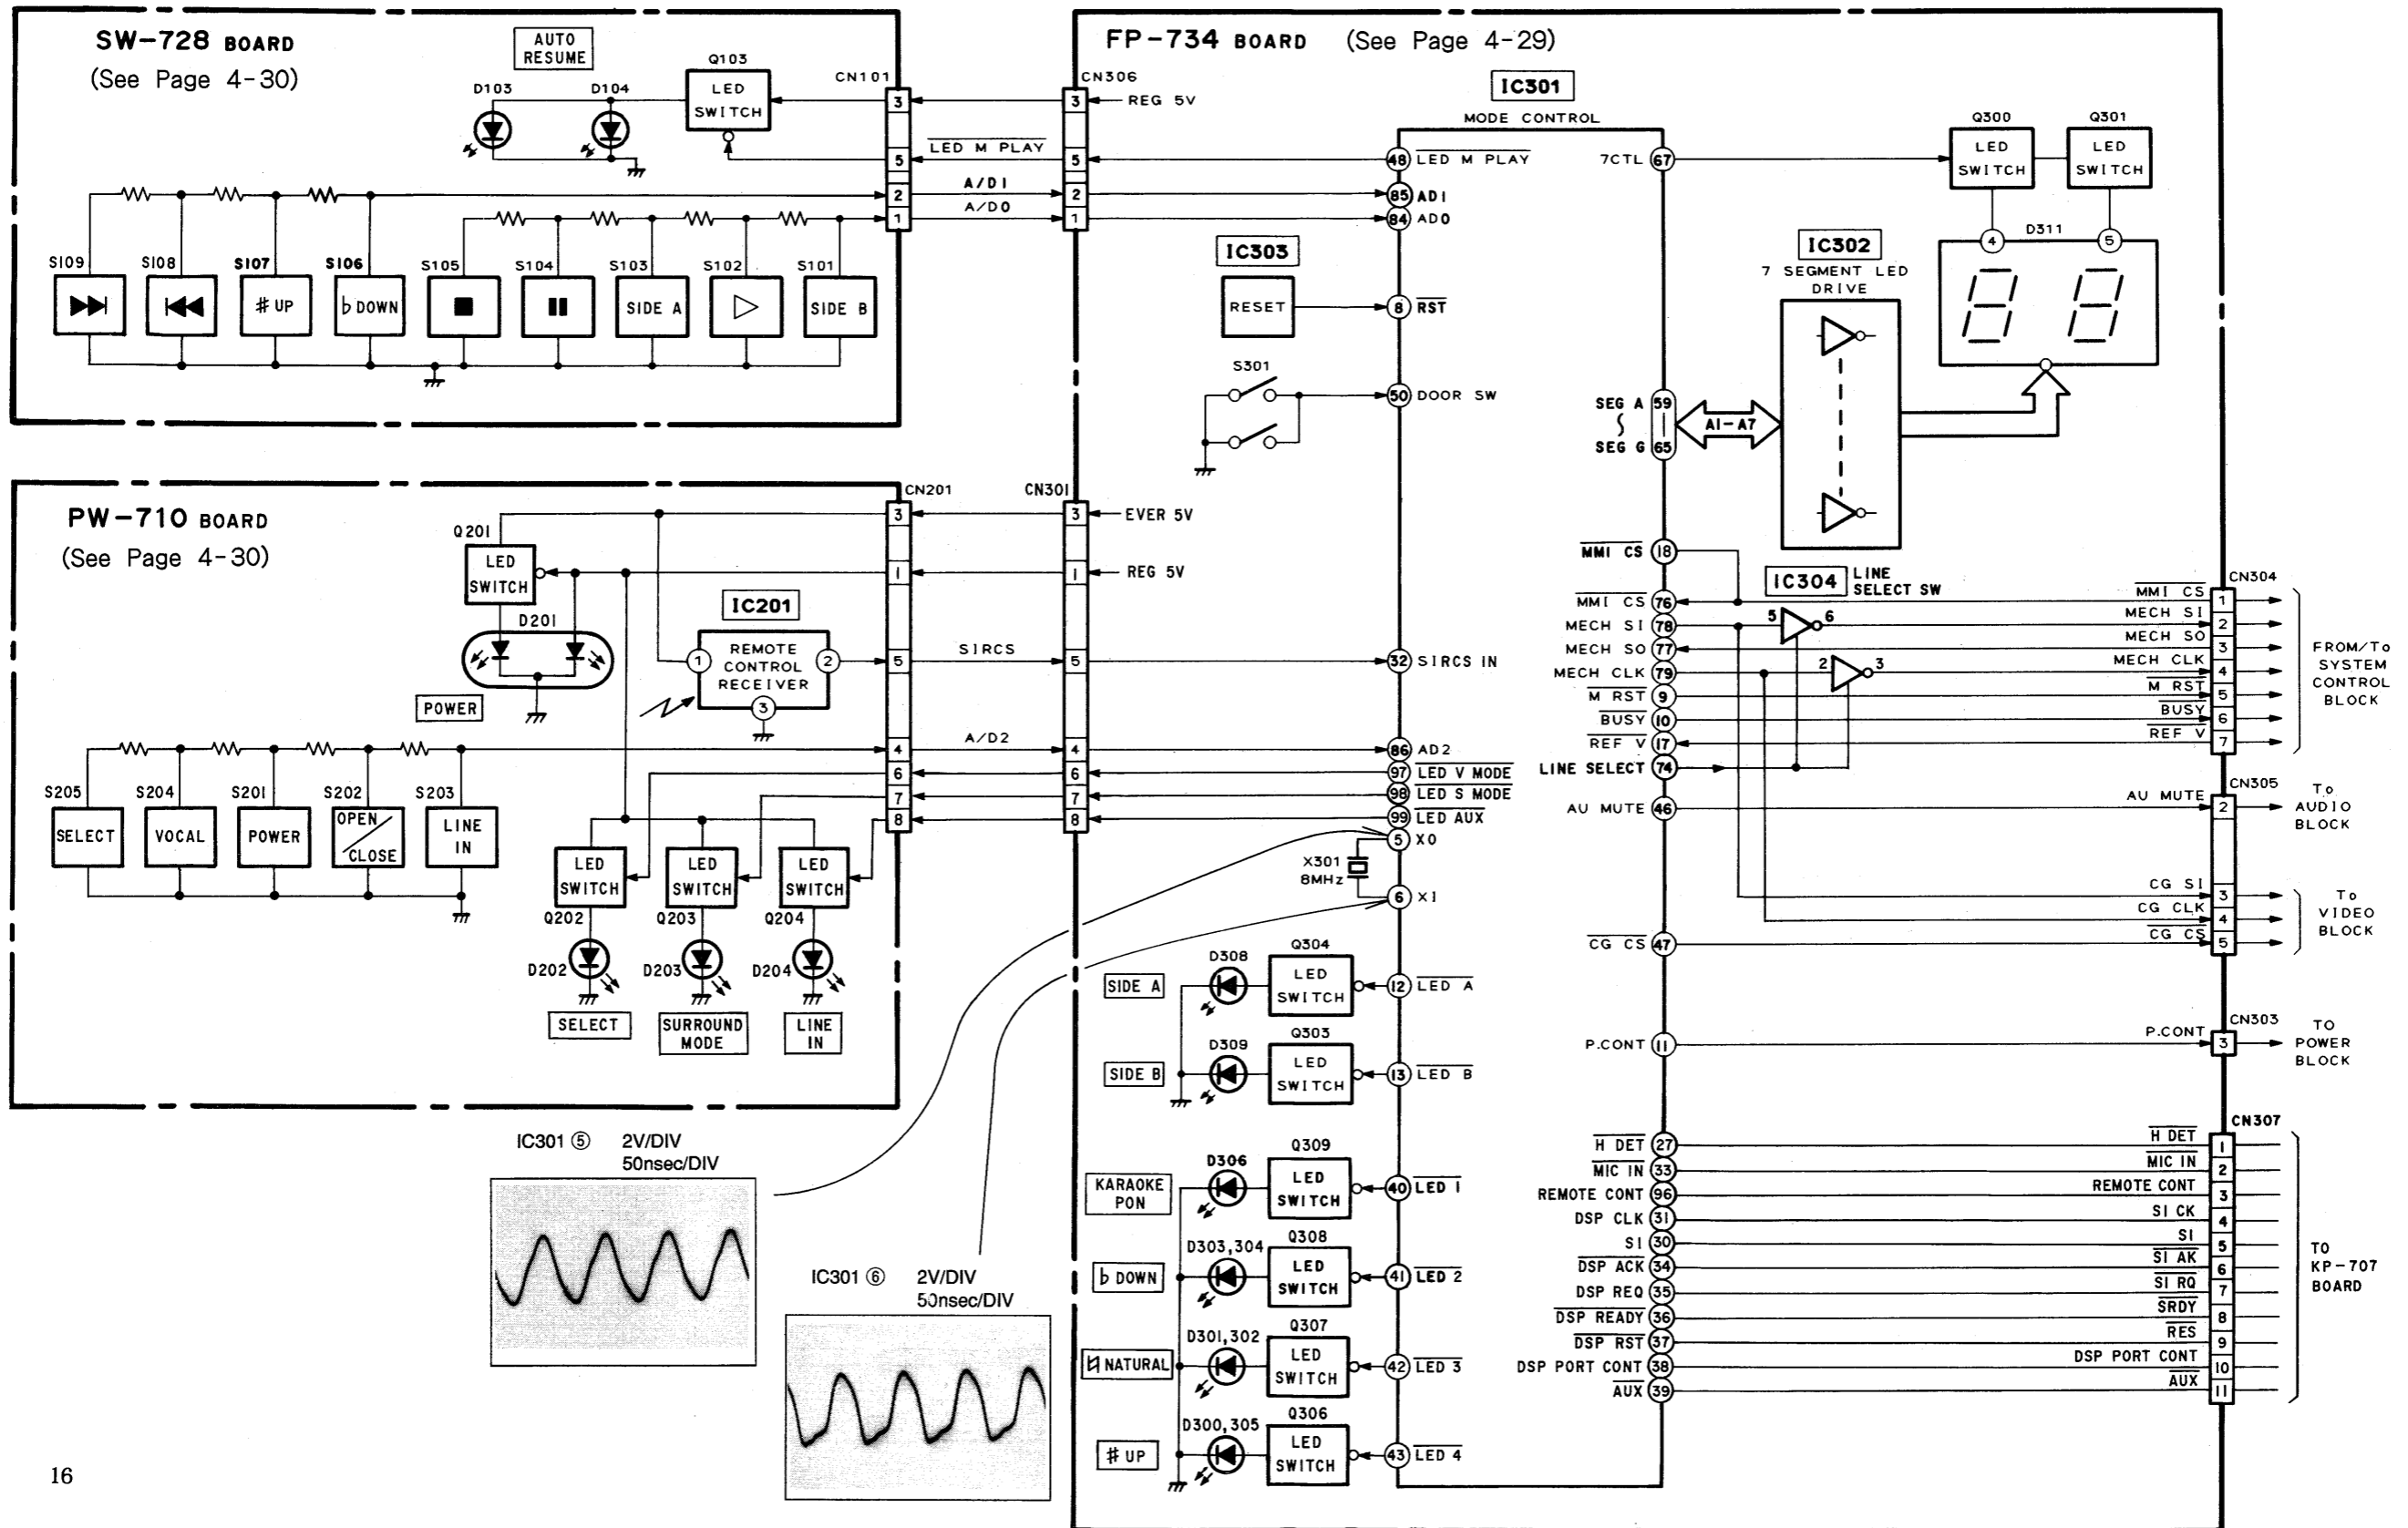


3-6. AUDIO BLOCK DIAGRAM

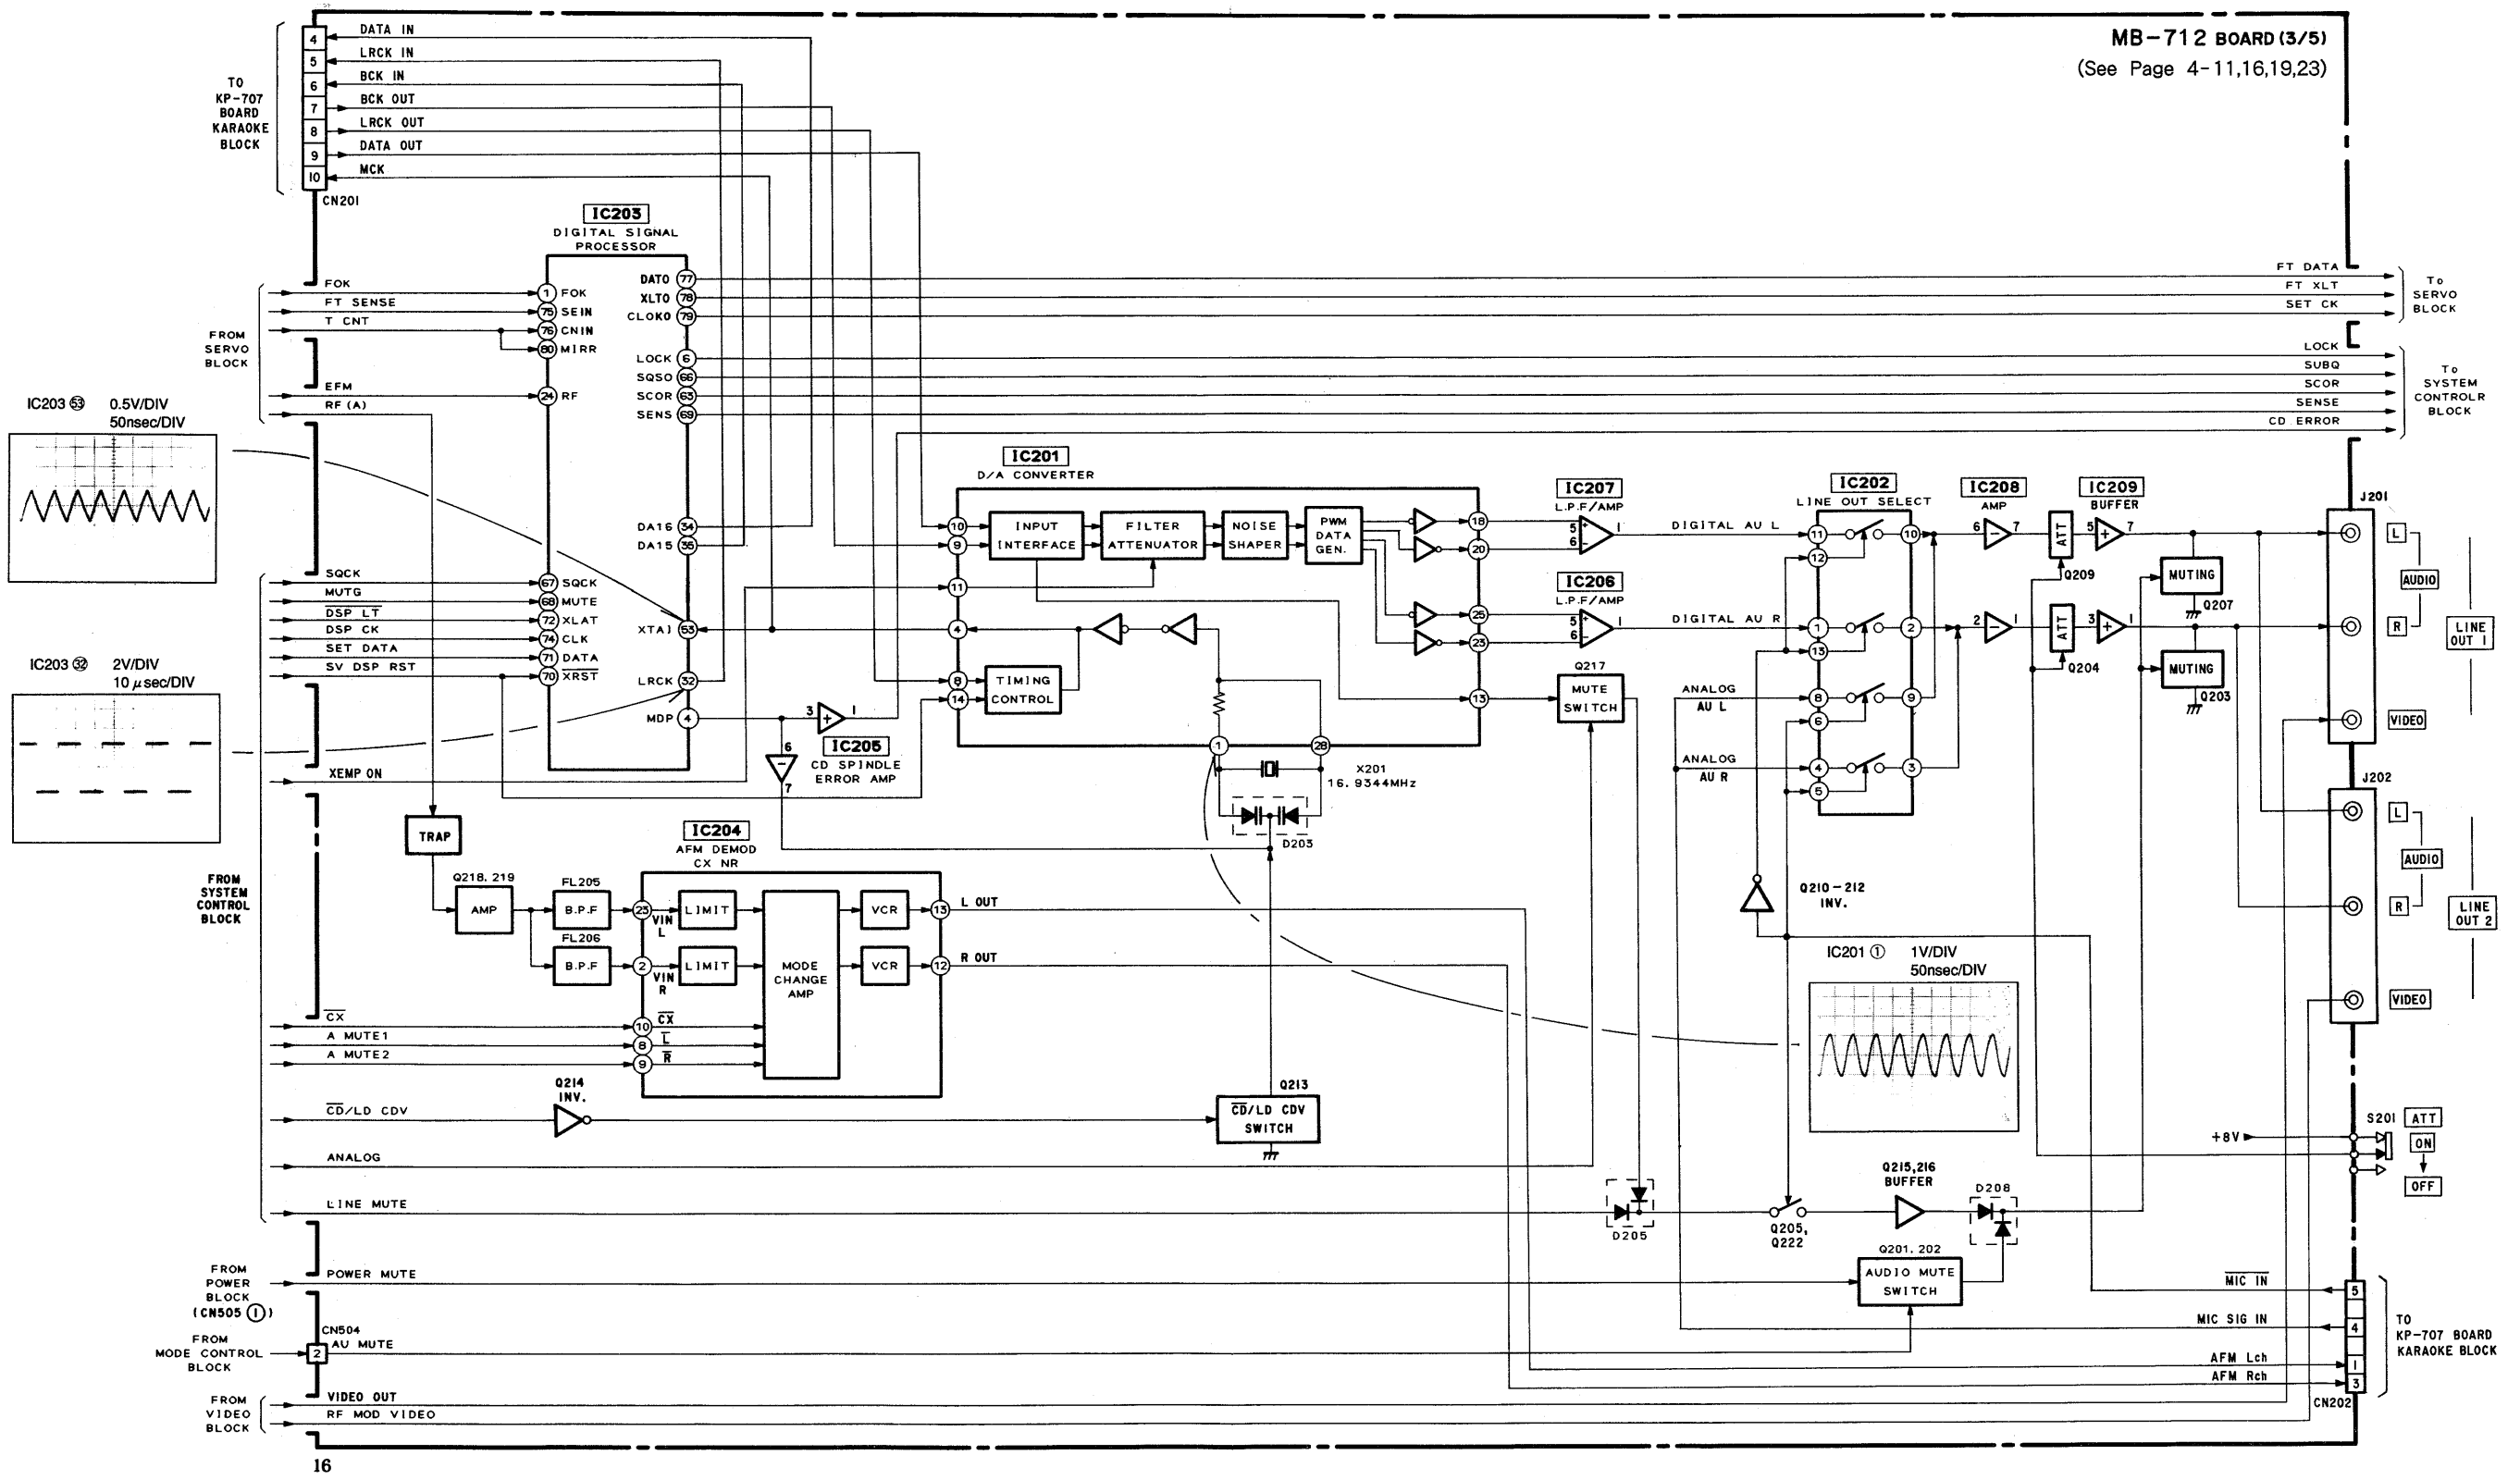




3-7. LINE IN BLOCK DIAGRAM

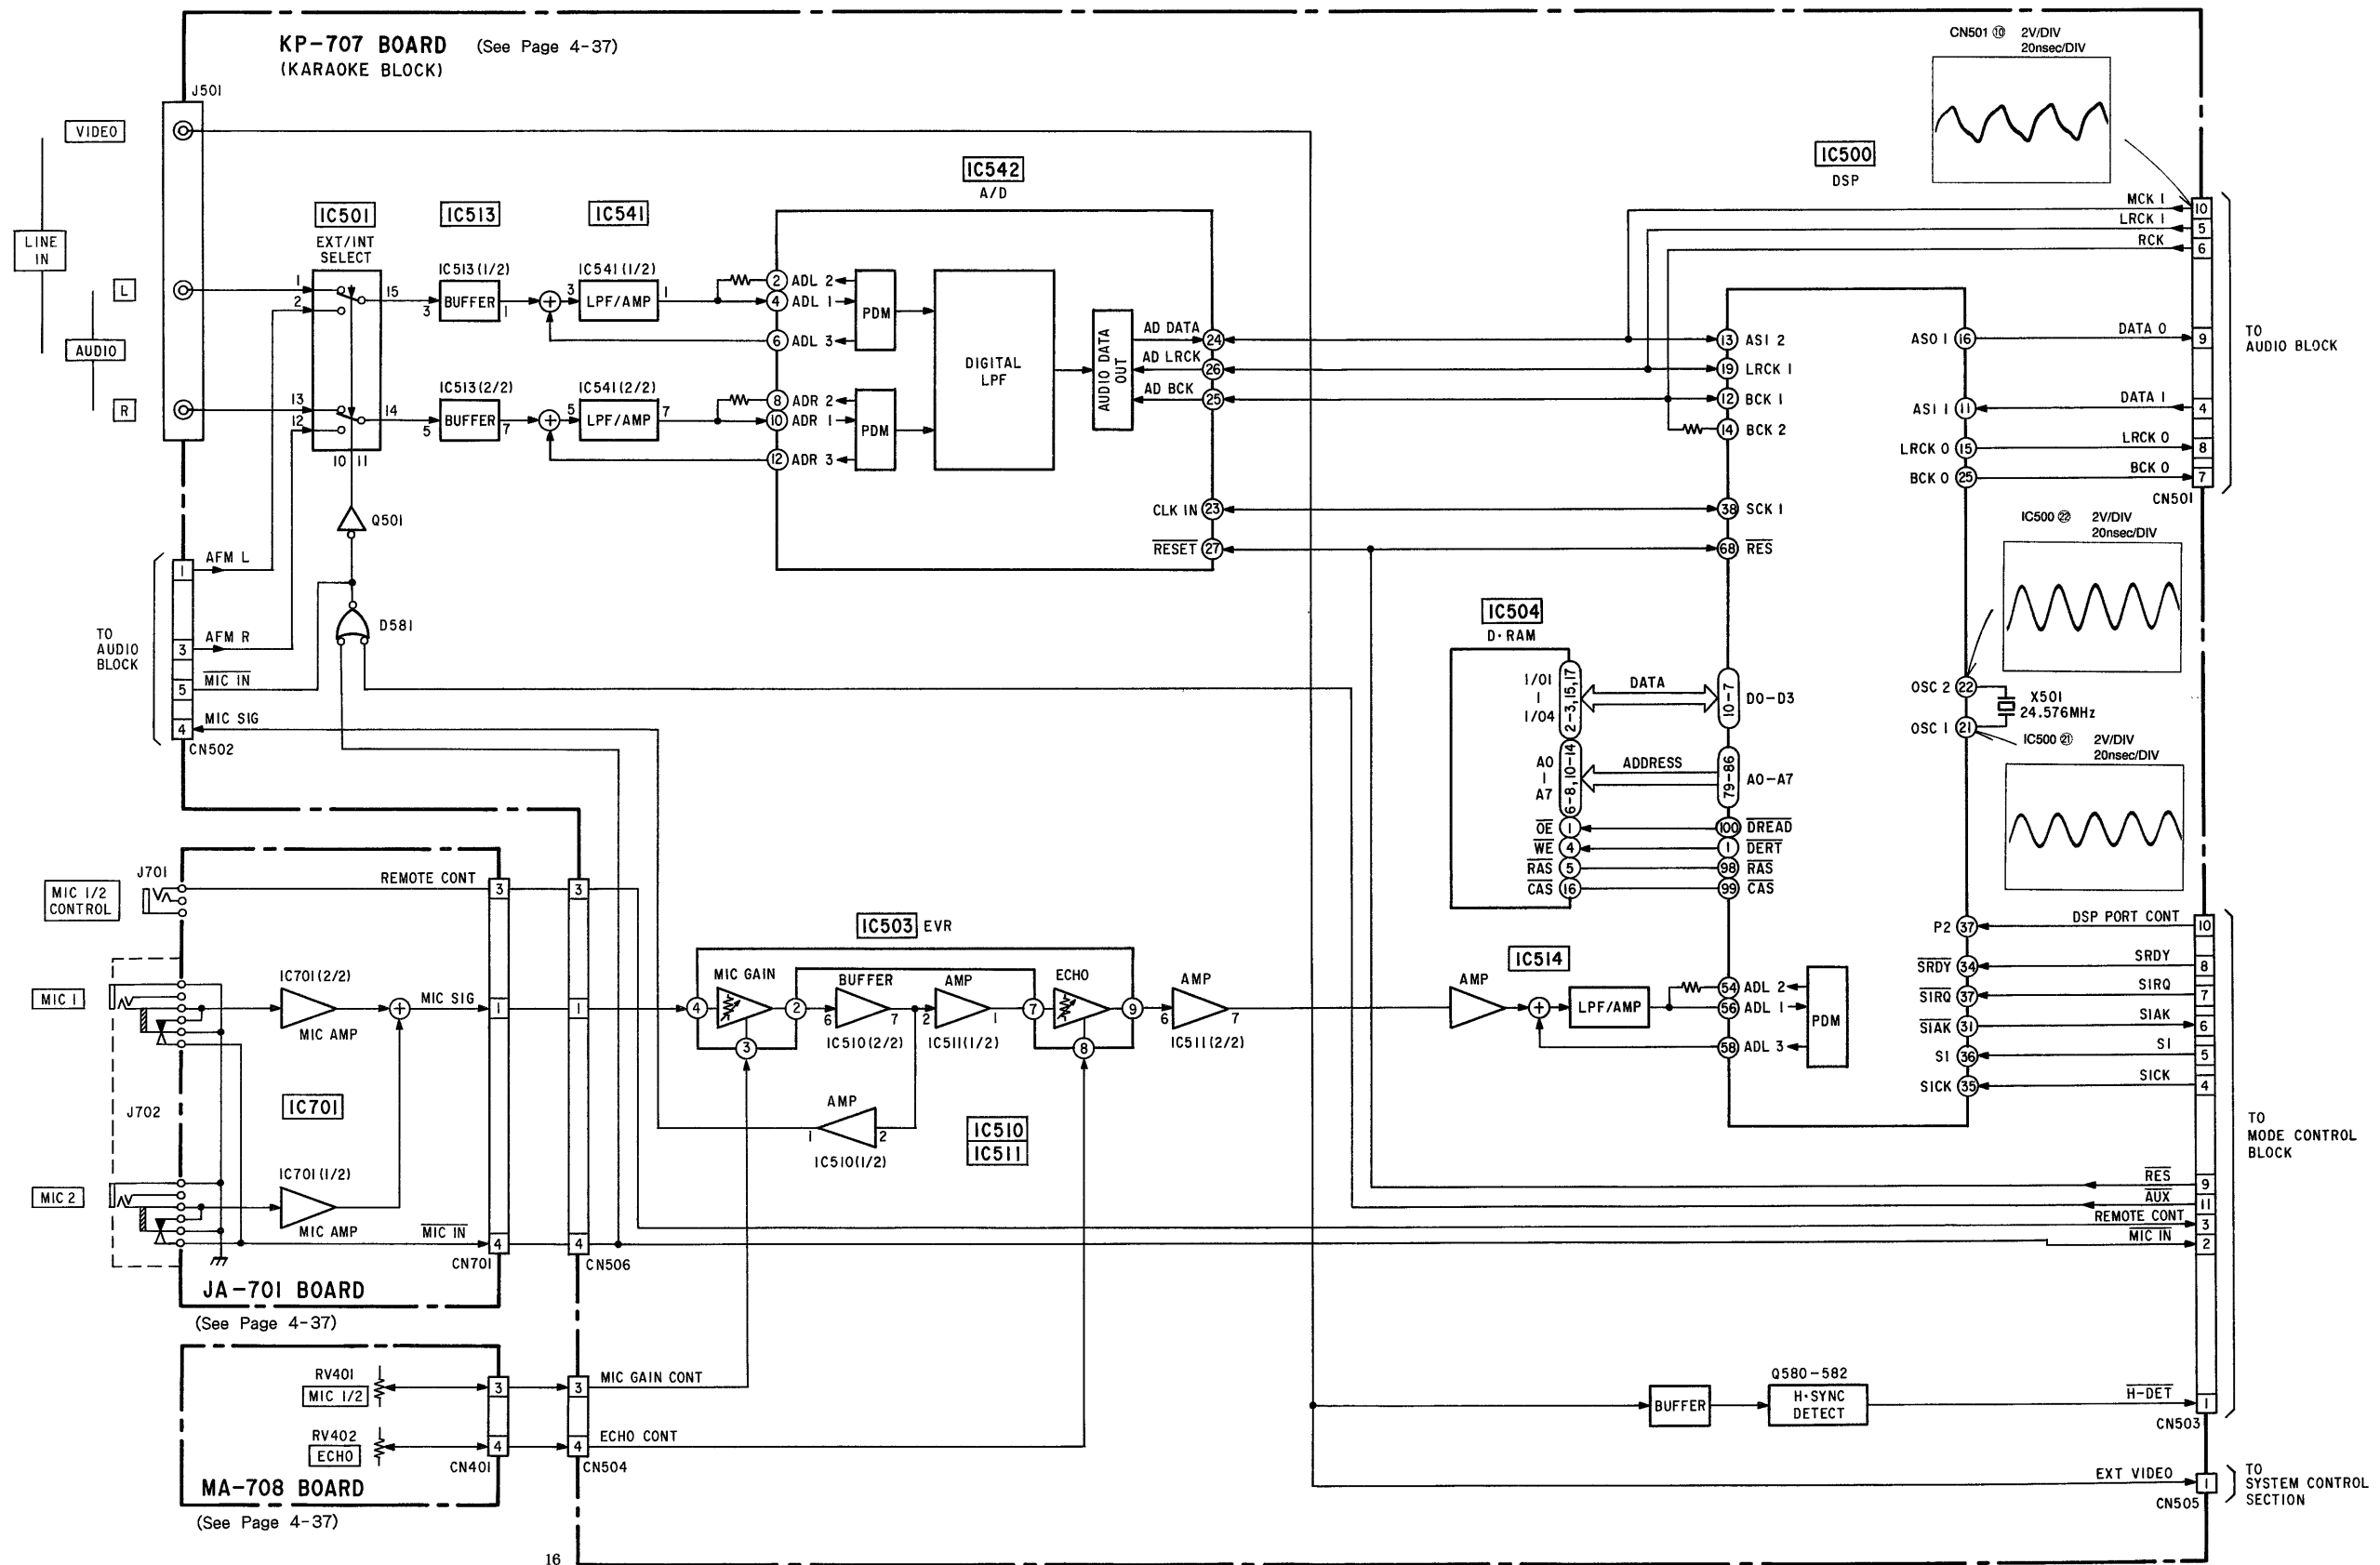

3-8. POWER SUPPLY BLOCK DIAGRAM

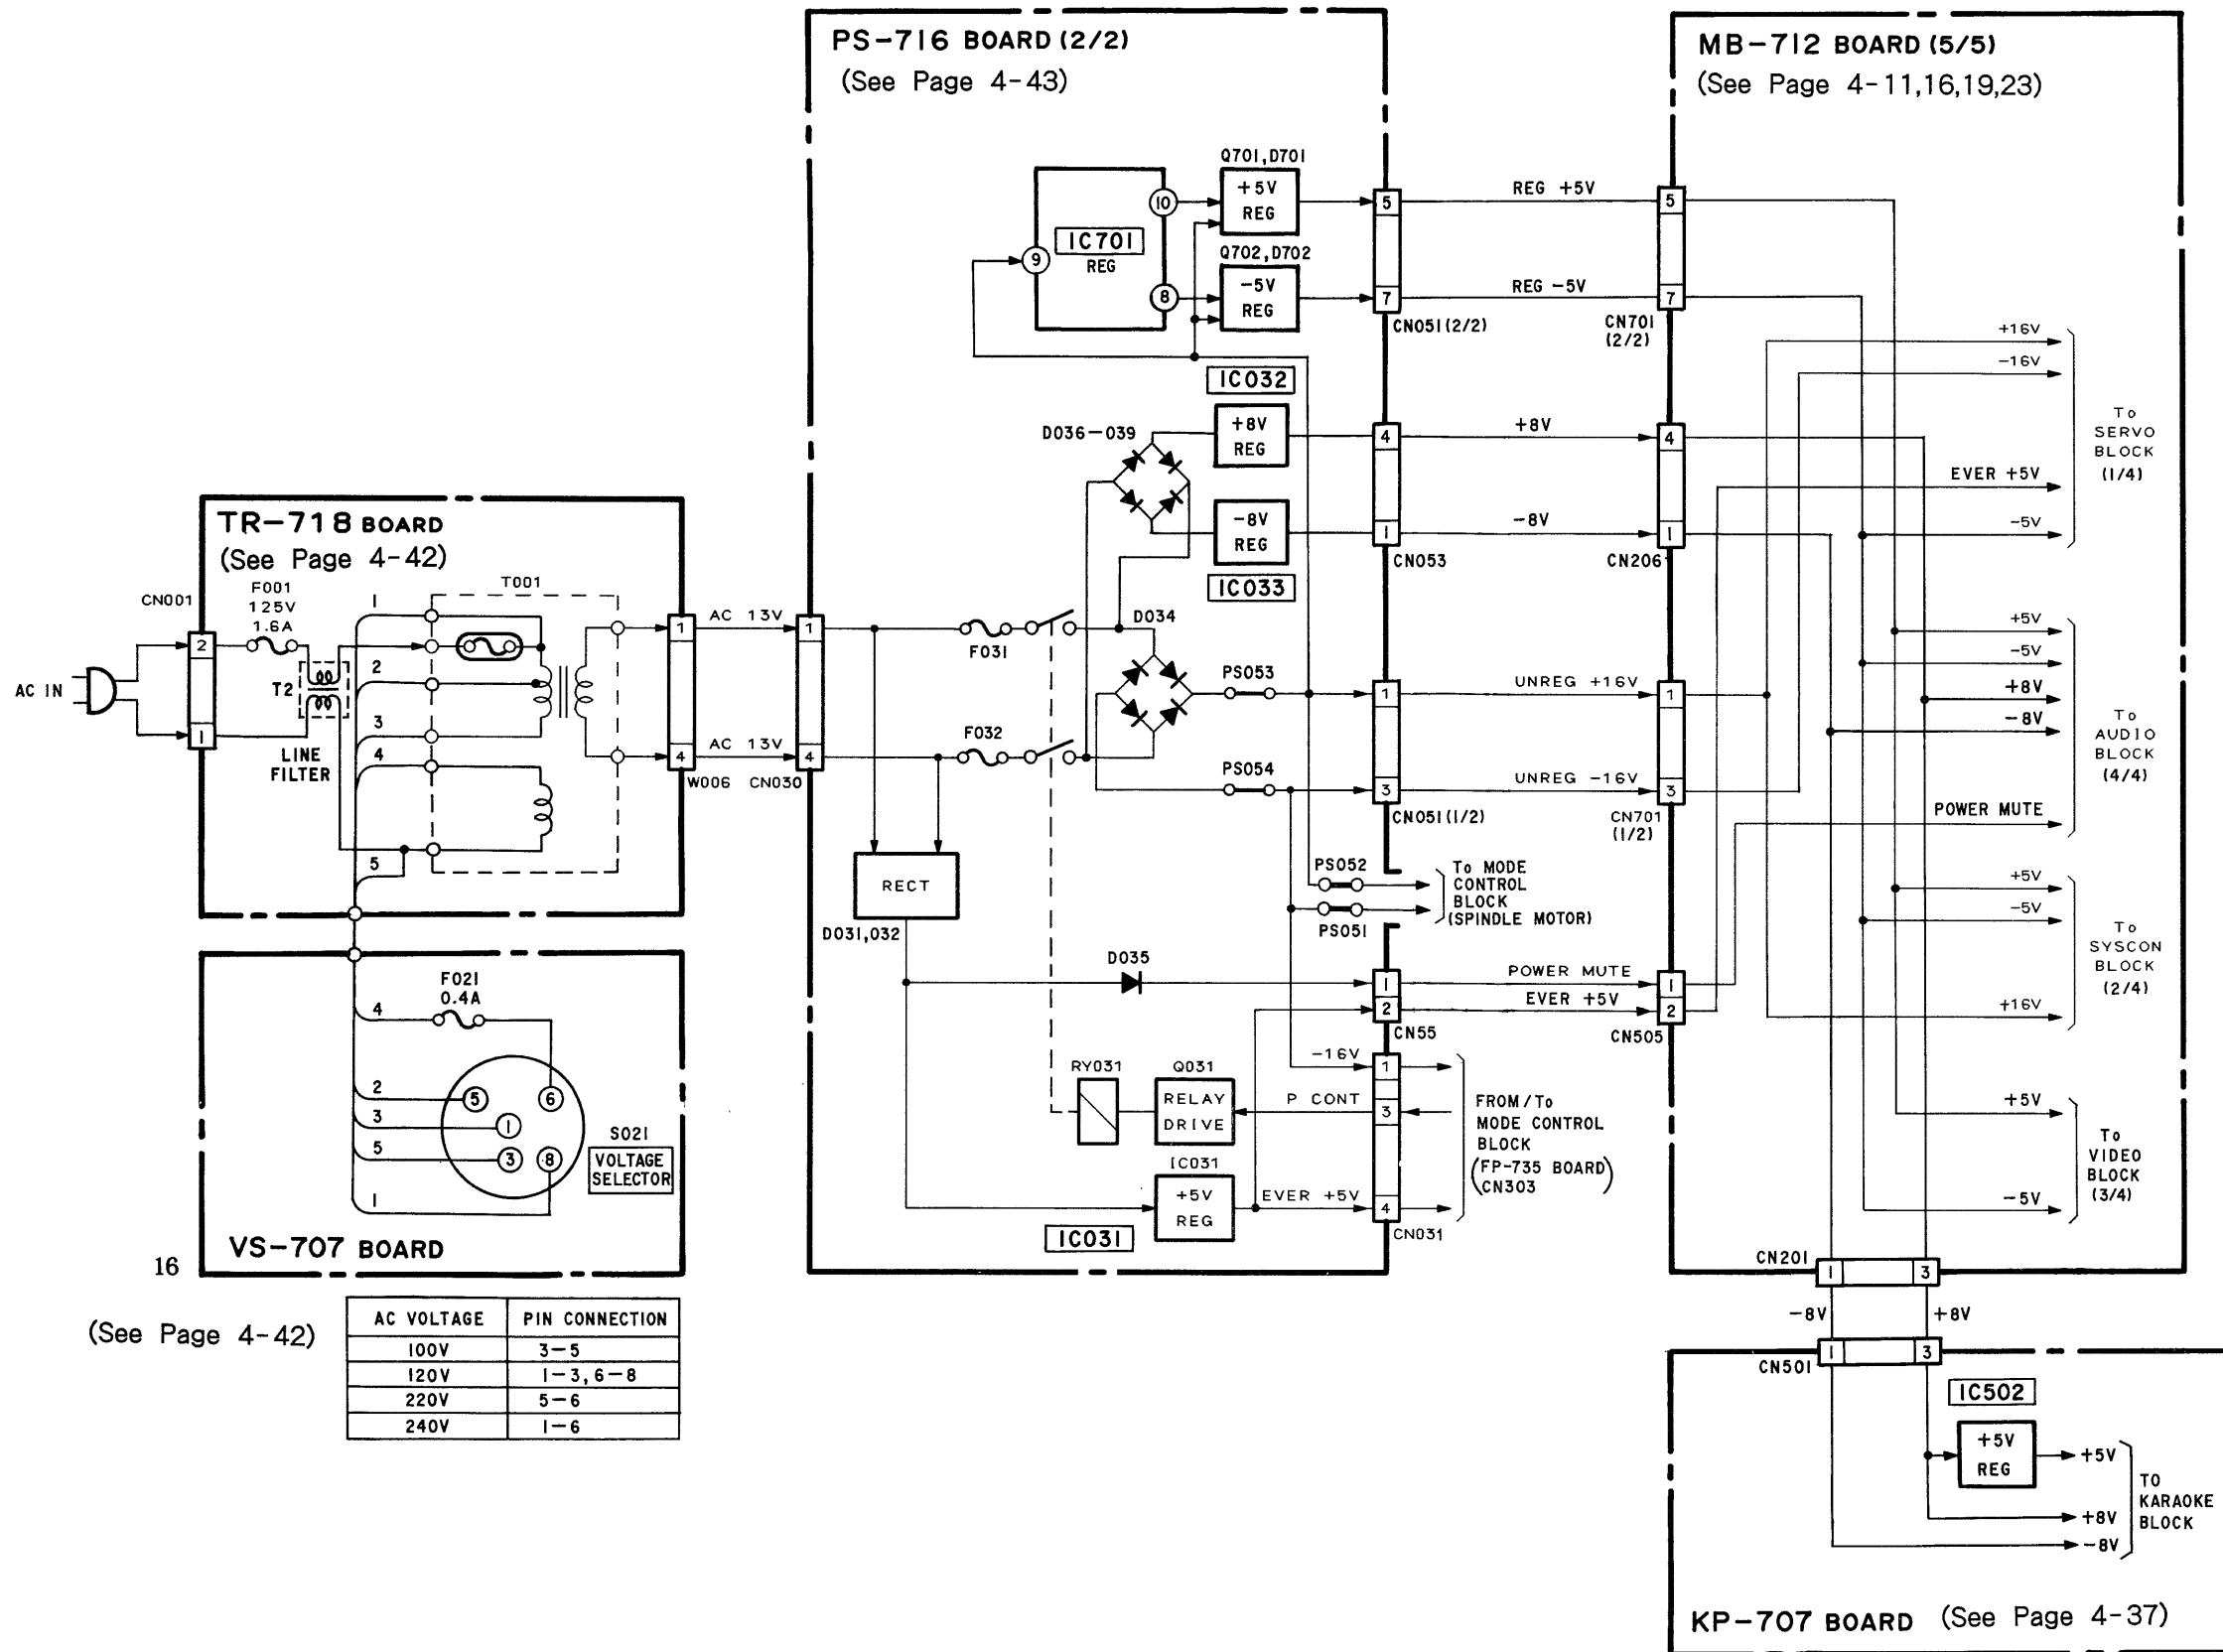


16

(See Page 4-42)

AC VOLTAGE	PIN CONNECTION
100V	3-5
120V	1-3, 6-8
220V	5-6
240V	1-6

SECTION 4  
PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

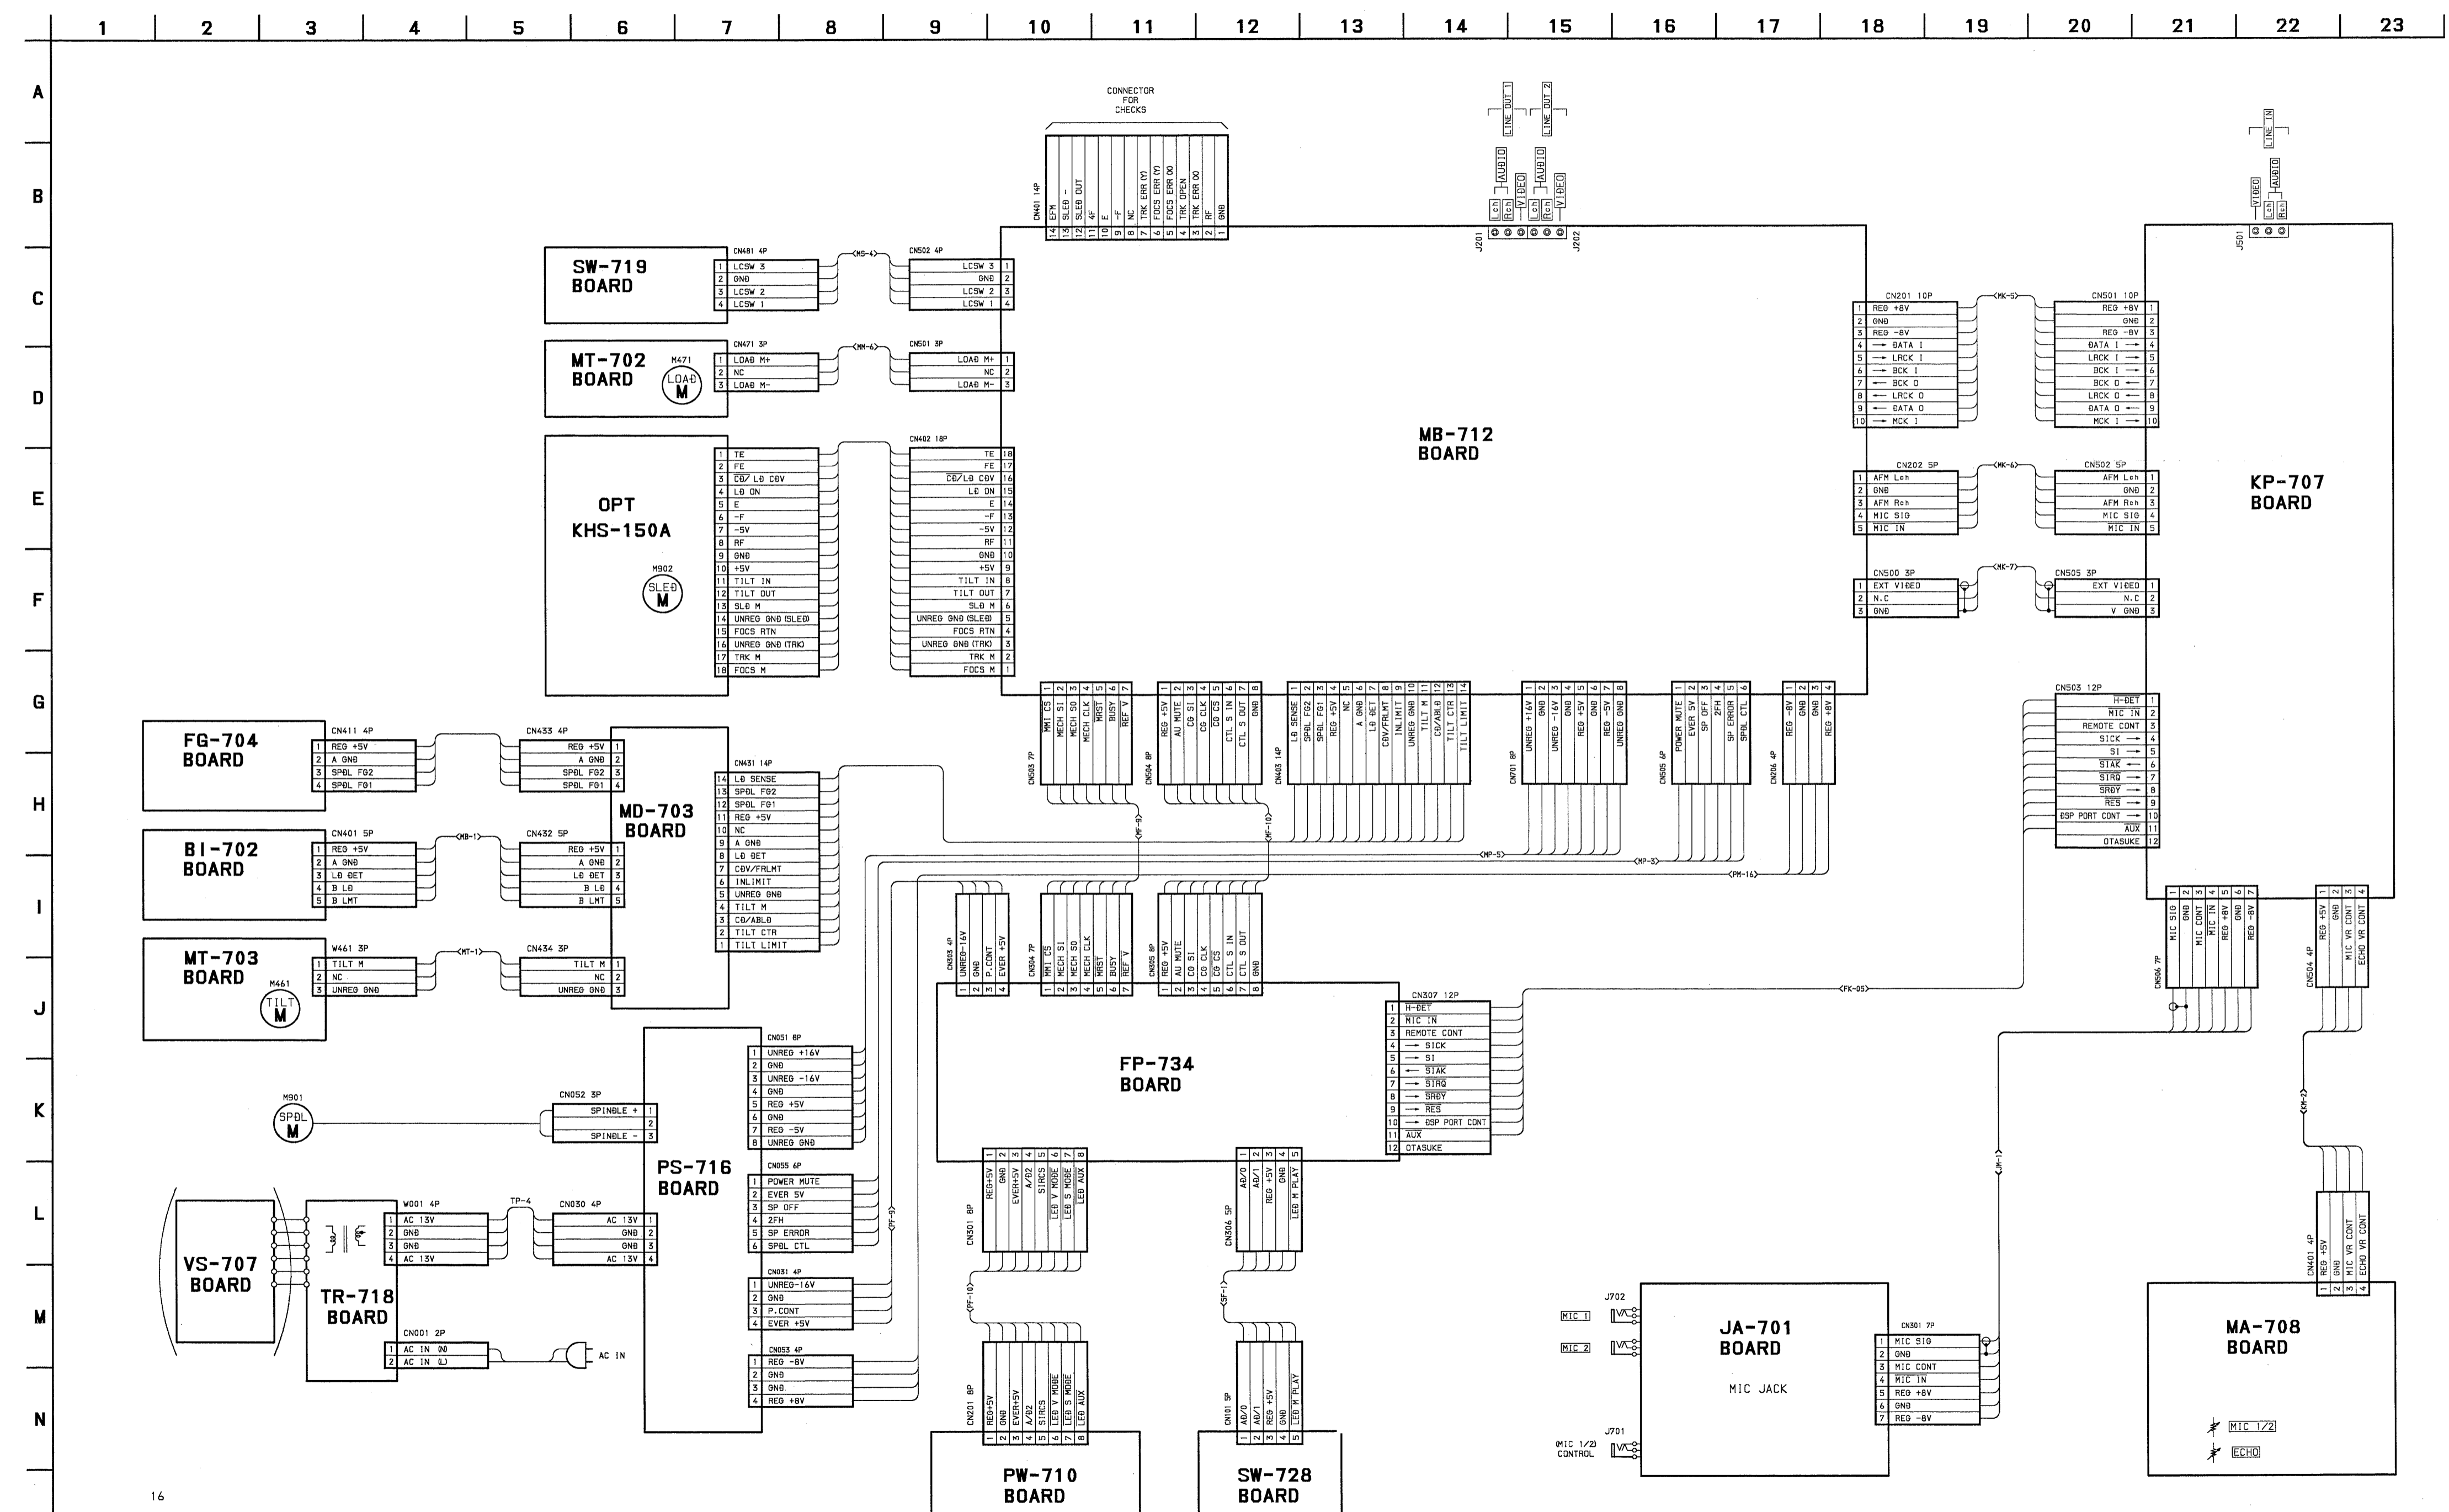

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS. (In addition to this, the necessary note is printed in each block.)

- For printed wiring boards:
- : indicated a lead wire mounted on the component side.
  - : indicated a lead wire mounted on the conductor side.
  - ▭ : Pattern from the side which enables seeing.
  - ▨ : Pattern of the rear side.

Caution:

Pattern face side: Parts on the pattern face side seen from the (Conductor Side) pattern face are indicated.


Parts face side: Parts on the parts face side seen from the (Component side) parts face are indicated.

- For schematic diagram:
- Caution when replacing chip parts.
  - New parts must be attached after removal of chip.
  - Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
  - All resistors are in ohms, 1/10 W unless otherwise noted.
  - Chip resistors: 1/10 W unless otherwise noted.
  - k Ω : 1000 Ω, M Ω : 1000k Ω.
  - All capacitors are in μF unless otherwise noted. pF: μμF.
  - 50V or less are not indicated except for electrolytics and tantalums.
  - All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
  - ▭ : nonflammable resistor.
  - ▨ : fusible resistor.
  - ▩ : panel designation.
  - △ : internal component.
  - ▭ : adjustment for repair.\*
  - ▨ : B + Line.\*
  - ▨ : B - Line.\*
  - \* Voltage are dc between measurement points and ground when playing back the reference disc (HLV-8) color bar segment.\*
  - \* Readings are taken with a digital multimeter (DC10 MΩ).
  - \* Voltage variations may be noted due to normal production tolerances.
  - ➔ : IN/OUT direction of B line (+, -).\*
  - : Circled numbers refer to waveforms.\*

When indicating parts by reference number, please include the board name.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.



- \* : indicated by the color red.

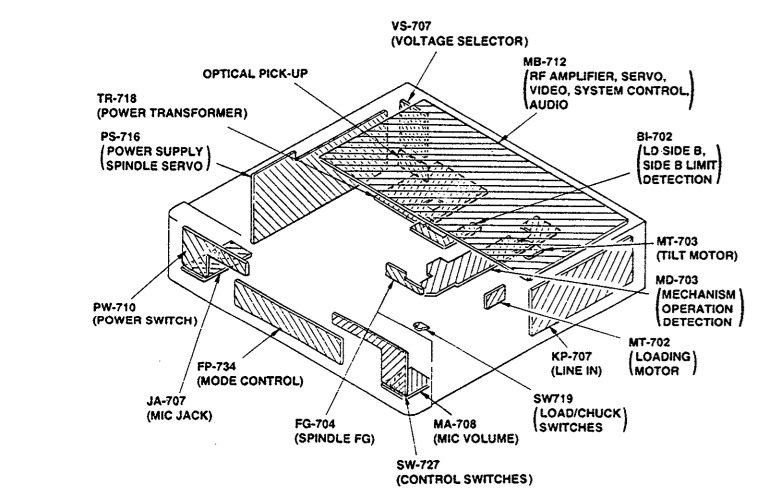




**MB-712 BOARD**

CN201	B-27	0001	G-16
CN202	C-27	0002	G-12
CN206	B-25	0003	G-16
CN401	A-20	0004	G-18
CN402	A-20	0005	G-19
CN403	B-23	0006	G-9
CN500	D-27	0007	G-19
CN501	C-27	0008	G-18
CN502	E-27	0009	C-16
CN503	D-14	0010	C-15
CN504	E-14	0011	G-12
CN505	B-15	0012	F-16
CN701	B-15	0013	E-16
		0014	G-10
CT001	G-19	0015	E-17
CT501	G-6	0016	F-9
		0017	F-9
0001	G-16	0018	F-9
0002	D-17	0019	A-22
0003	C-24	0021	A-6
0202	E-27	0024	A-6
0203	D-26	0026	D-23
0205	D-1	0031	C-15
0208	D-26	0201	E-1
0251	A-26	0202	F-26
0253	A-24	0203	A-26
0401	C-5	0204	B-2
0402	C-23	0205	D-1
0403	E-10	0206	E-24
0405	B-7	0207	A-25
0502	A-18	0209	B-3
0503	F-21	0210	C-1
0506	D-7	0211	C-1
0507	E-21	0212	C-1
0508	G-4	0213	E-26
		0214	E-26
IC001	E-12	0215	D-1
IC002	G-12	0216	C-1
IC003	C-11	0217	D-1
IC004	G-10	0218	F-3
IC005	E-12	0219	G-3
IC006	E-9	0222	D-1
IC007	C-12	0400	A-22
IC008	E-2	0401	C-9
IC009	E-10	0403	A-19
IC011	C-4	0404	A-19
IC201	D-3	0405	B-19
IC202	B-2	0406	A-19
IC203	E-3	0407	B-22
IC204	G-2	0408	B-8
IC205	E-1	0409	D-6
IC206	C-2	0410	B-7
IC207	C-3	0411	C-19
IC208	B-2	0412	A-6
IC209	B-2	0500	G-5
IC401	C-8	0501	B-24
IC402	B-22	0502	D-7
IC403	C-6	0503	D-6
IC404	E-23	0504	D-6
IC405	C-22	0505	D-6
IC406	B-8	0506	G-21
IC409	C-21	0507	G-22
IC410	D-7	0509	B-12
IC411	C-10	051	B-12
IC420	B-8		
IC500	G-4	RV001	G-17
IC501	E-6	RV002	E-16
IC502	F-6	RV401	E-19
IC503	A-19	RV402	D-19
IC504	F-21	RV501	G-24
IC505	F-8		
IC506	F-21		
IC507	G-24		

**MB-712 (VIDEO, RF AMPLIFIER, SERVO, SYSTEM CONTROL, AUDIO) PRINTED WIRING BOARD**  
—Ref. No. MB-712 Board, 1,000 Series—

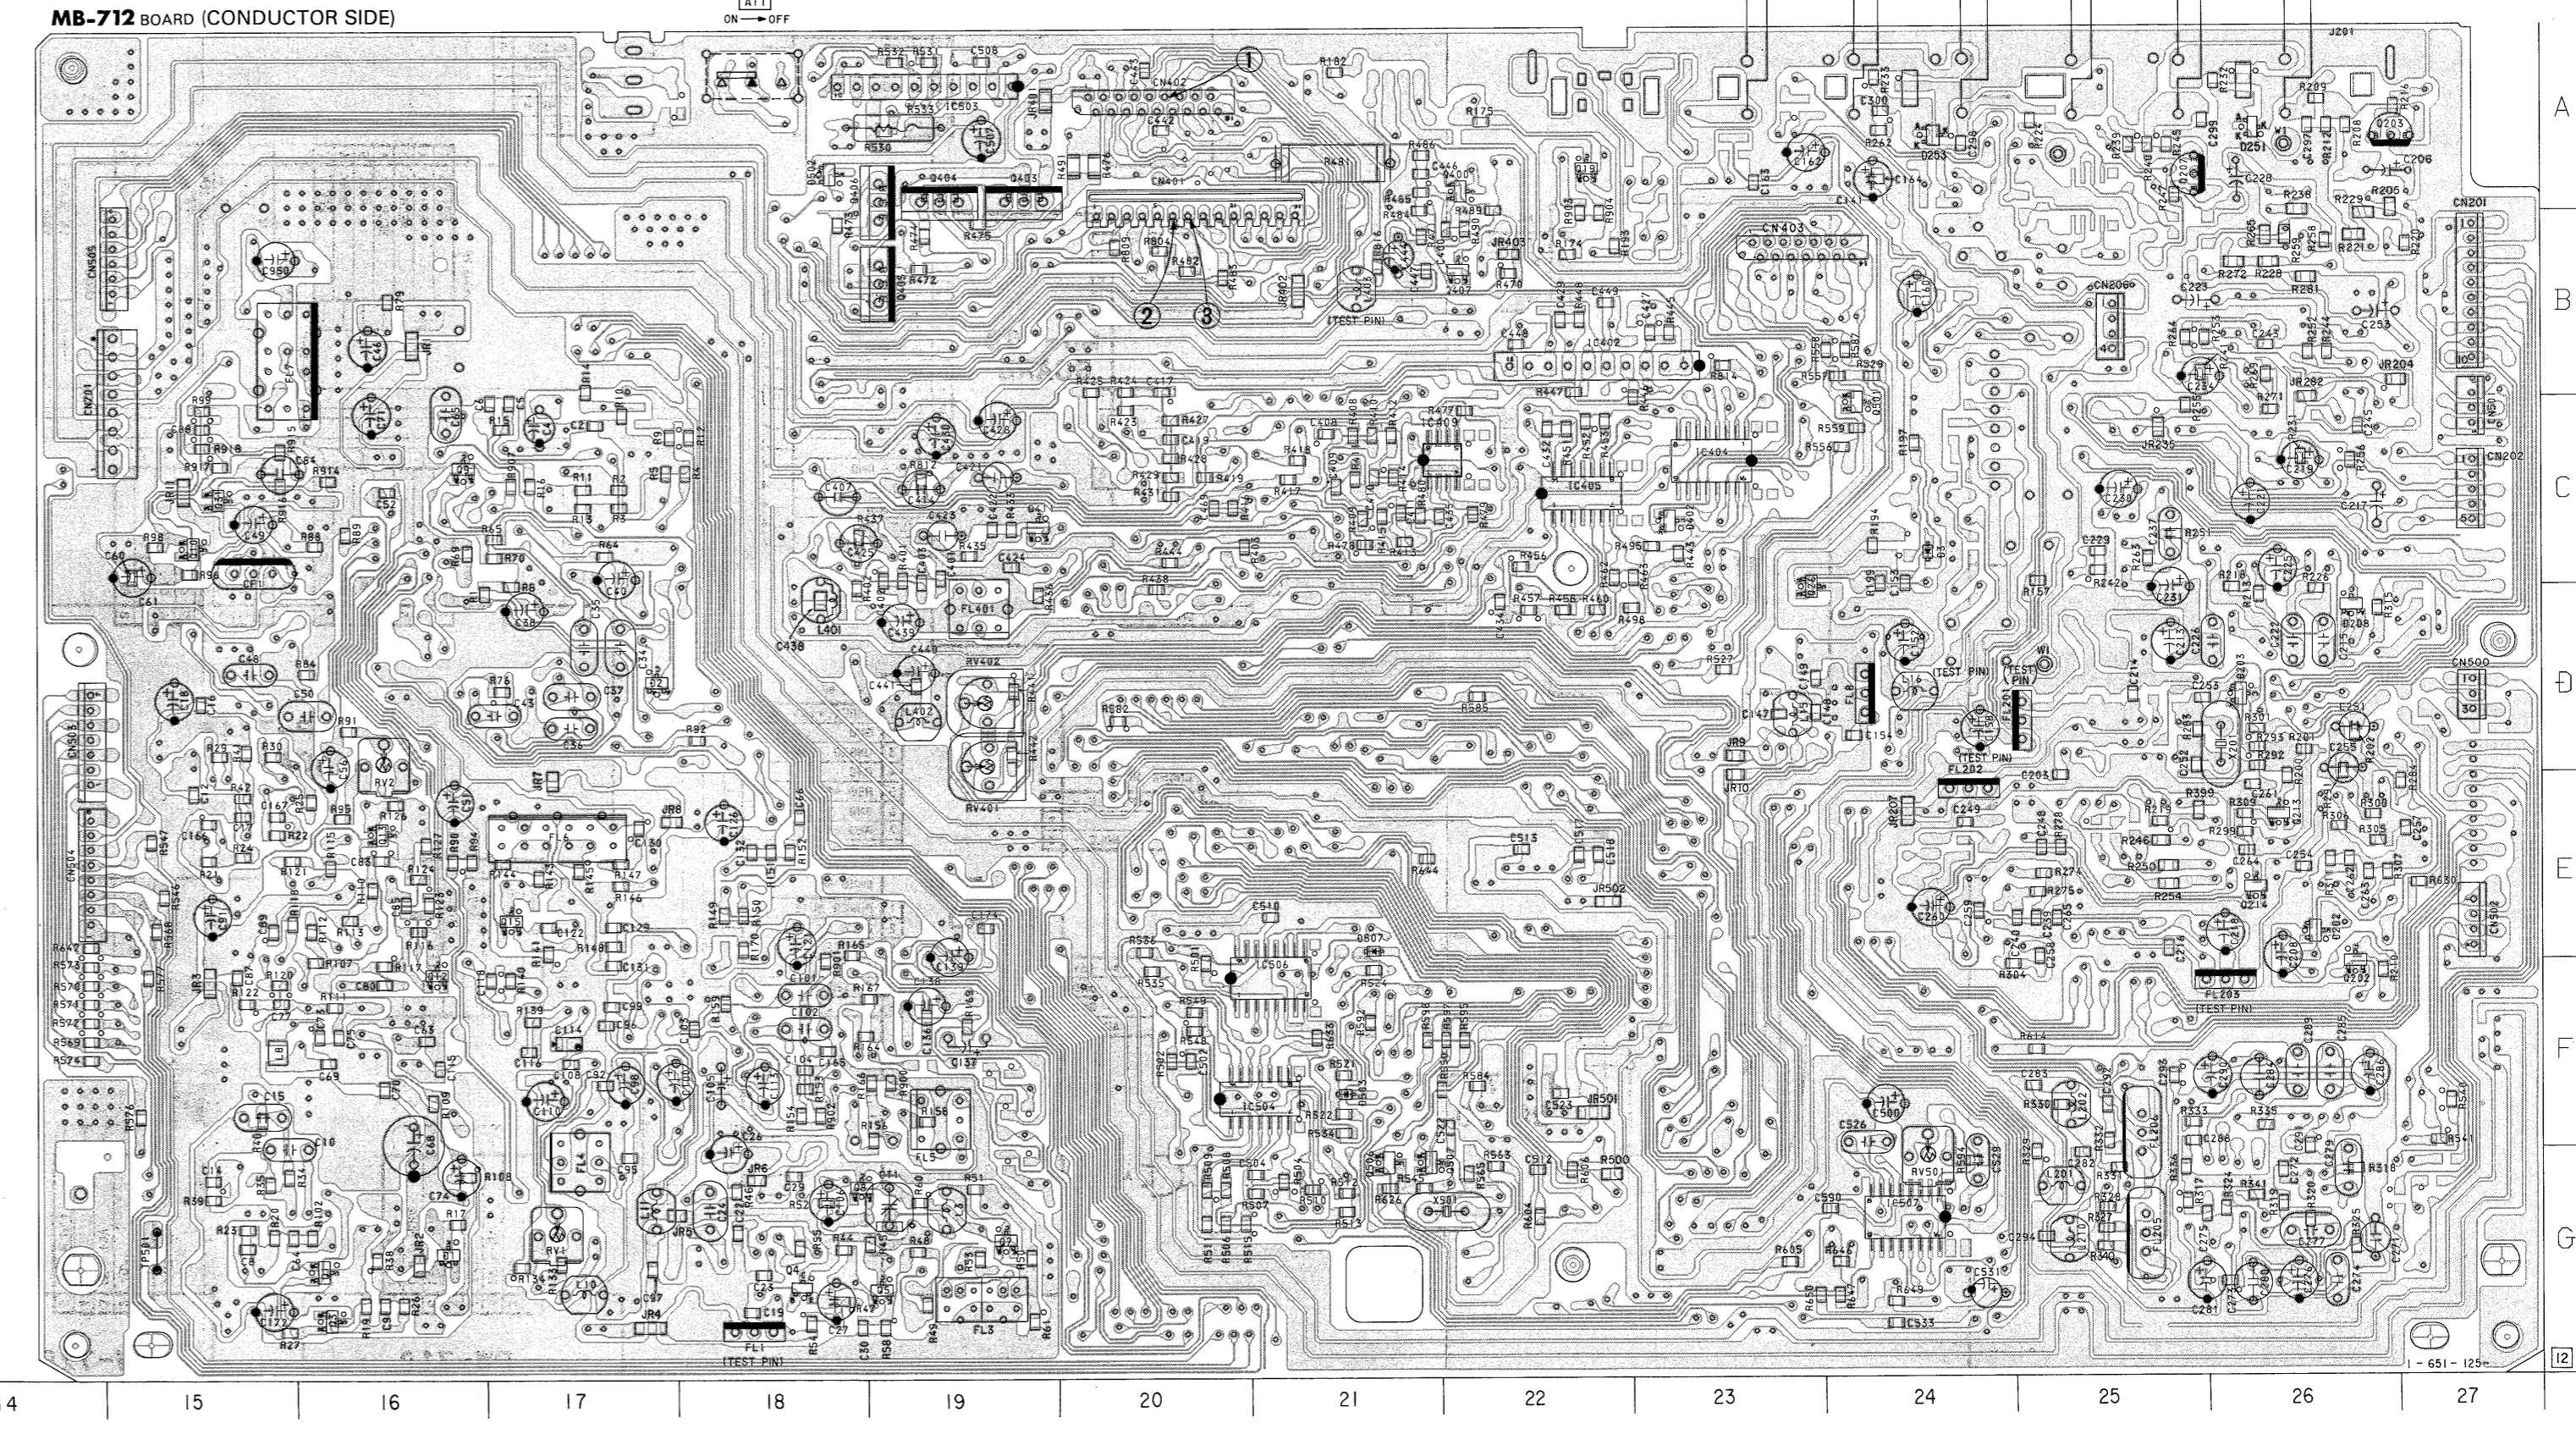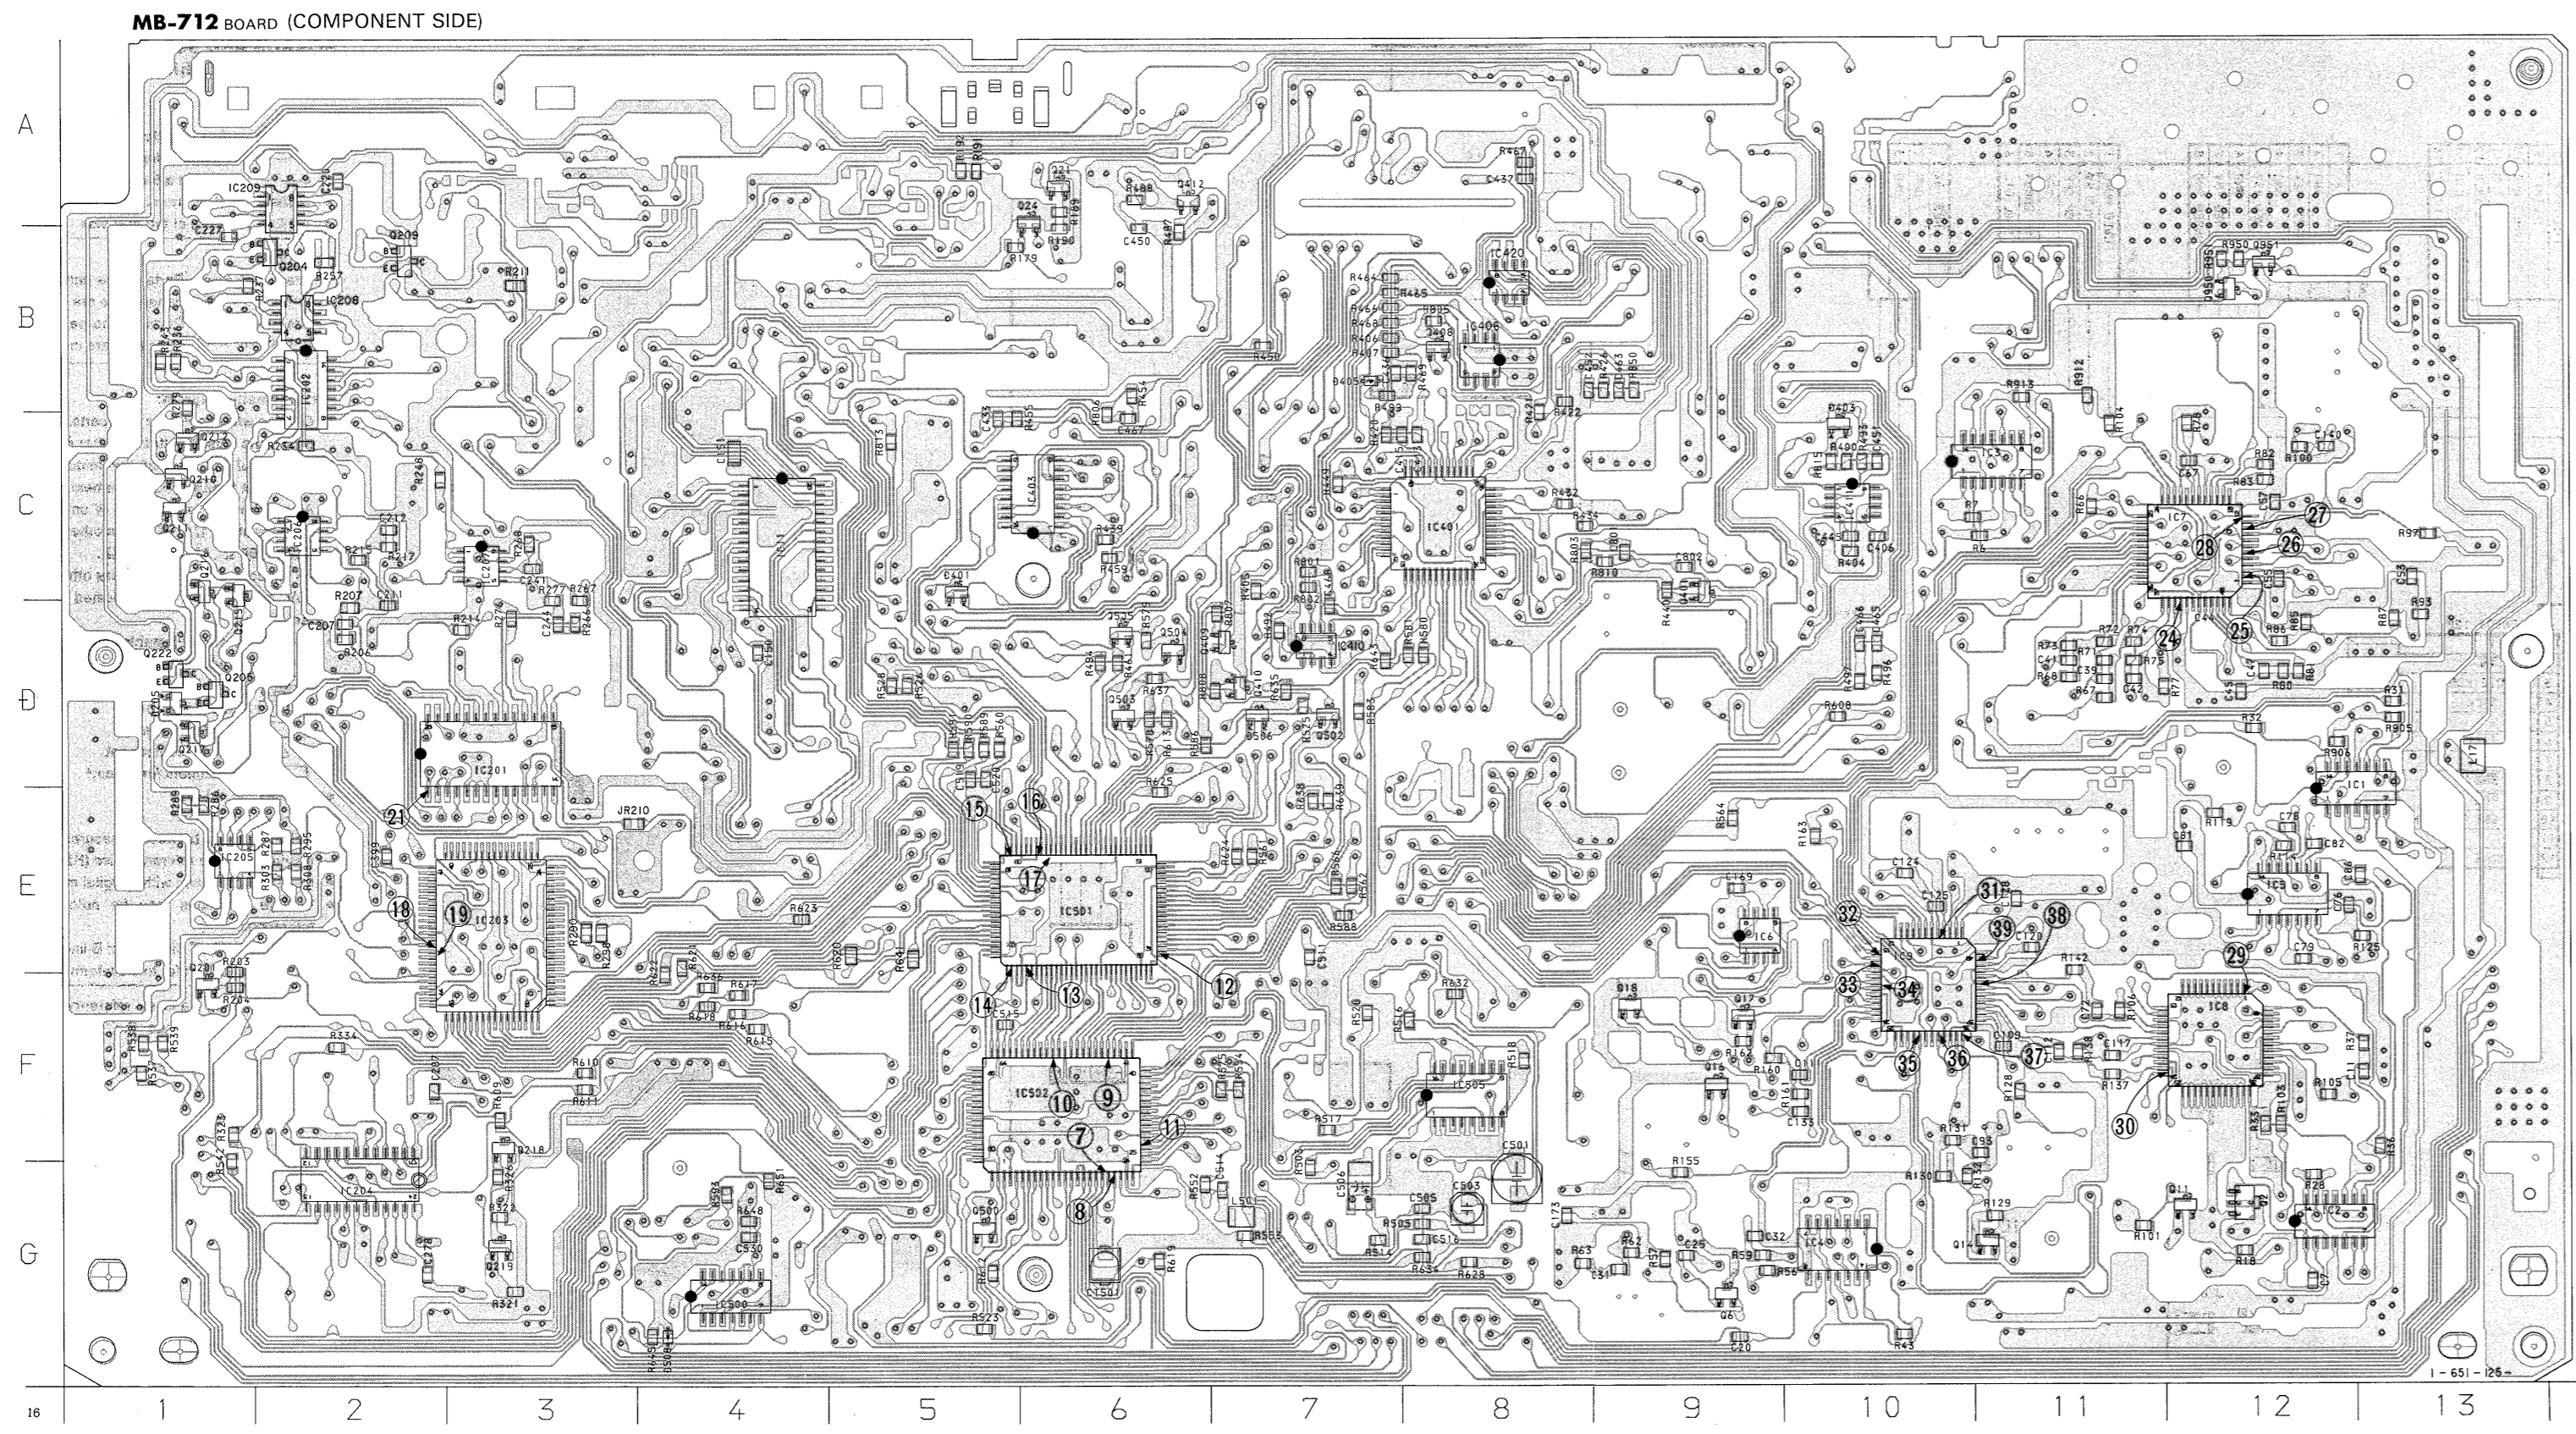

MB-712 (RF AMPLIFIER, SERVO) SCHEMATIC DIAGRAM  
 —Ref. No. MB-712 Board; 1,000 Series—

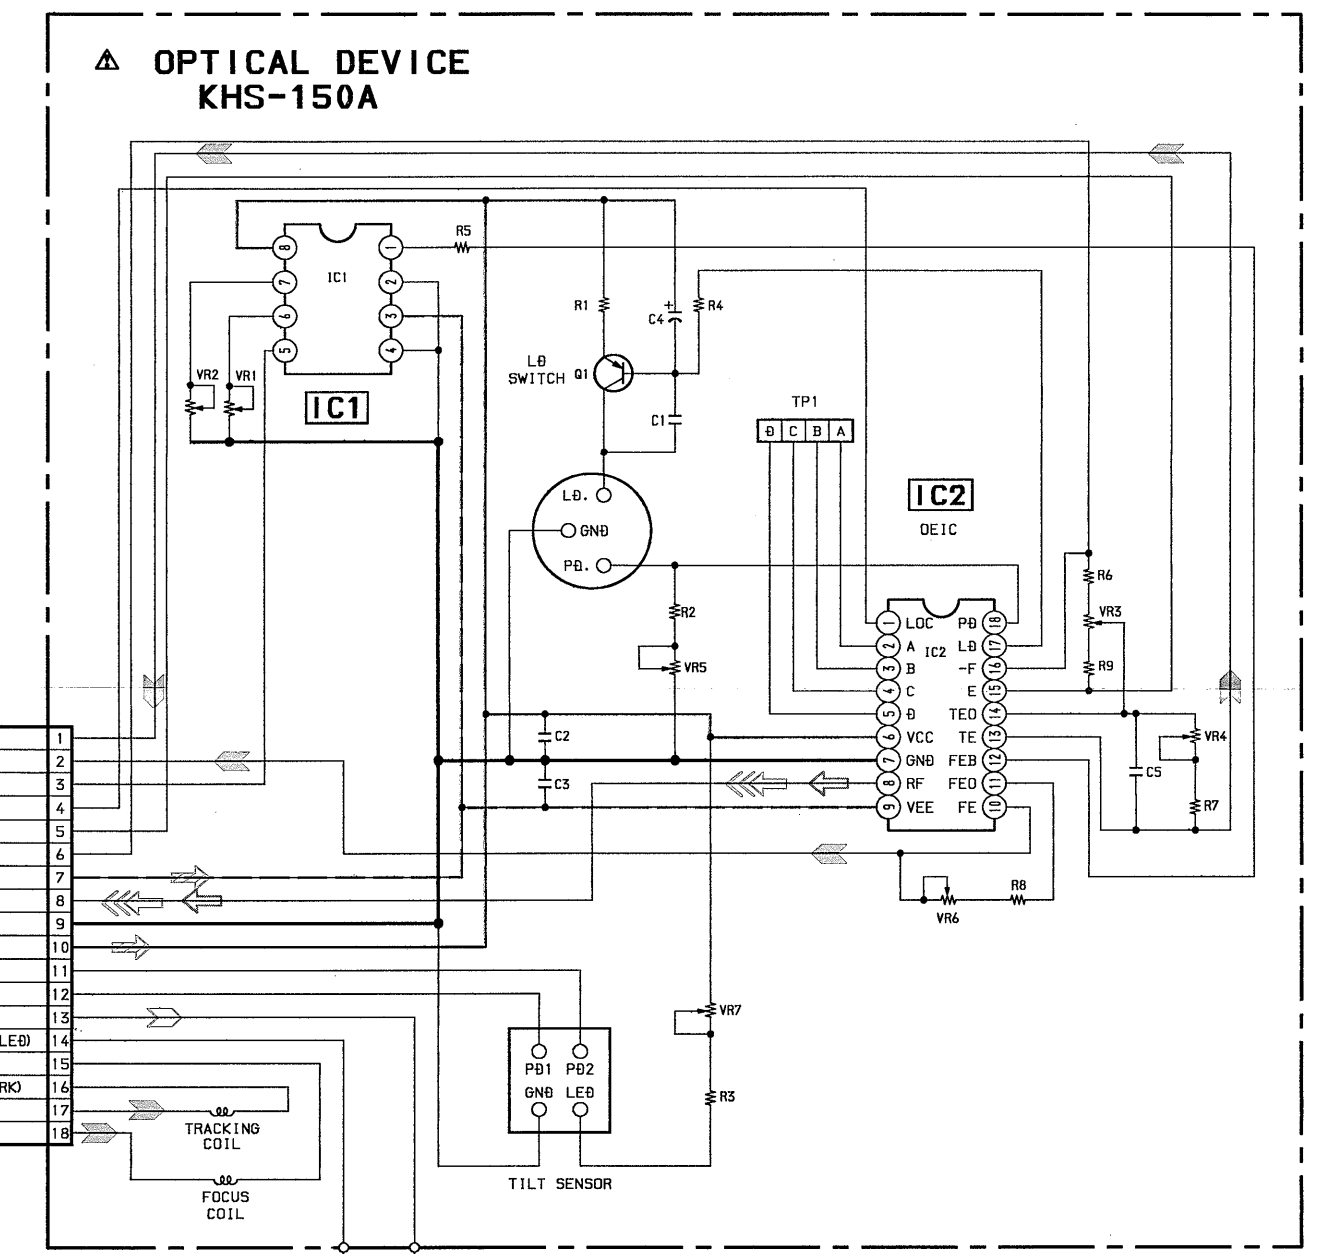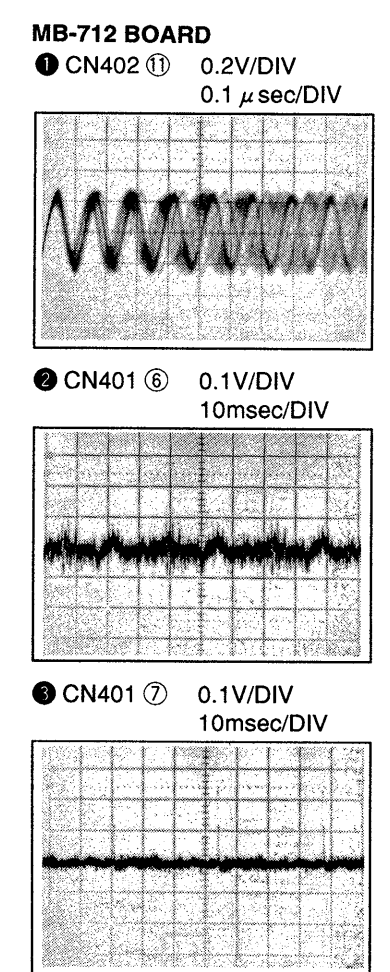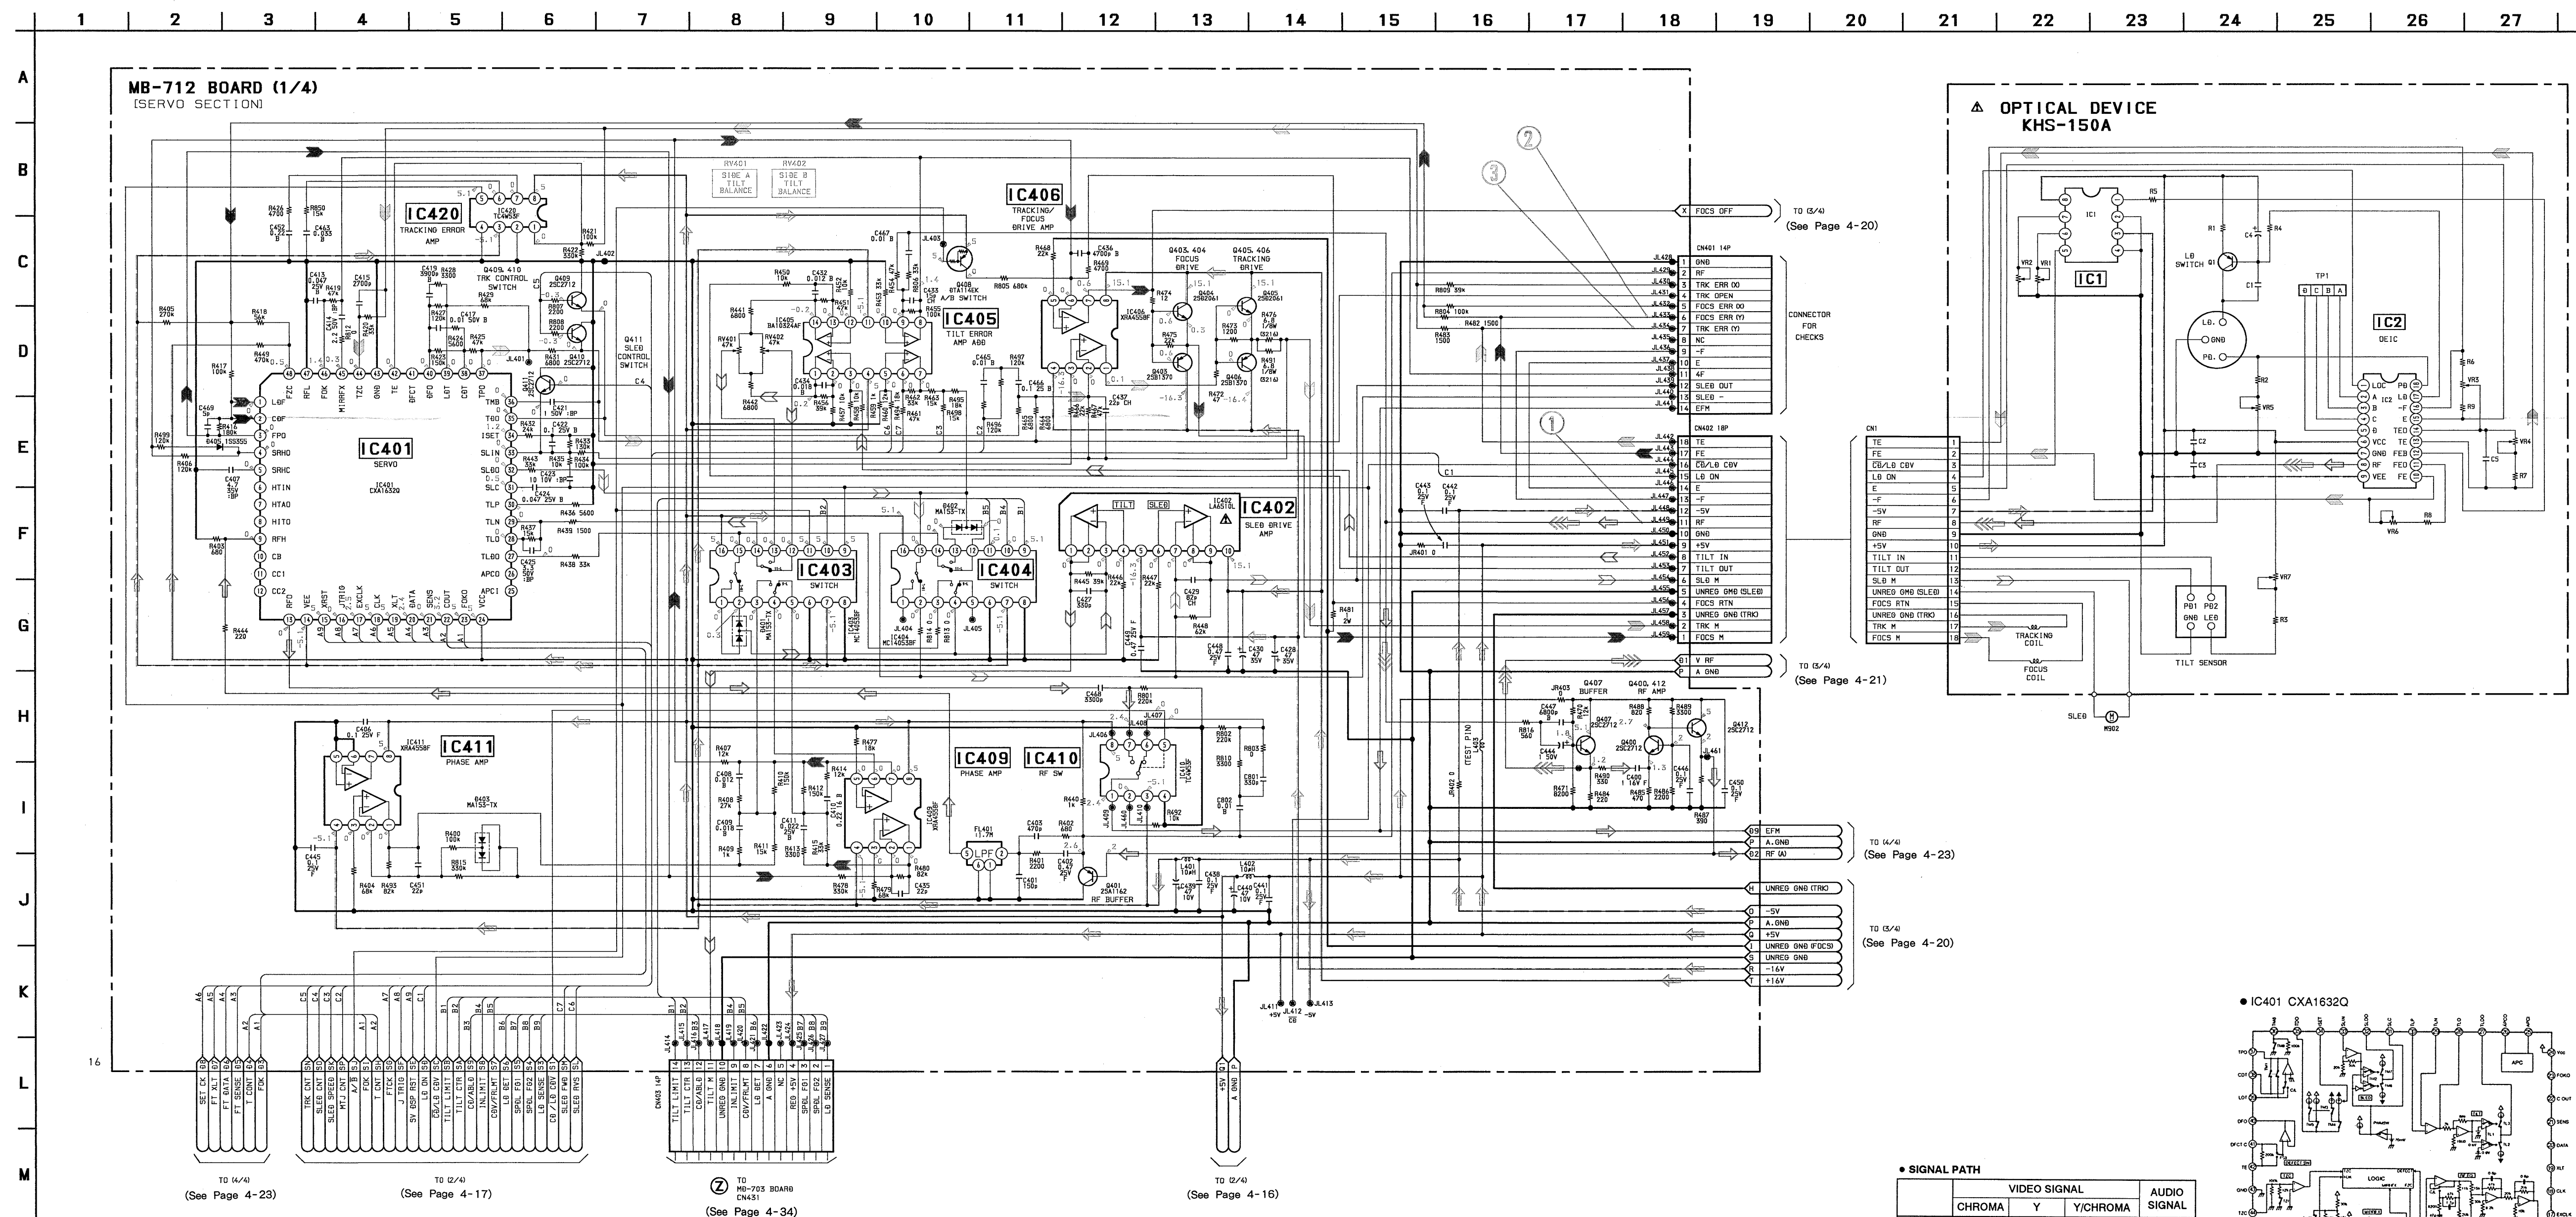

CONNECTOR FOR CHECKS

TO (5/4) (See Page 4-20)

TO (5/4) (See Page 4-21)

TO (4/4) (See Page 4-23)

TO (5/4) (See Page 4-20)

TO (4/4) (See Page 4-23)


TO (2/4) (See Page 4-17)






TO MD-703 BOARD CN431 (See Page 4-34)

TO (2/4) (See Page 4-16)

● SIGNAL PATH



	VIDEO SIGNAL	AUDIO SIGNAL
PB	CHROMA Y Y/CHROMA	
Spindle phase servo		
Spindle servo (Speed and phase)		
Tracking servo		
Sled servo		
Focus servo		
Skew servo		


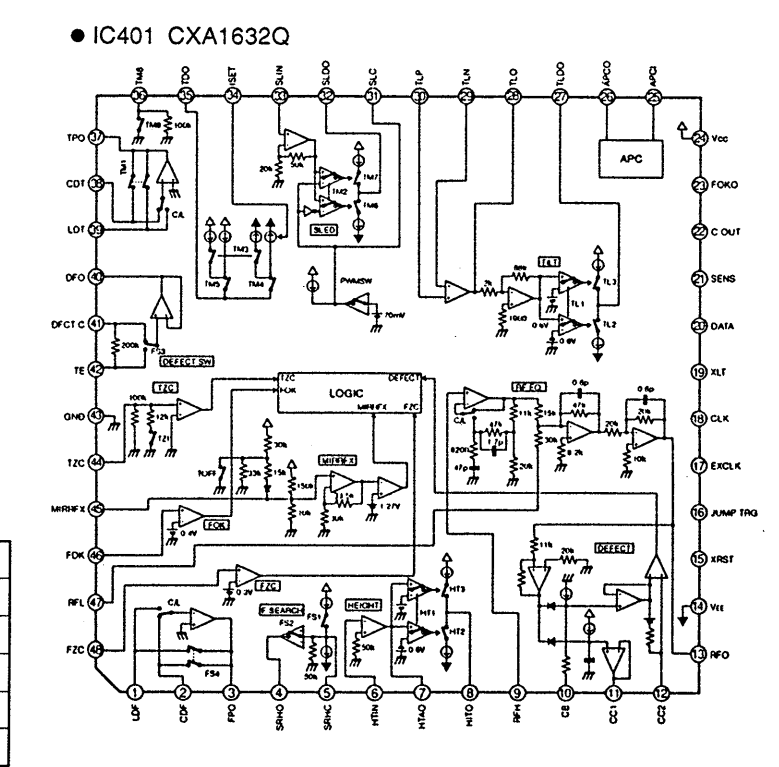


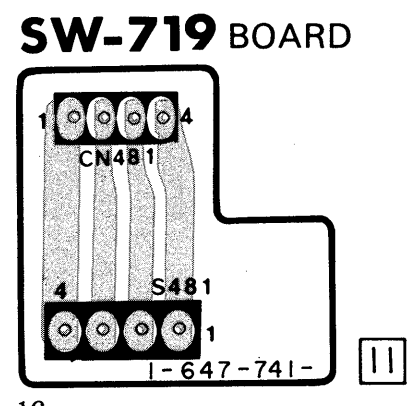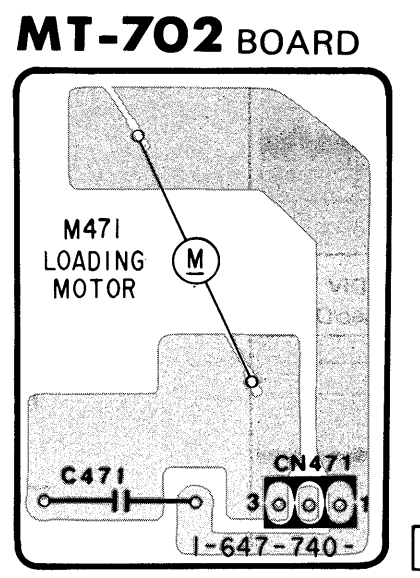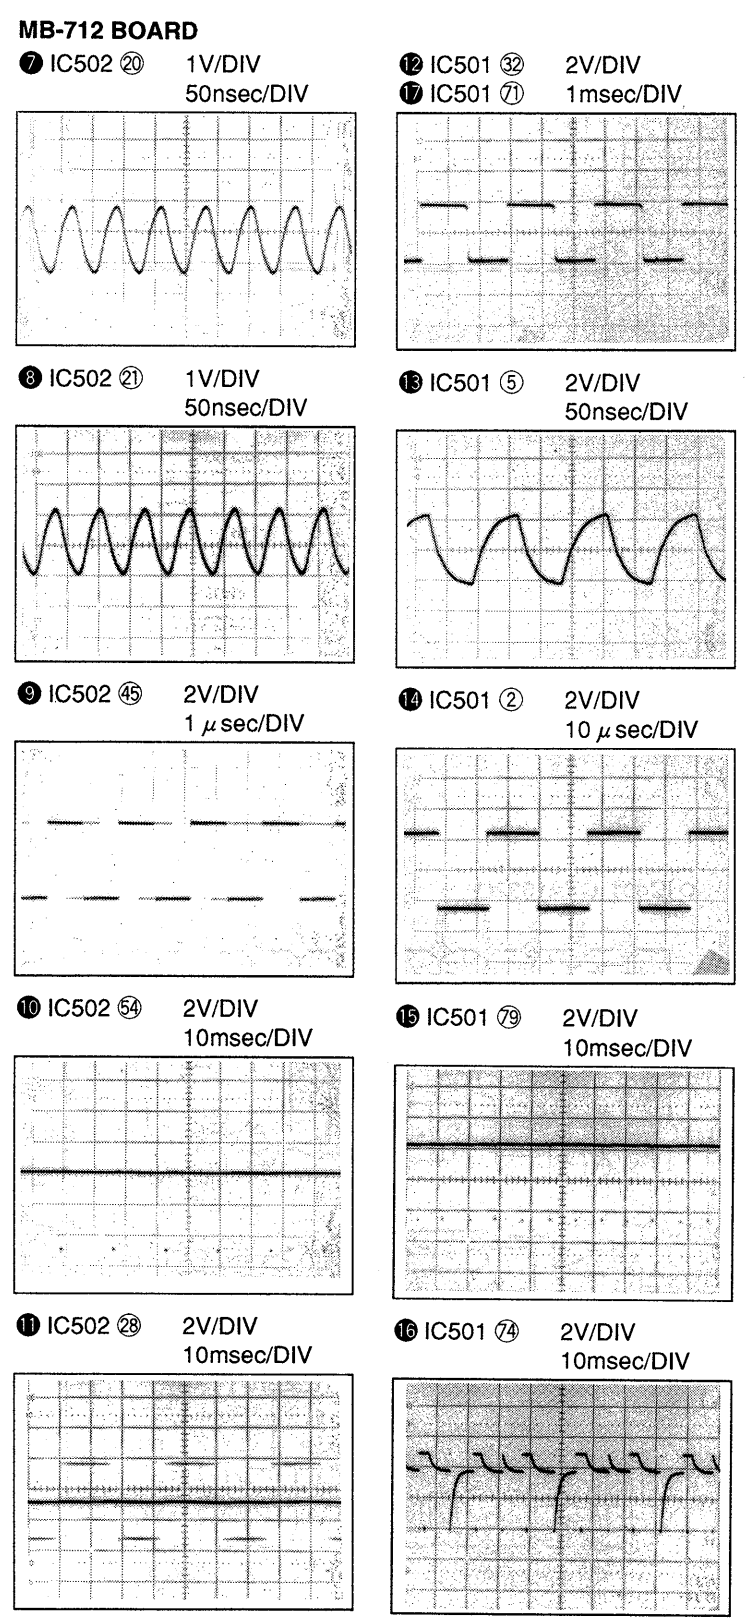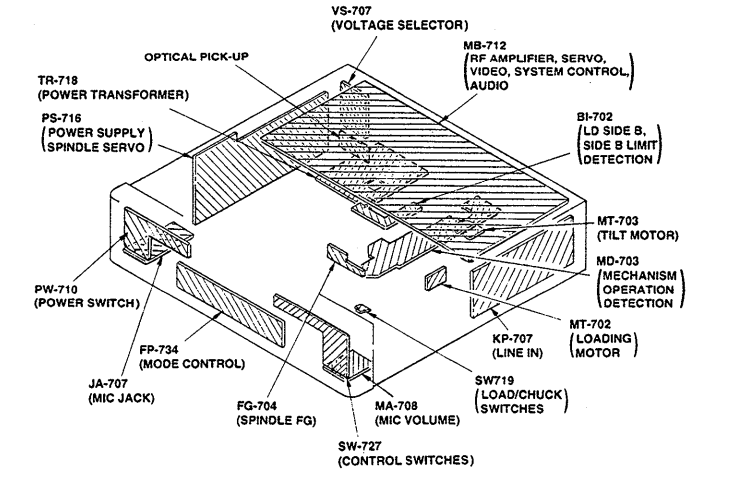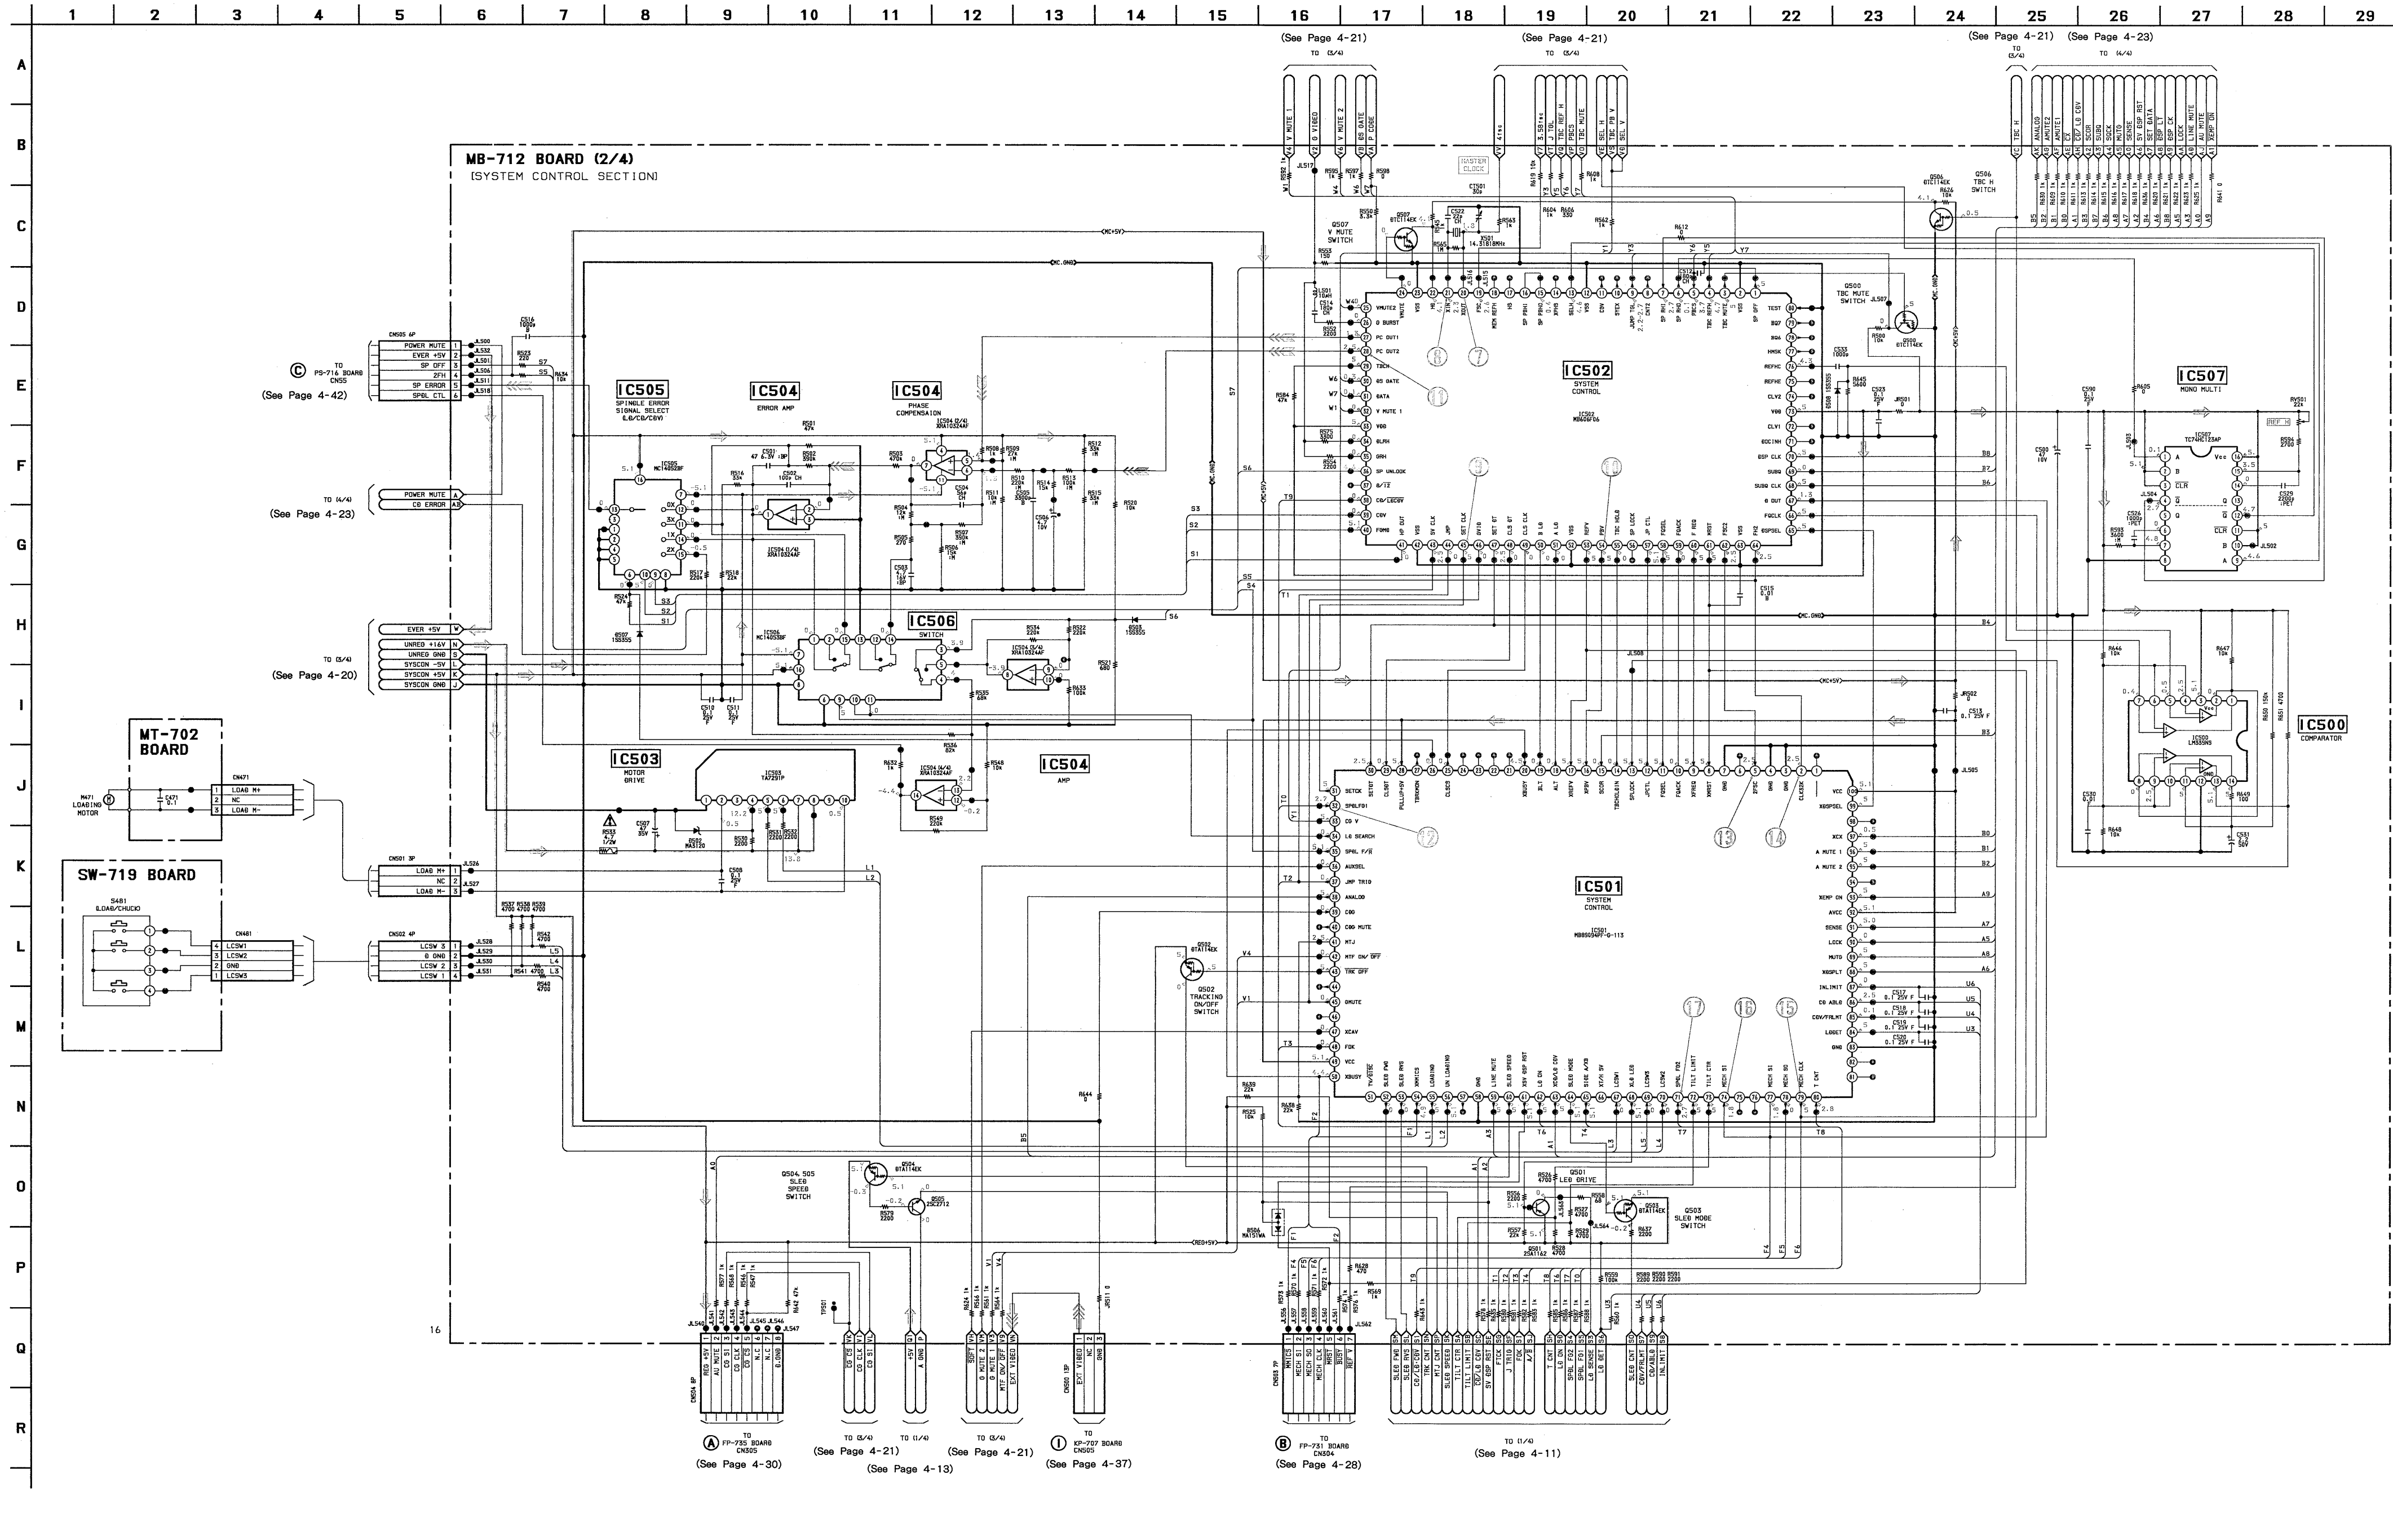

• SIGNAL PATH

Spindle phase servo	
Spindle servo (Speed and phase)	→
Tracking servo	→
Sled servo	

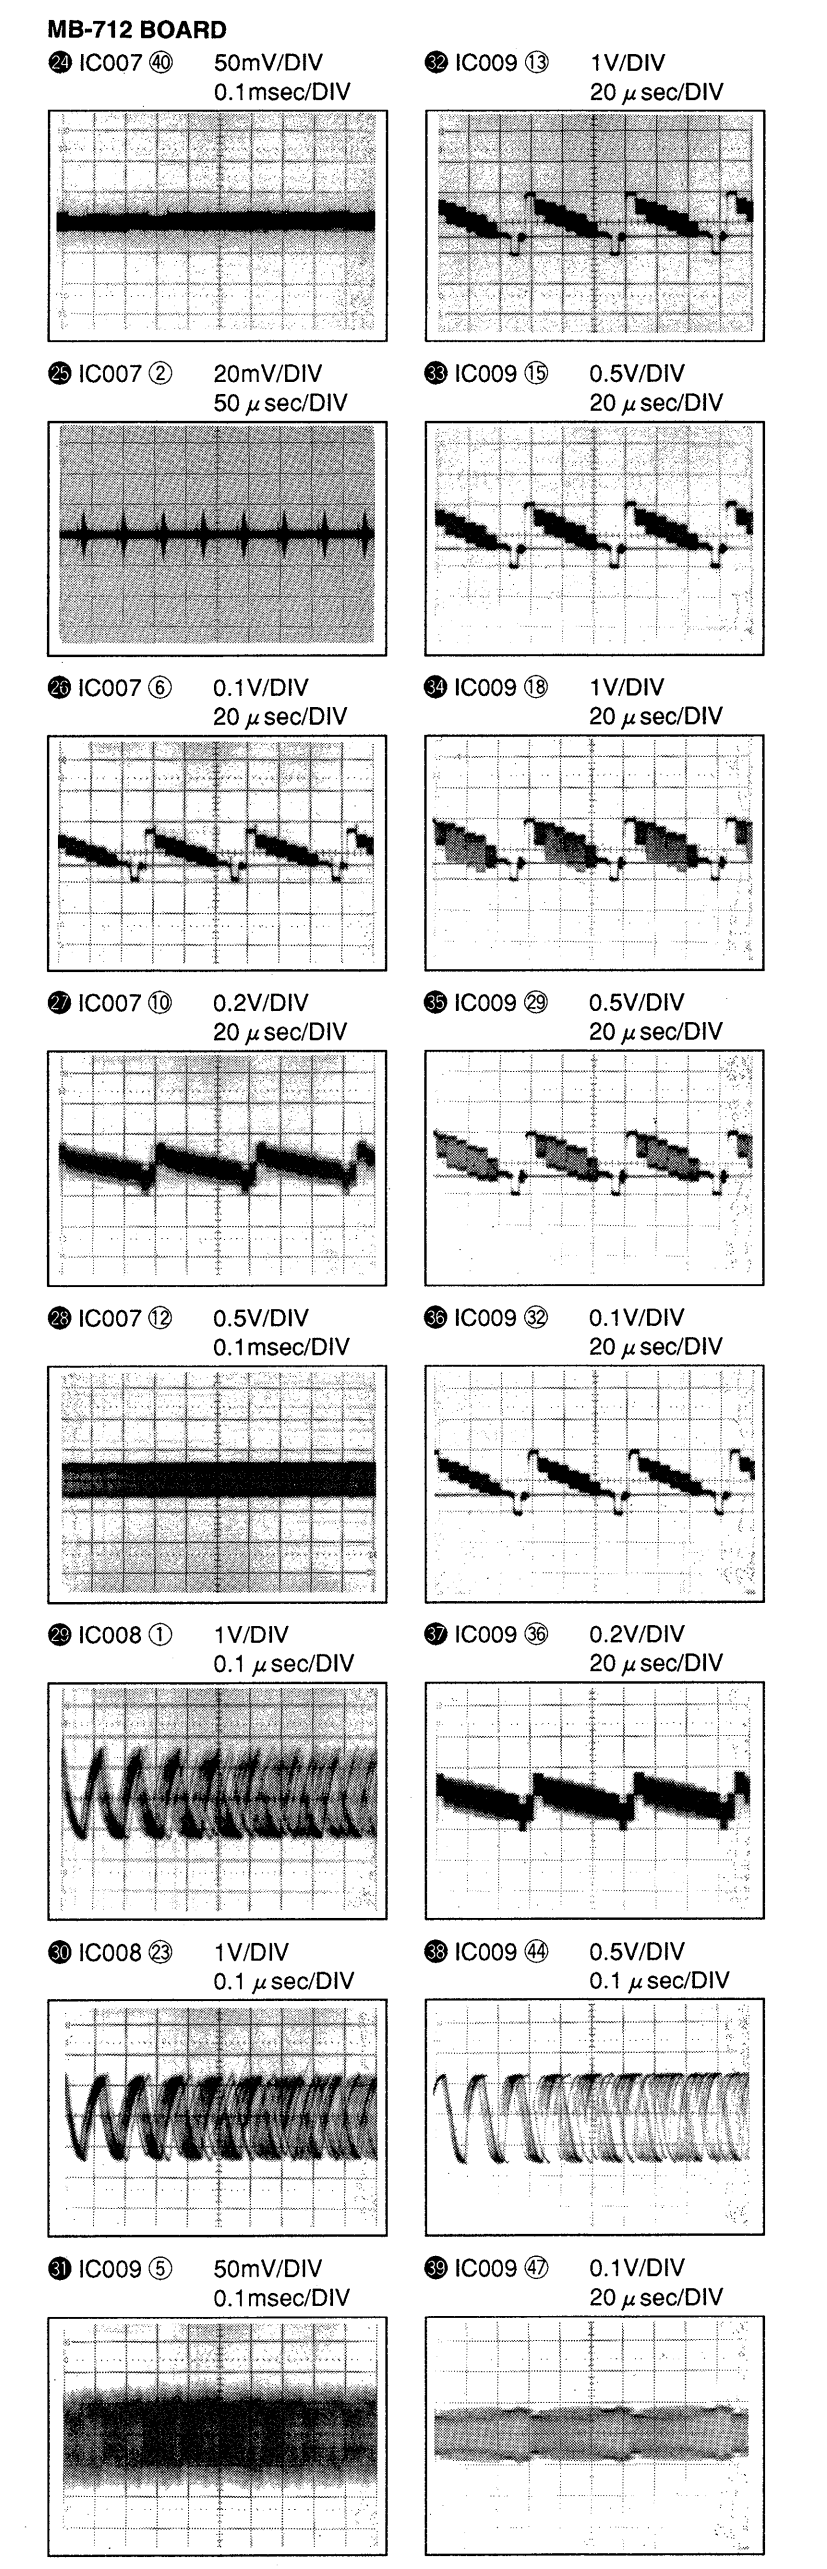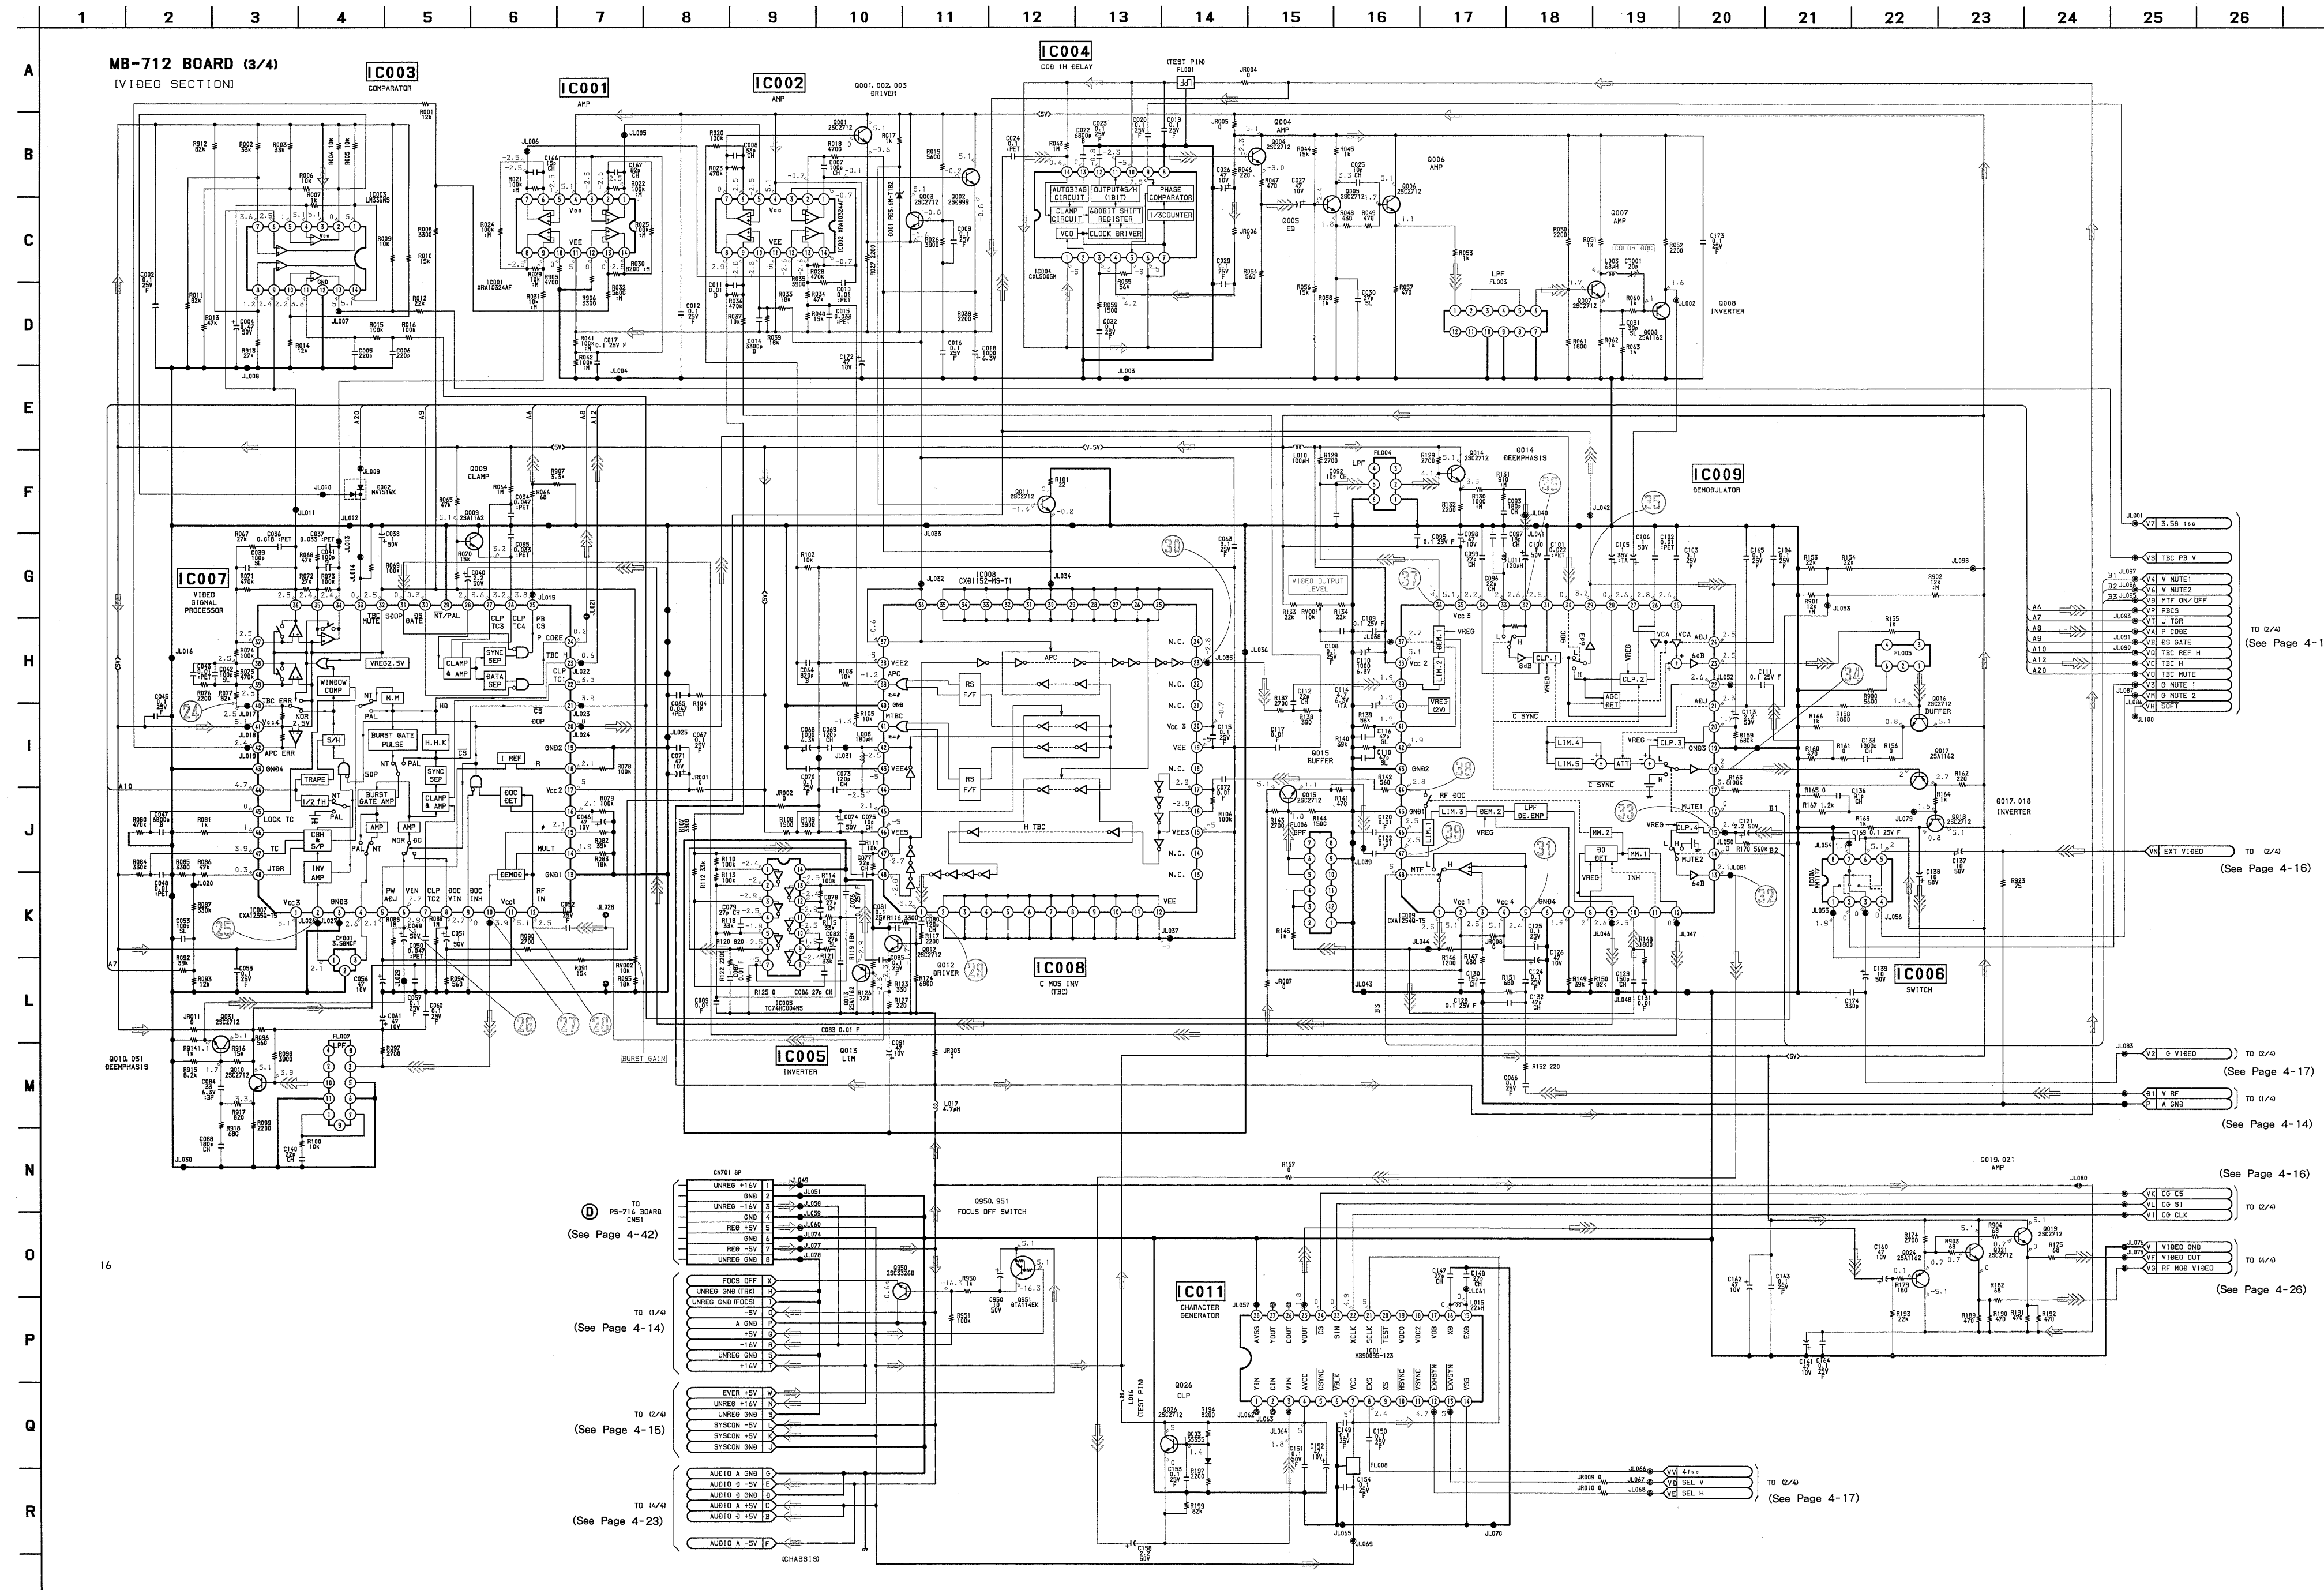

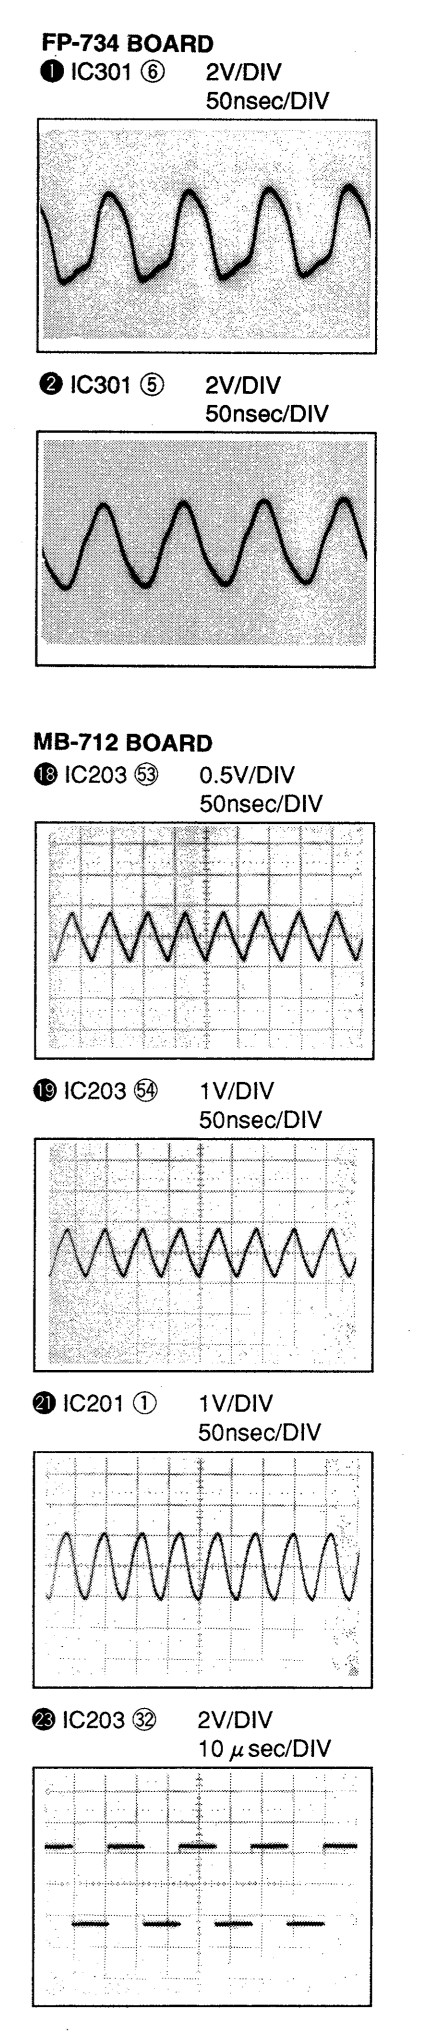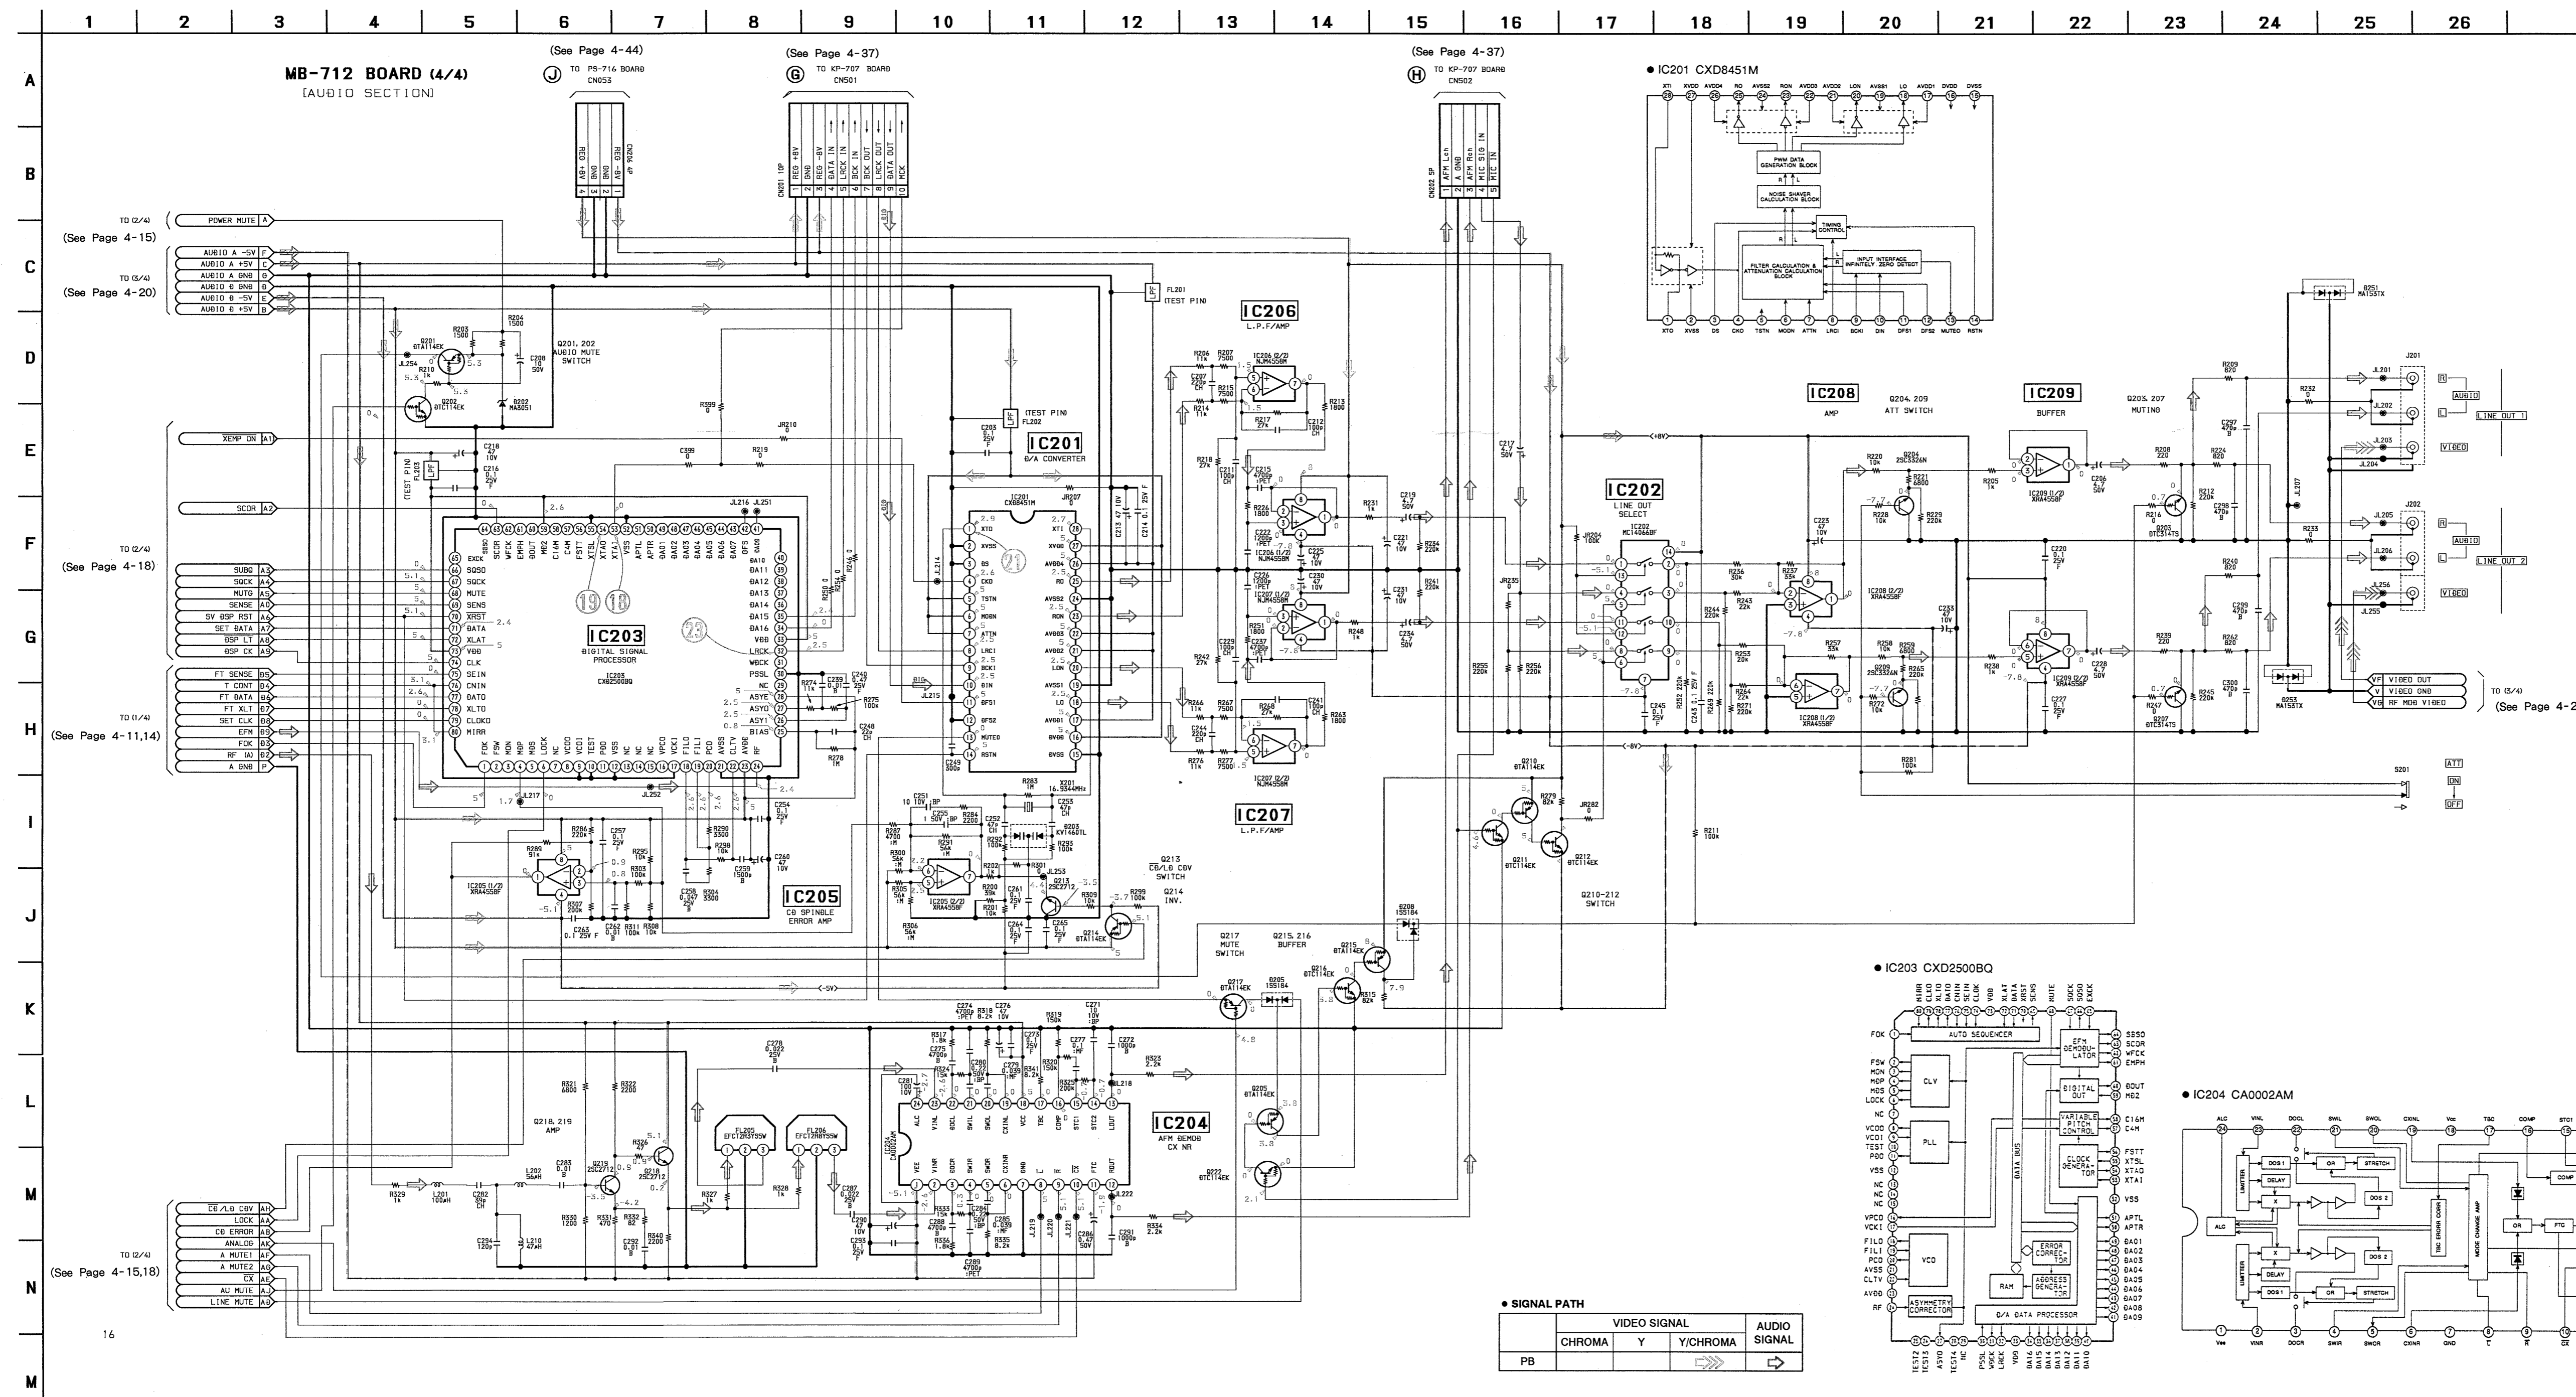

• SIGNAL PATH

PB	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
			→	→



FP-734 (MODE CONTROL), PW-710 (POWER SWITCH), SW-728 (CONTROL SWITCHES) PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

—Ref. No. FP-734 Board: 3,000 Series, PW-710 and SW-728 Boards: 7,000 Series—


FP-734 BOARD

- CN301 B-10
- CN303 B-8
- CN304 B-9
- CN305 B-1
- CN306 B-1
- CN307 B-7

- D300 A-4
- D301 A-5
- D302 A-5
- D303 A-5
- D304 A-6
- D305 A-4
- D306 A-7
- D307 E-2
- D308 A-6
- D309 A-4
- D311 A-3


- IC301 D-3
- IC302 B-5
- IC303 D-2
- IC304 D-1

- Q300 D-9
- Q301 C-9
- Q303 B-5
- Q304 B-6
- Q306 A-5
- Q307 A-6
- Q308 A-6
- Q309 A-7

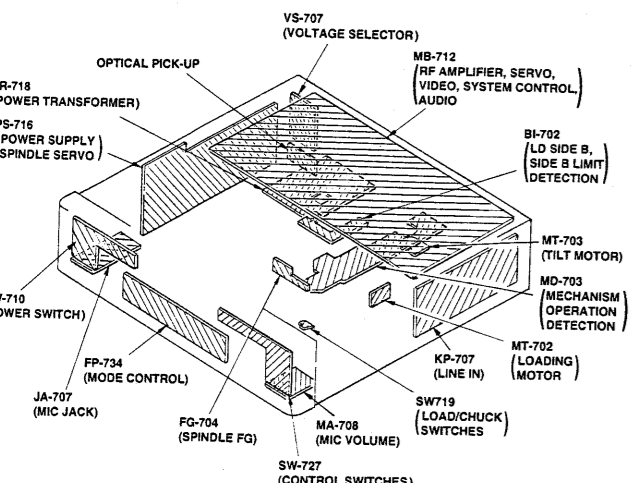


• ○ : Through hole is omitted.


SW-728 BOARD

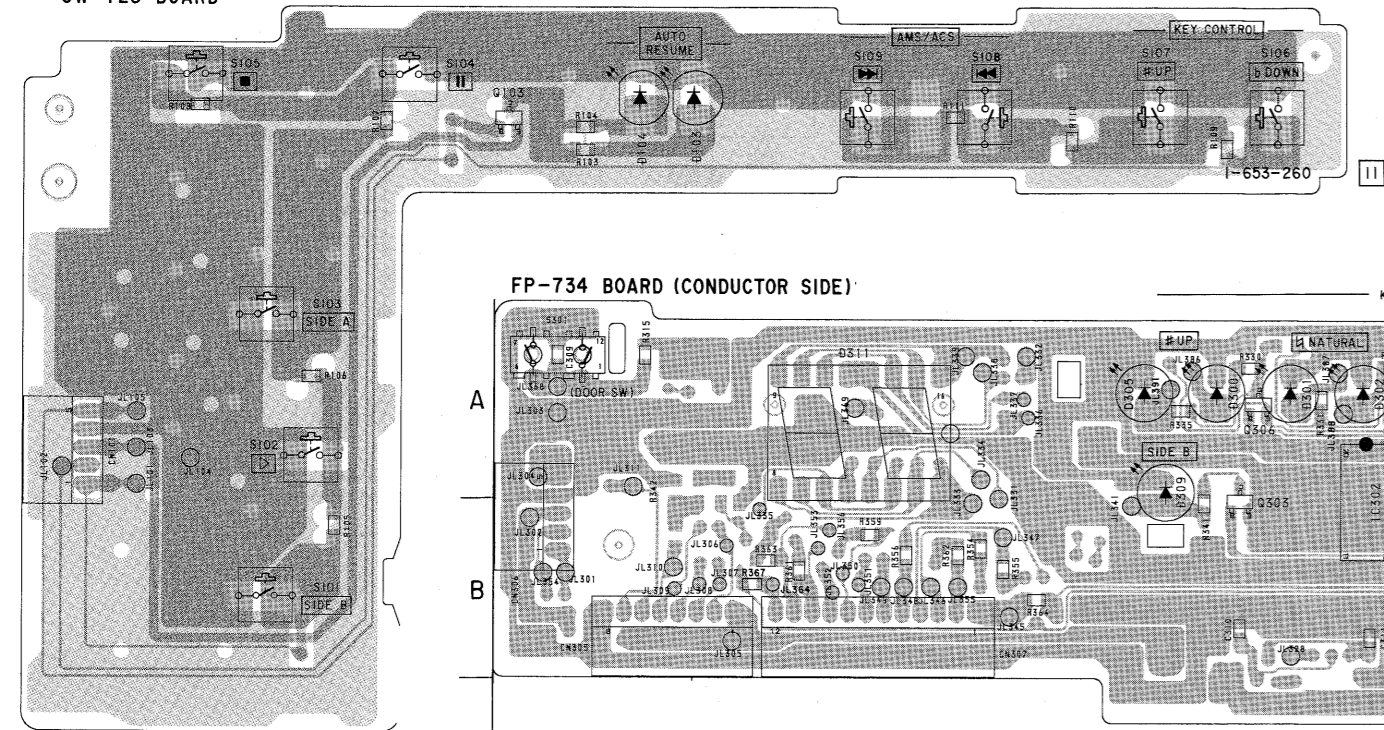


PW-710 BOARD

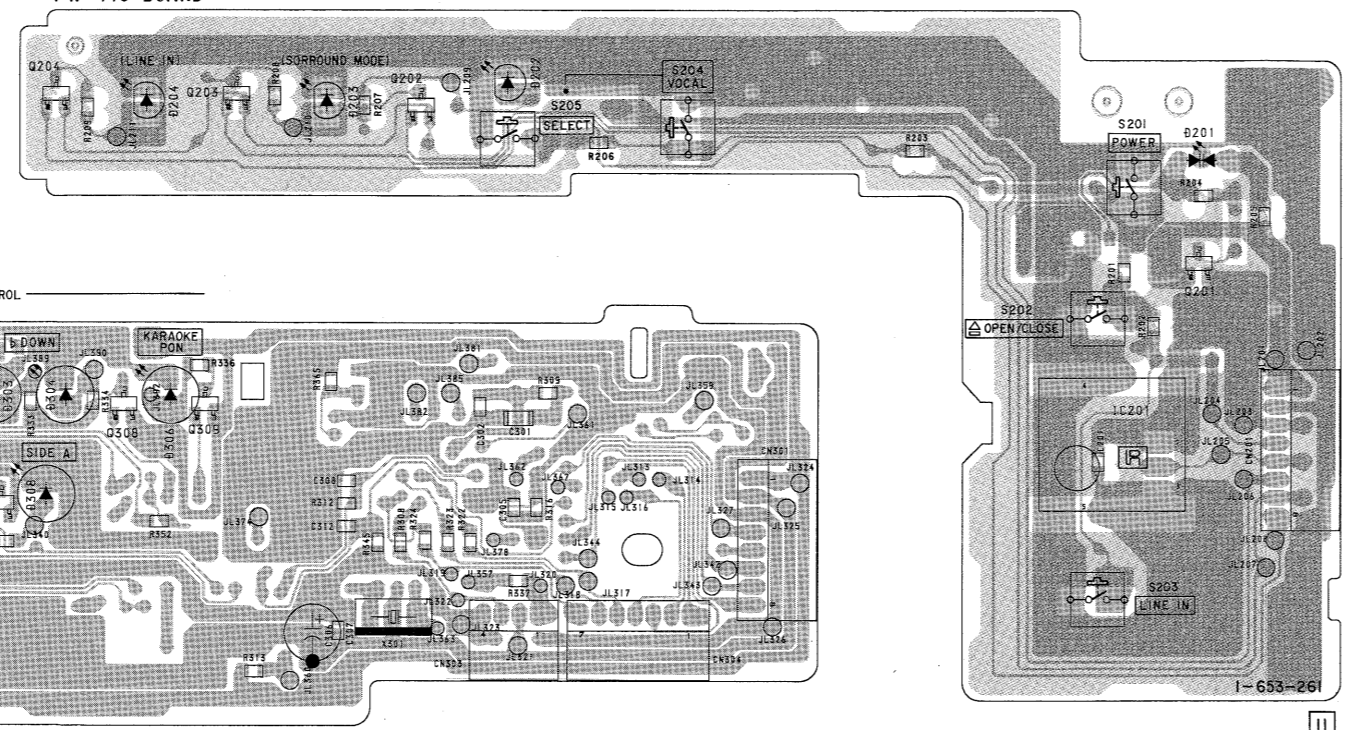

FP-734 BOARD (CONDUCTOR SIDE)

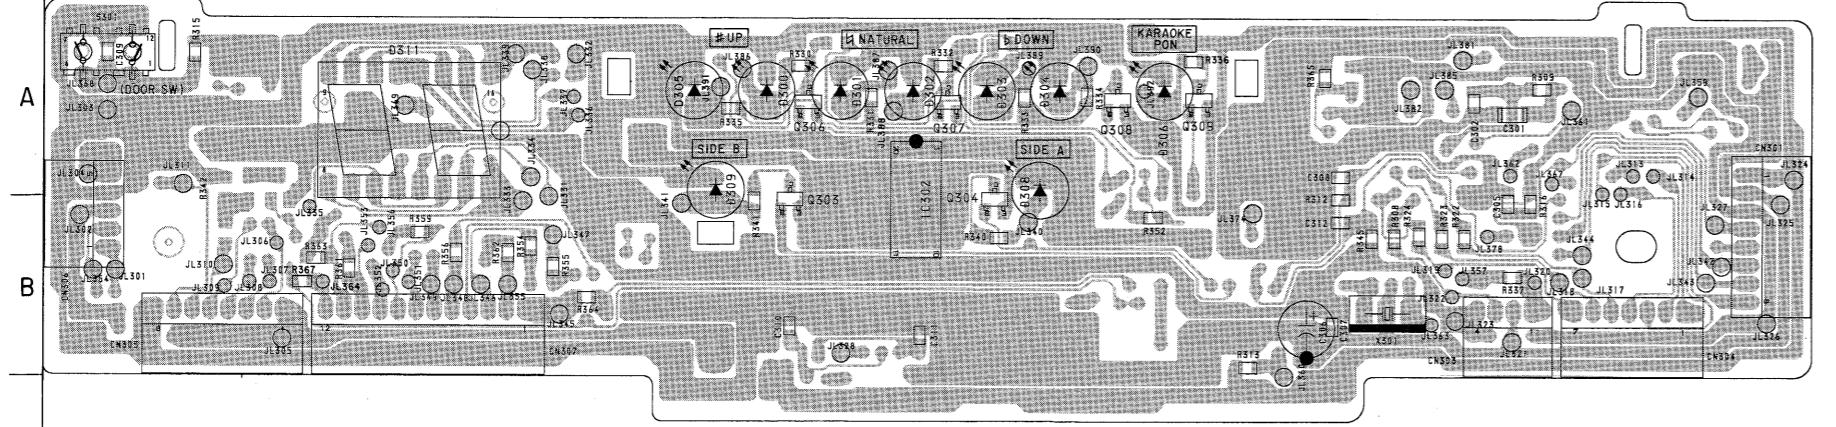


FP-734 BOARD (COMPONENT SIDE)

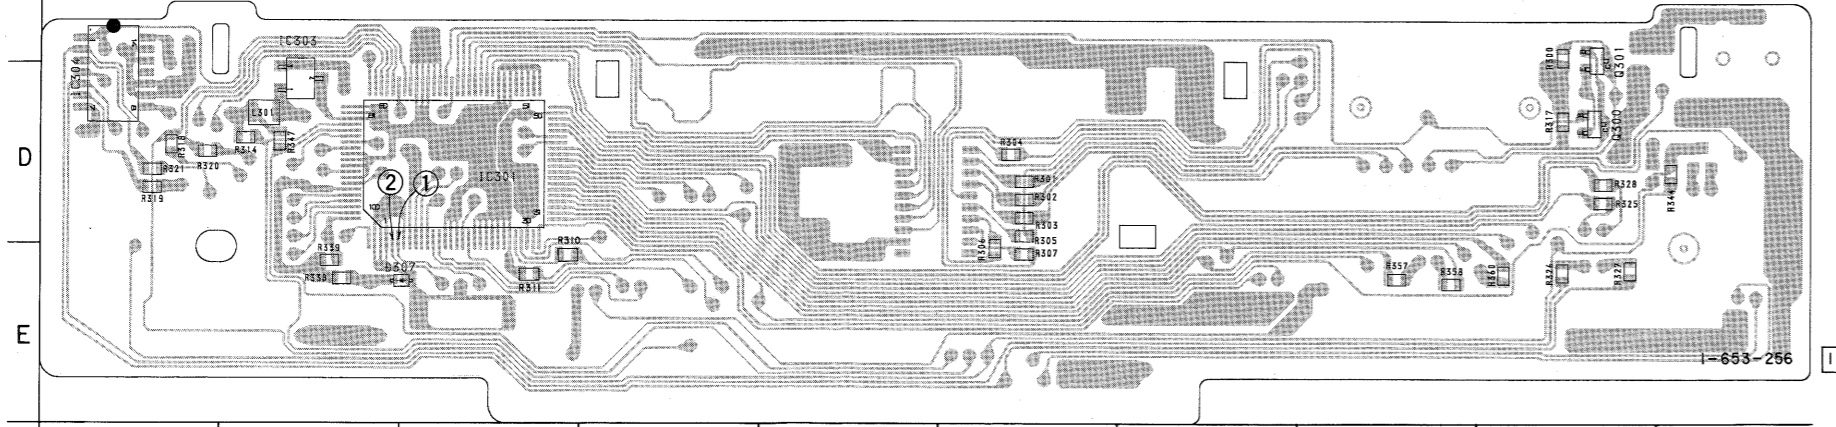

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20



FP-734 BOARD

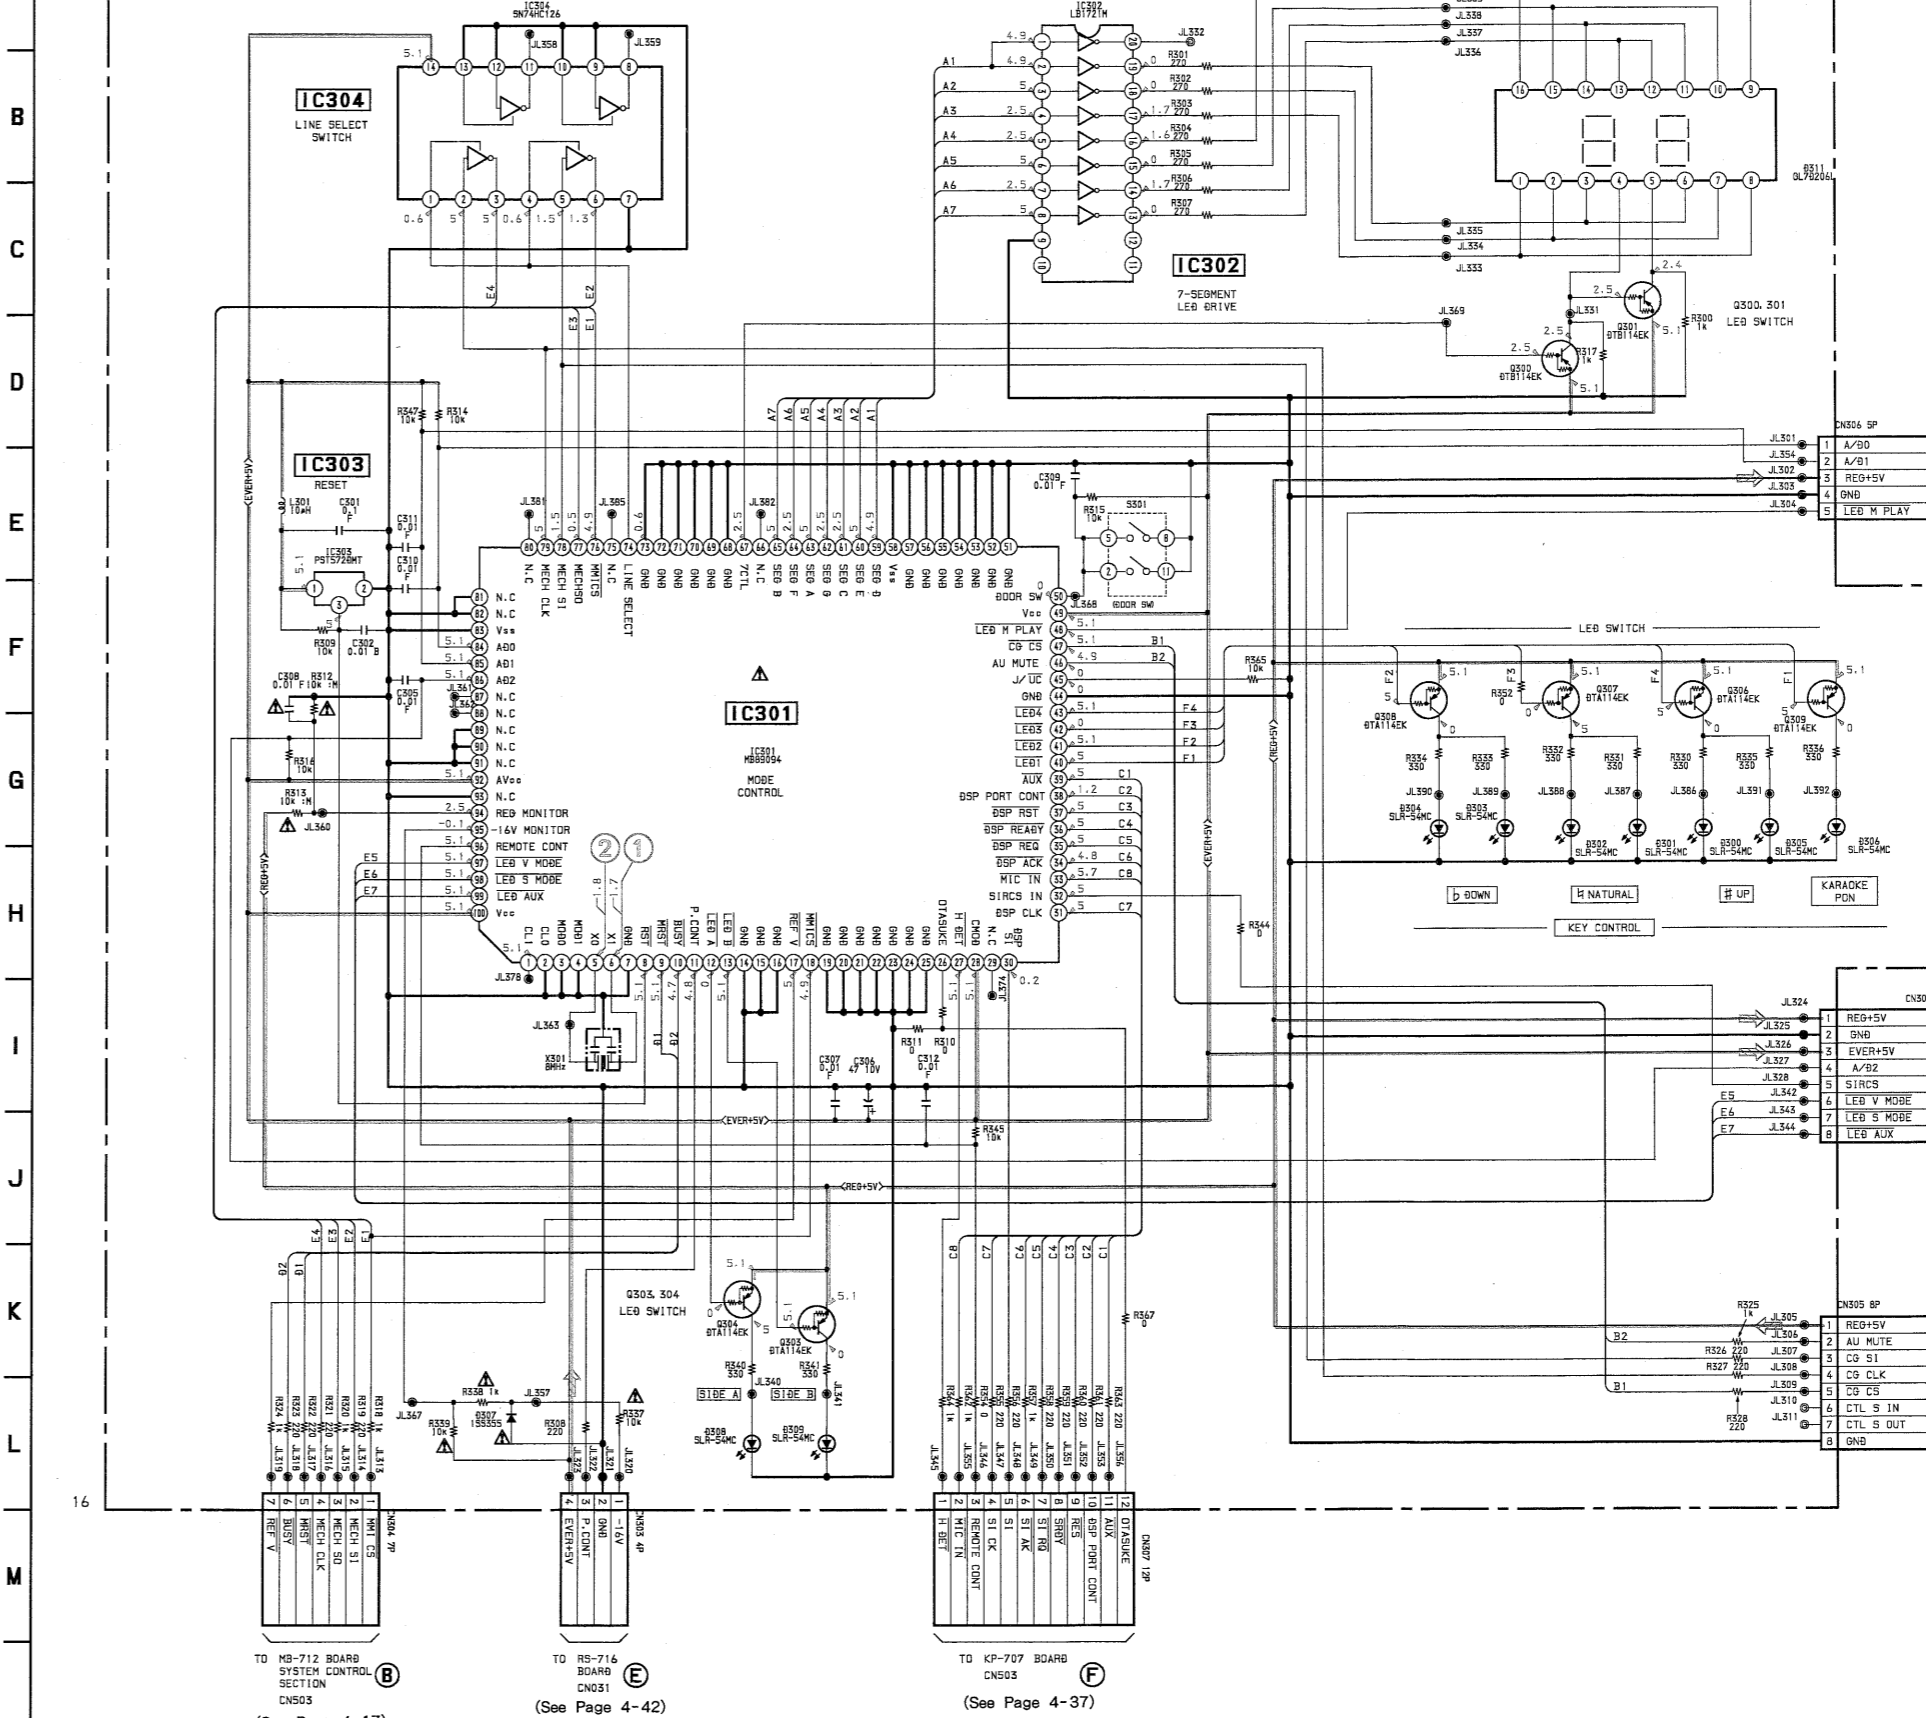

TO MB-712 BOARD SYSTEM CONTROL SECTION CN503 (See Page 4-17)





TO PW-710 BOARD CN301 (See Page 4-42)

TO KP-707 BOARD CN505 (See Page 4-37)

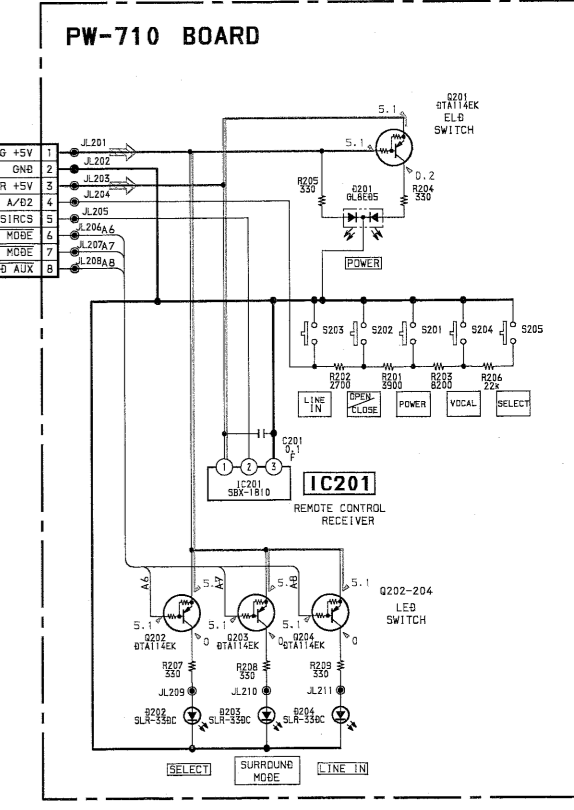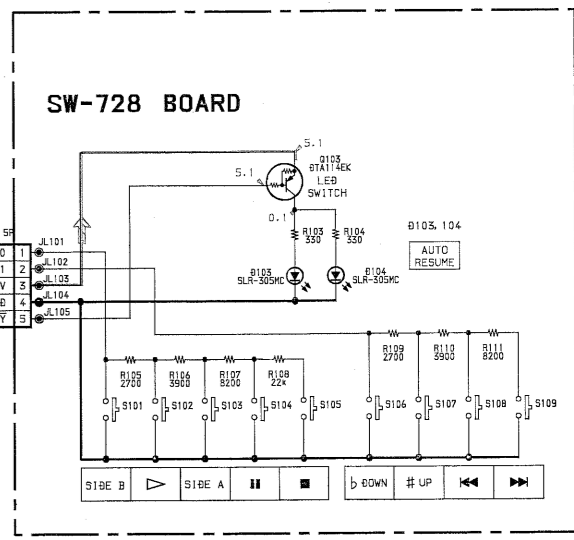



**MDP-A600K**

BI-702 (LD SIDE B, LIMIT DETECTION), FG-704 (SPINDLE FG), MD-703 (MECHANISM OPERATION DETECTION), MT-703 (TILT MOTOR) PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS  
 —Ref. No. BI-702, FG-704, MD-703 and MT-703 Boards; 2,000 Series—

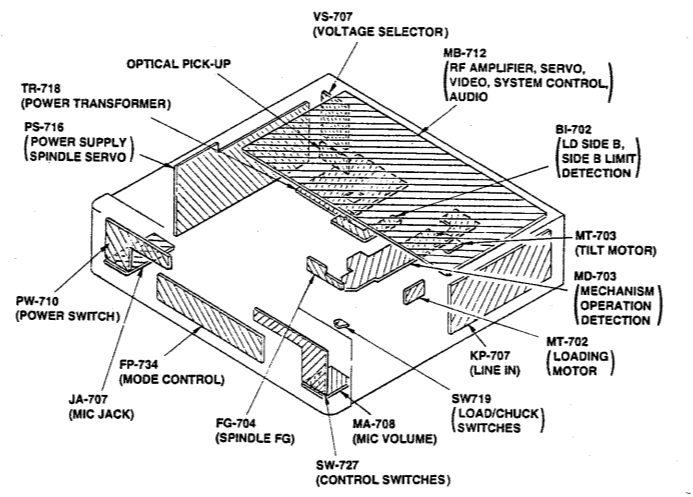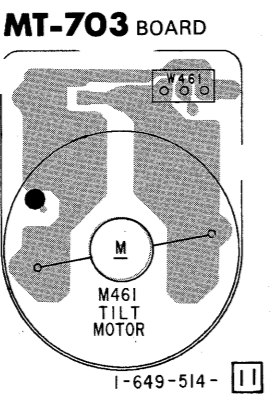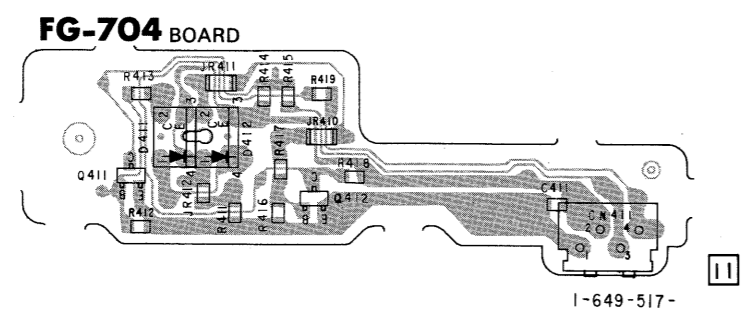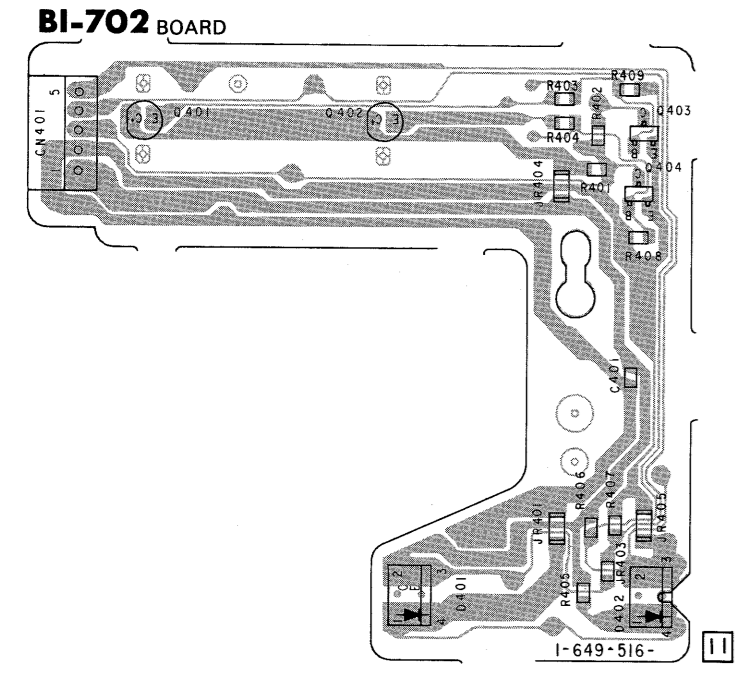

MD-703 BOARD


CN431	B-2
CN432	B-1
CN433	B-8
CN434	B-1
D431	B-5
D432	A-7
D433	A-7
D434	A-7
IC431	B-5

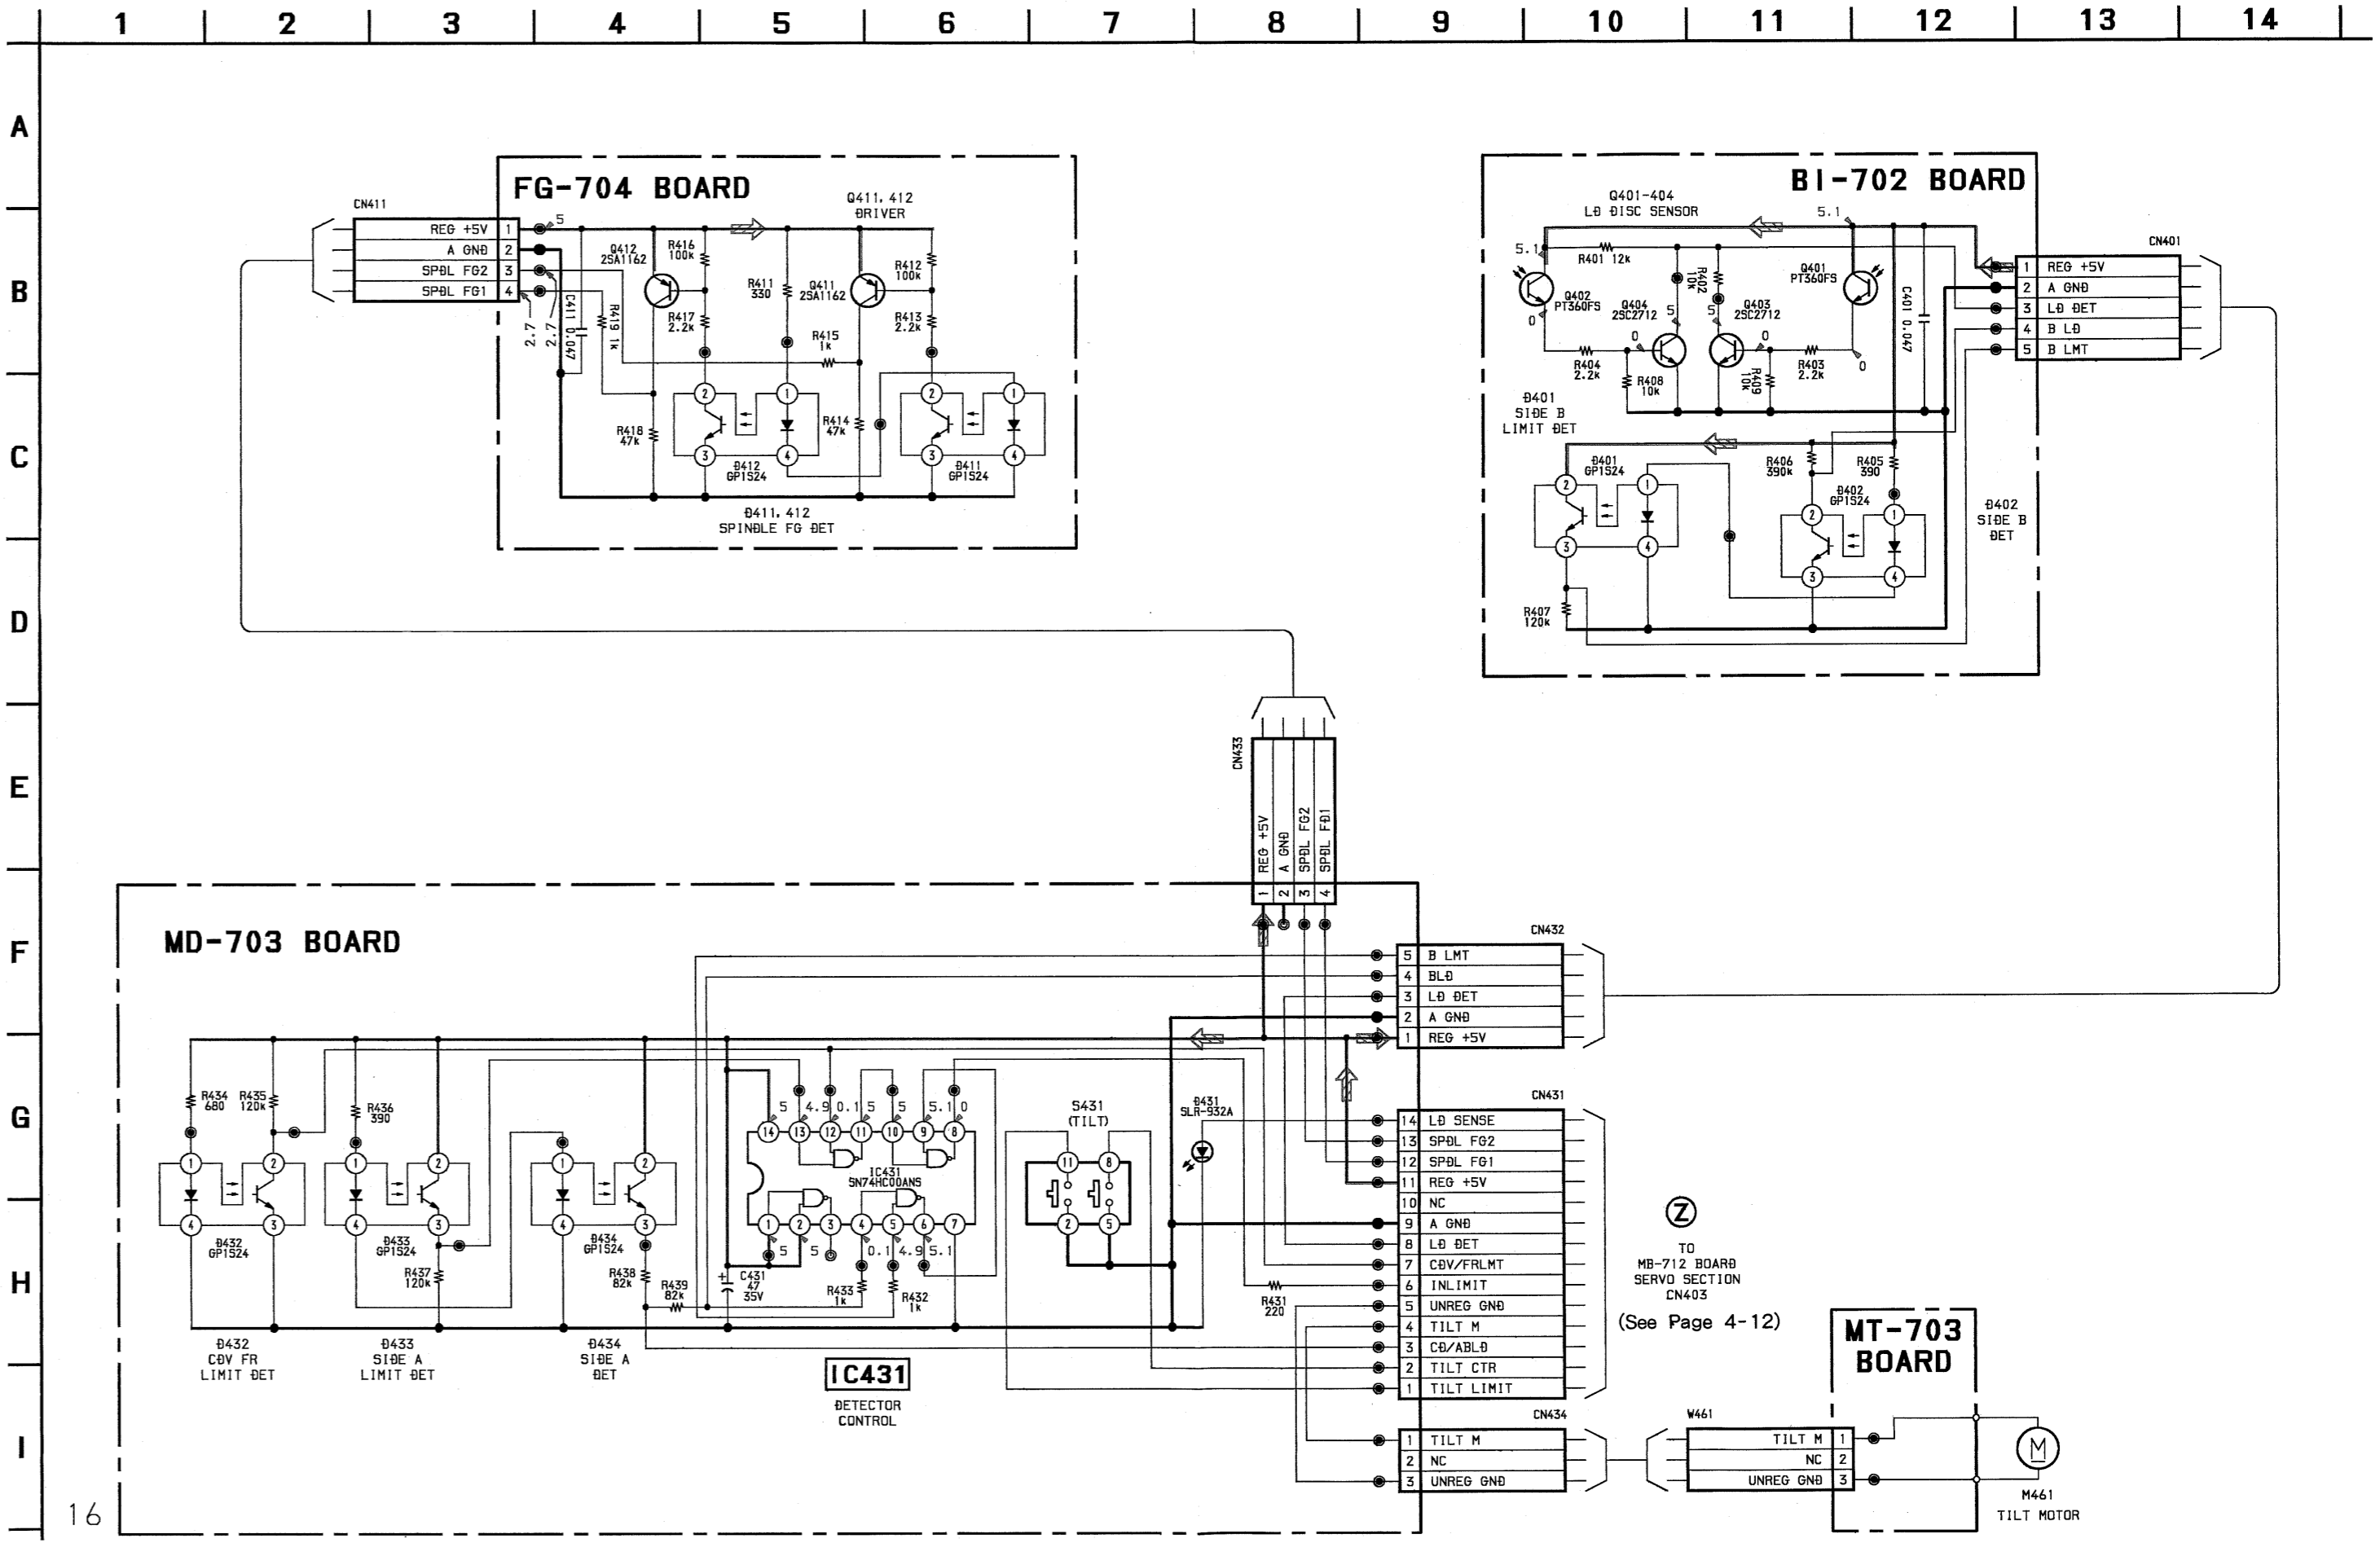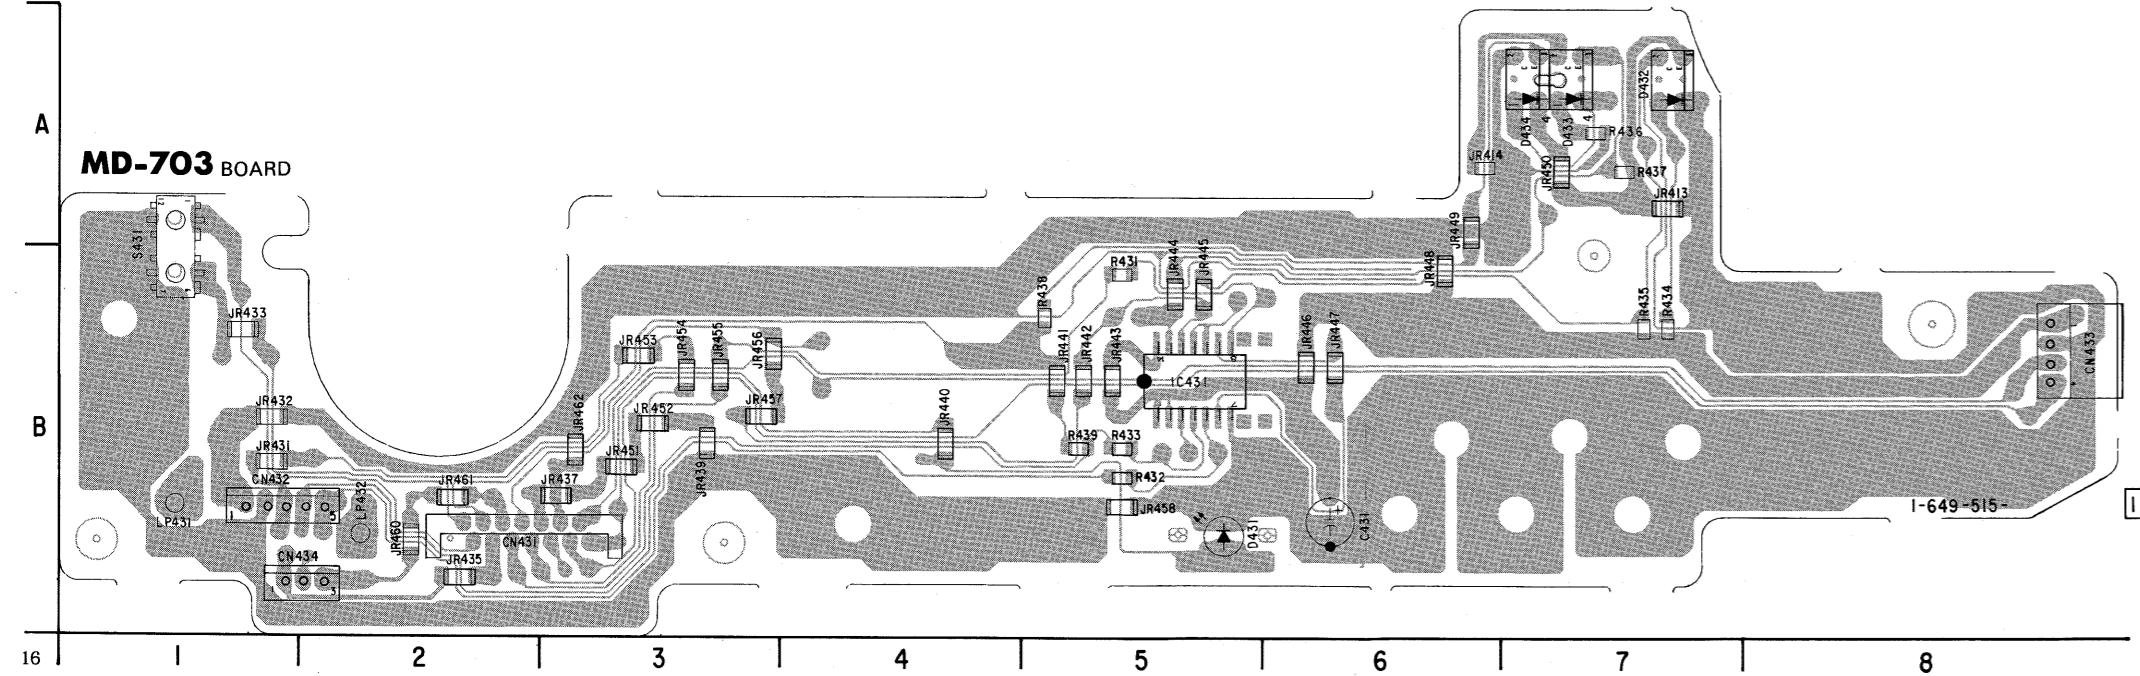


**KP-707 (LINE IN), MA-708 (MIC VOLUME), JA-707 (MIC JACK) PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS**  
 —Ref. No. KP-707 Board; 8,000 Series, MA-708 Board; 10,000 Series, JA-707 Board; 11,000 Series—

**KP-707 BOARD**


① CN501 2V/DIV  
20nsec/DIV

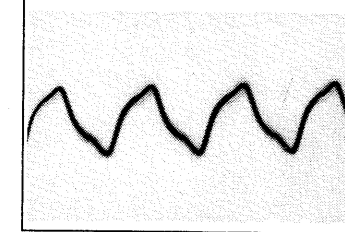

② IC500 2V/DIV  
20nsec/DIV

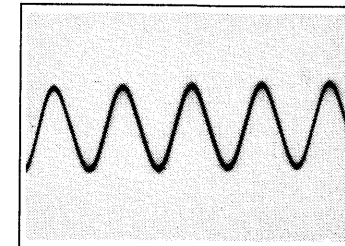

③ IC500 2V/DIV  
20nsec/DIV

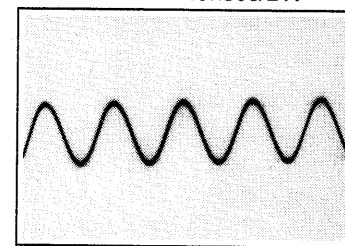

**KP-707 BOARD**


CN501 A-4  
CN502 A-2  
CN503 A-8  
CN504 A-7  
CN505 A-7  
CN506 A-5

D501 A-2  
D502 C-6  
D503 C-6  
D504 B-7  
D505 B-7  
D521 A-3  
D522 B-3  
D580 A-10  
D581 A-3



IC500 H-3  
IC501 B-2  
IC502 B-4  
IC503 B-7  
IC504 C-10  
IC510 B-5  
IC511 B-5  
IC513 C-1  
IC514 C-7  
IC541 C-3  
IC542 D-5

D501 B-3  
D580 A-11  
D581 B-11  
D582 A-9


**JA-701 BOARD**

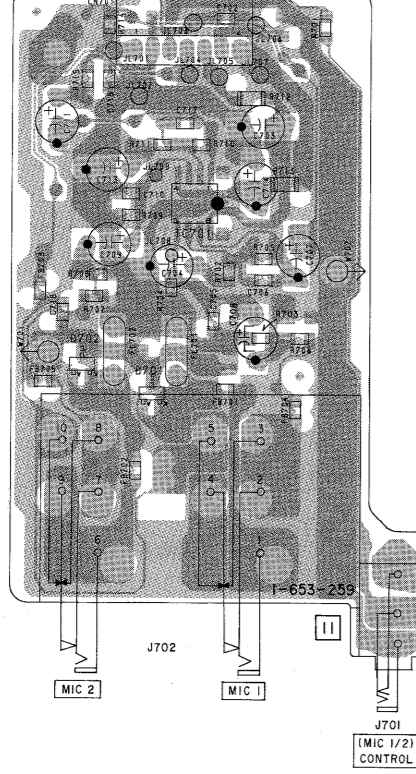


**MA-708 BOARD**

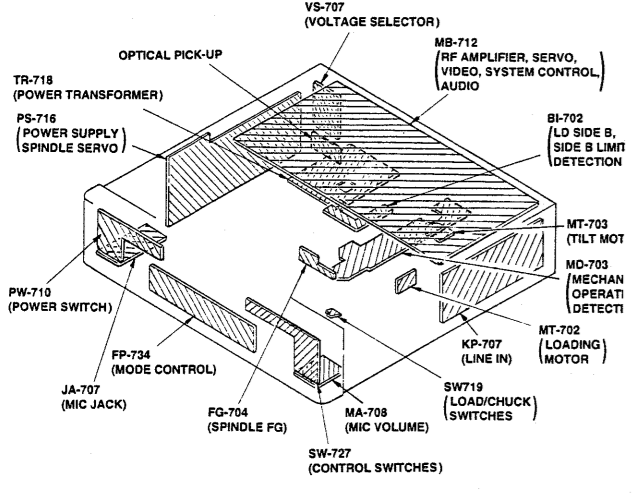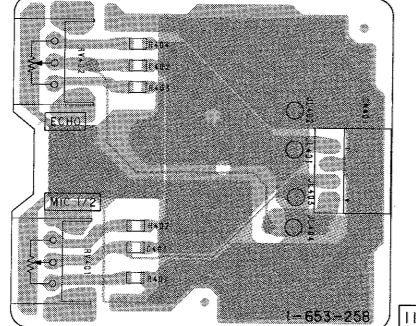

**KP-707 BOARD (CONDUCTOR SIDE)**

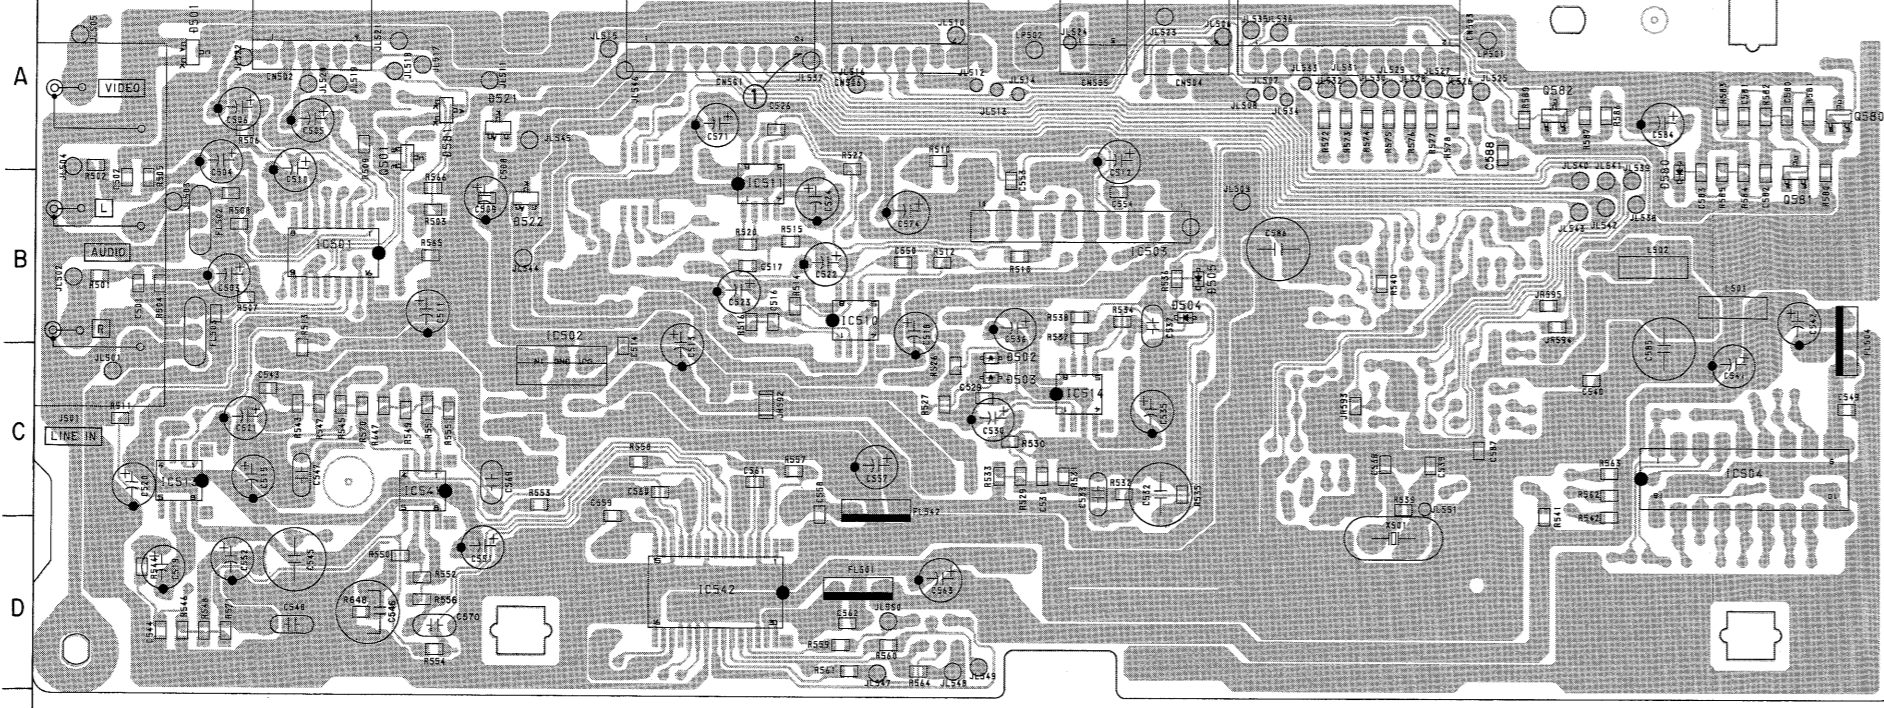


**KP-707 BOARD (COMPONENT SIDE)**

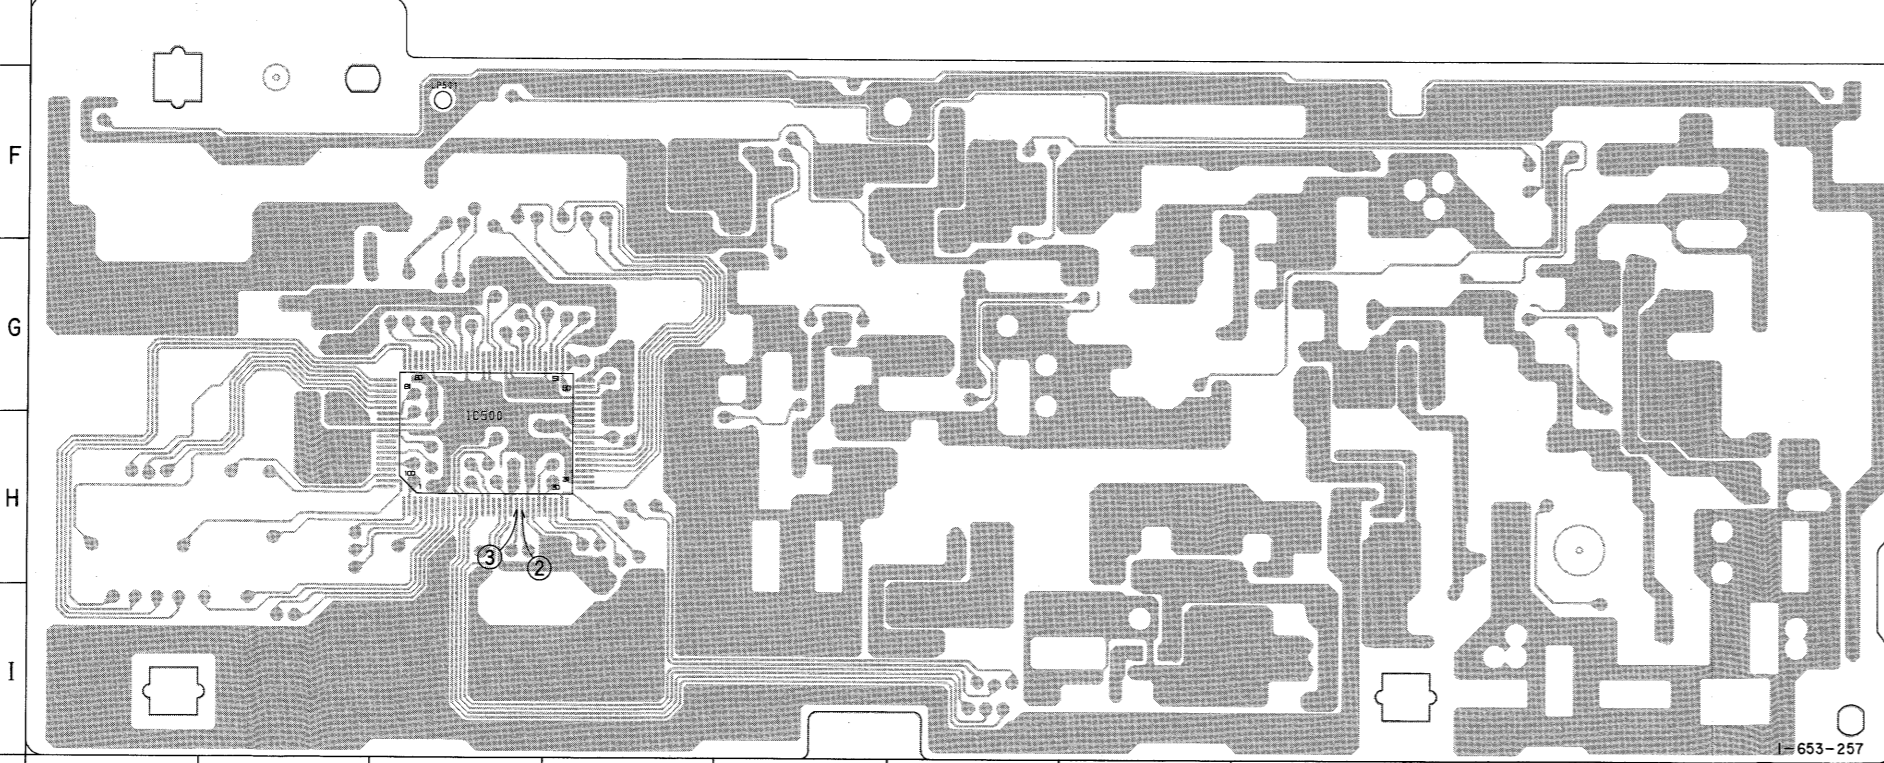

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

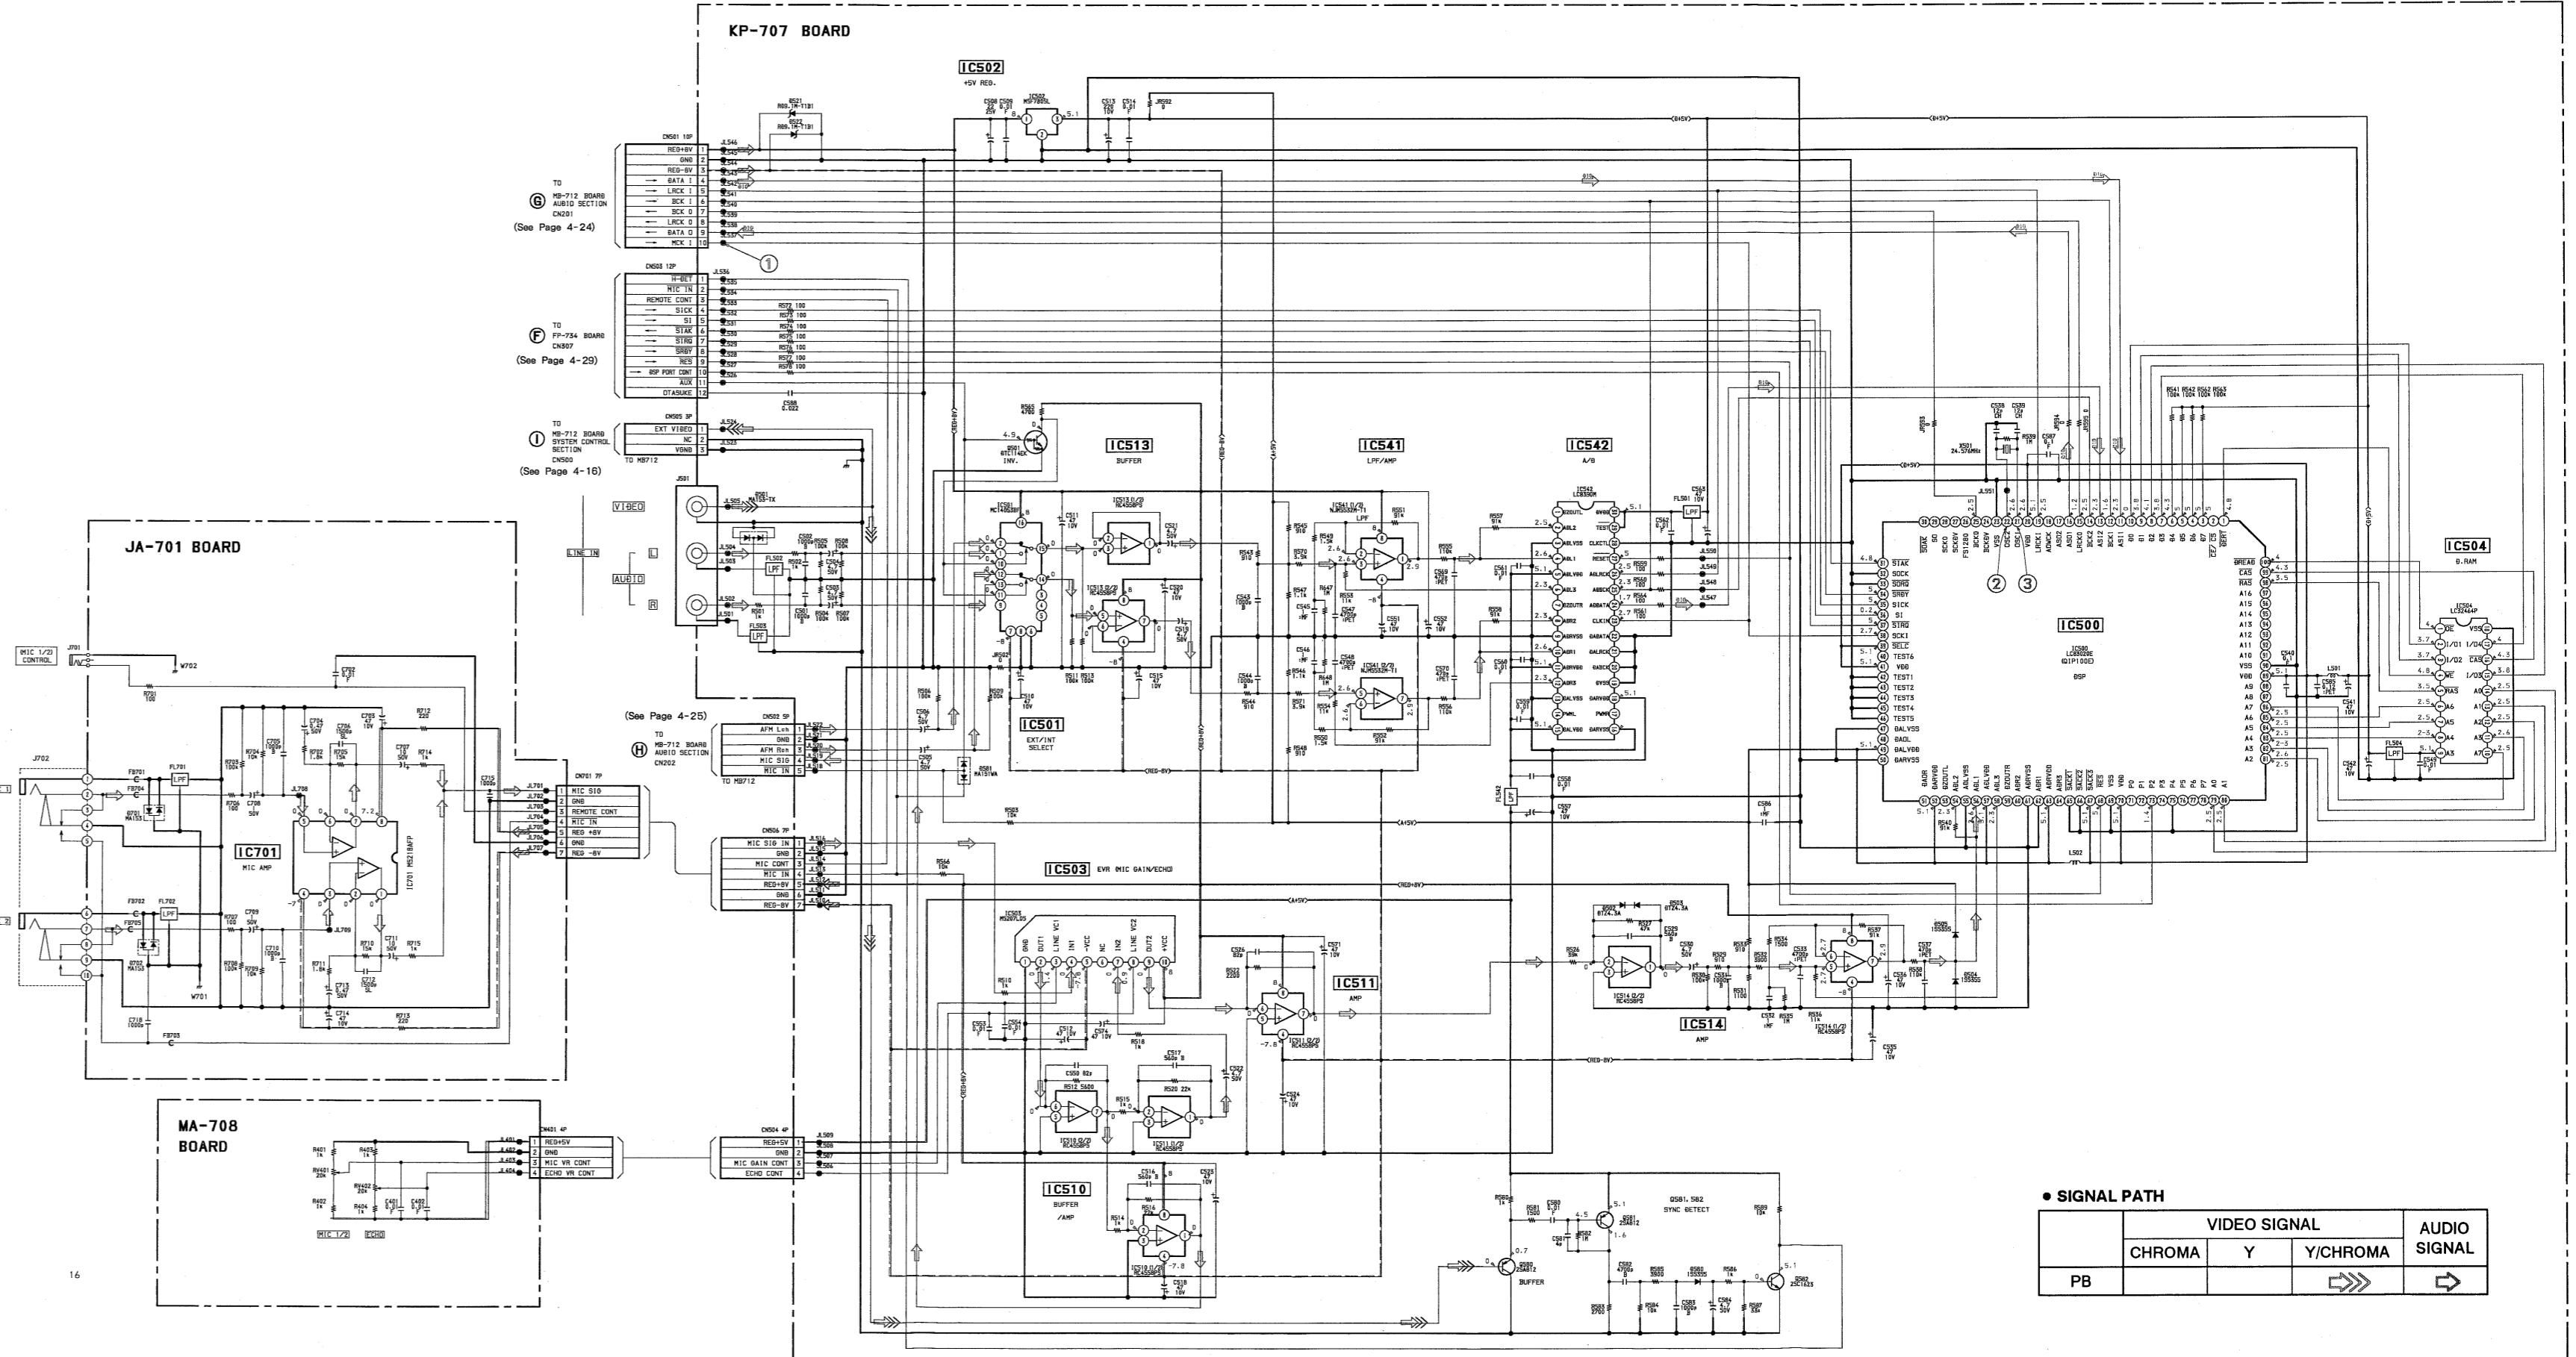

# MDP-A600K

## PS-716 (POWER SUPPLY, SPINDLE SERVO), TR-718 (POWER TRANSFORMER), VS-707 (VOLTAGE SELECTOR) PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

—Ref. No. PS-716 Board; 6,000Series, TR-718 Board; 5,000 Series, VS-707 Board; 9,000 Series —


### PS-716 BOARD

- CN030 A-1
- CN031 A-2
- CN051 A-3
- CN052 D-7
- CN053 A-4
- CN055 A-5


- 0031 C-2
- 0032 C-2
- 0033 B-2
- 0034 C-3
- 0035 B-3
- 0036 C-3
- 0037 C-3
- 0038 C-3
- 0039 C-3
- 0051 C-9
- 0052 D-9
- 0053 C-8
- 0054 C-8
- 0055 A-8
- 0056 A-8
- 0057 A-8
- 0058 B-9
- 0059 A-8
- 0060 A-8
- 0061 C-7
- 0701 A-7
- 0702 B-7

- IC031 C-2
- IC032 C-5
- IC033 B-4
- IC051 A-9
- IC052 A-9
- IC701 A-8


- 0031 A-2
- 0051 D-9
- 0052 D-10
- 0053 D-8
- 0054 D-8
- 0055 A-10
- 0056 A-10
- 0058 C-8
- 0059 B-8
- 0060 B-10
- 0061 B-10
- 0701 A-7
- 0702 B-7

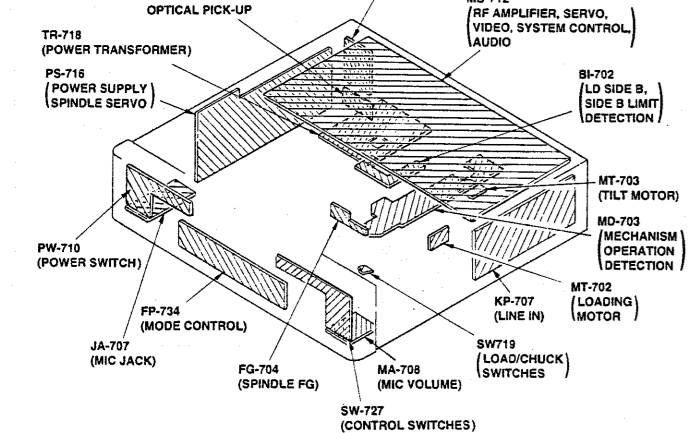

### TR-718 BOARD

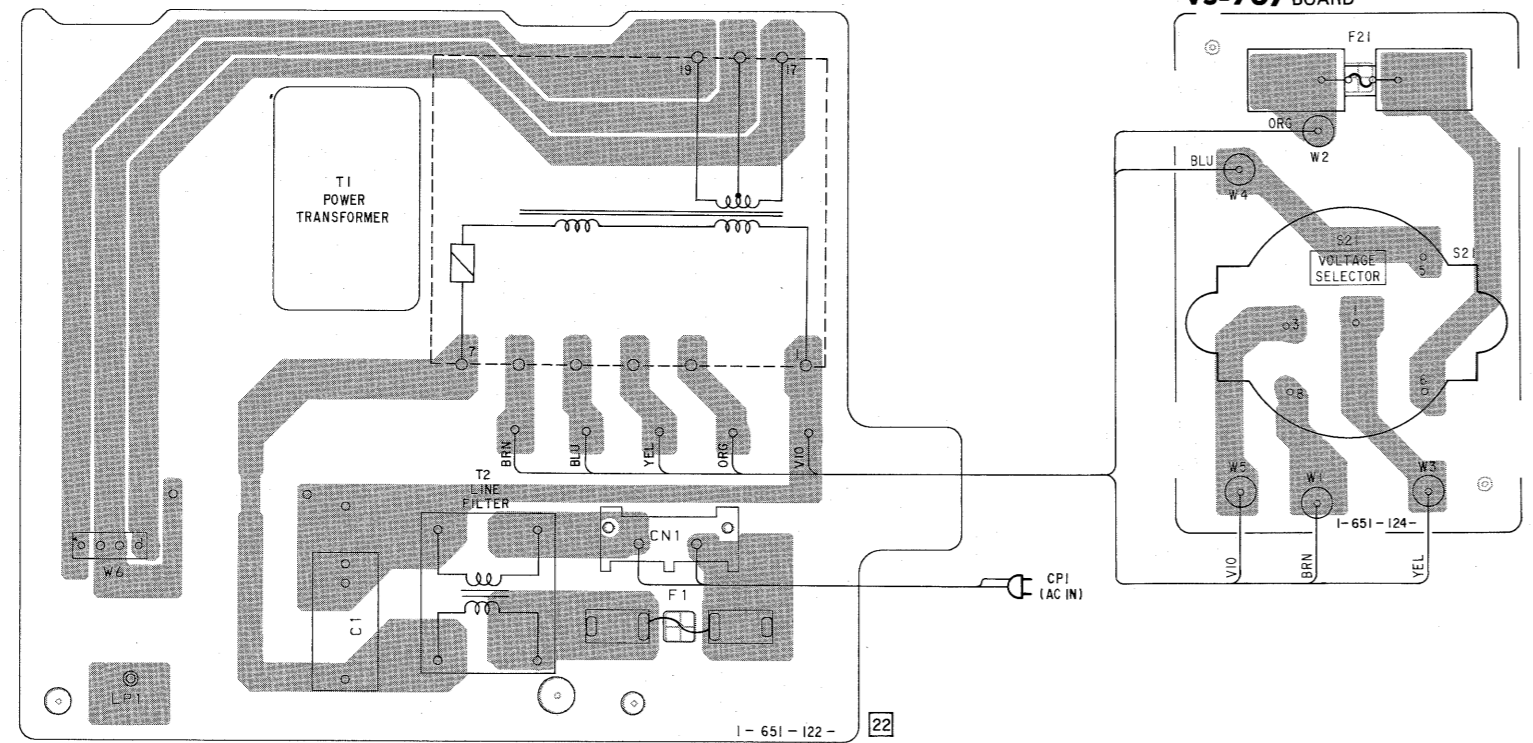


### VS-707 BOARD

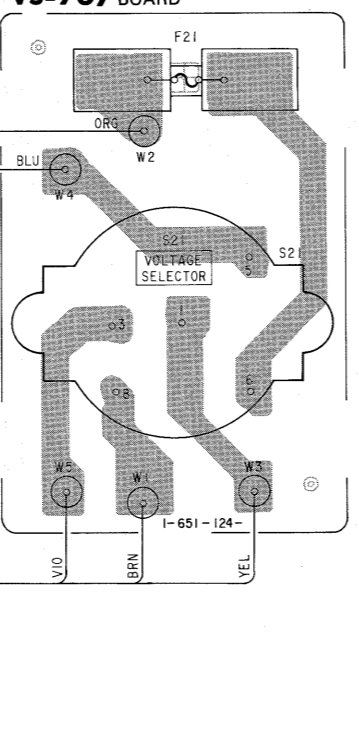


#### • SIGNAL PATH

Spindle phase servo	
Spindle servo (Speed and phase)	➔➔
Tracking servo	
Sled servo	

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

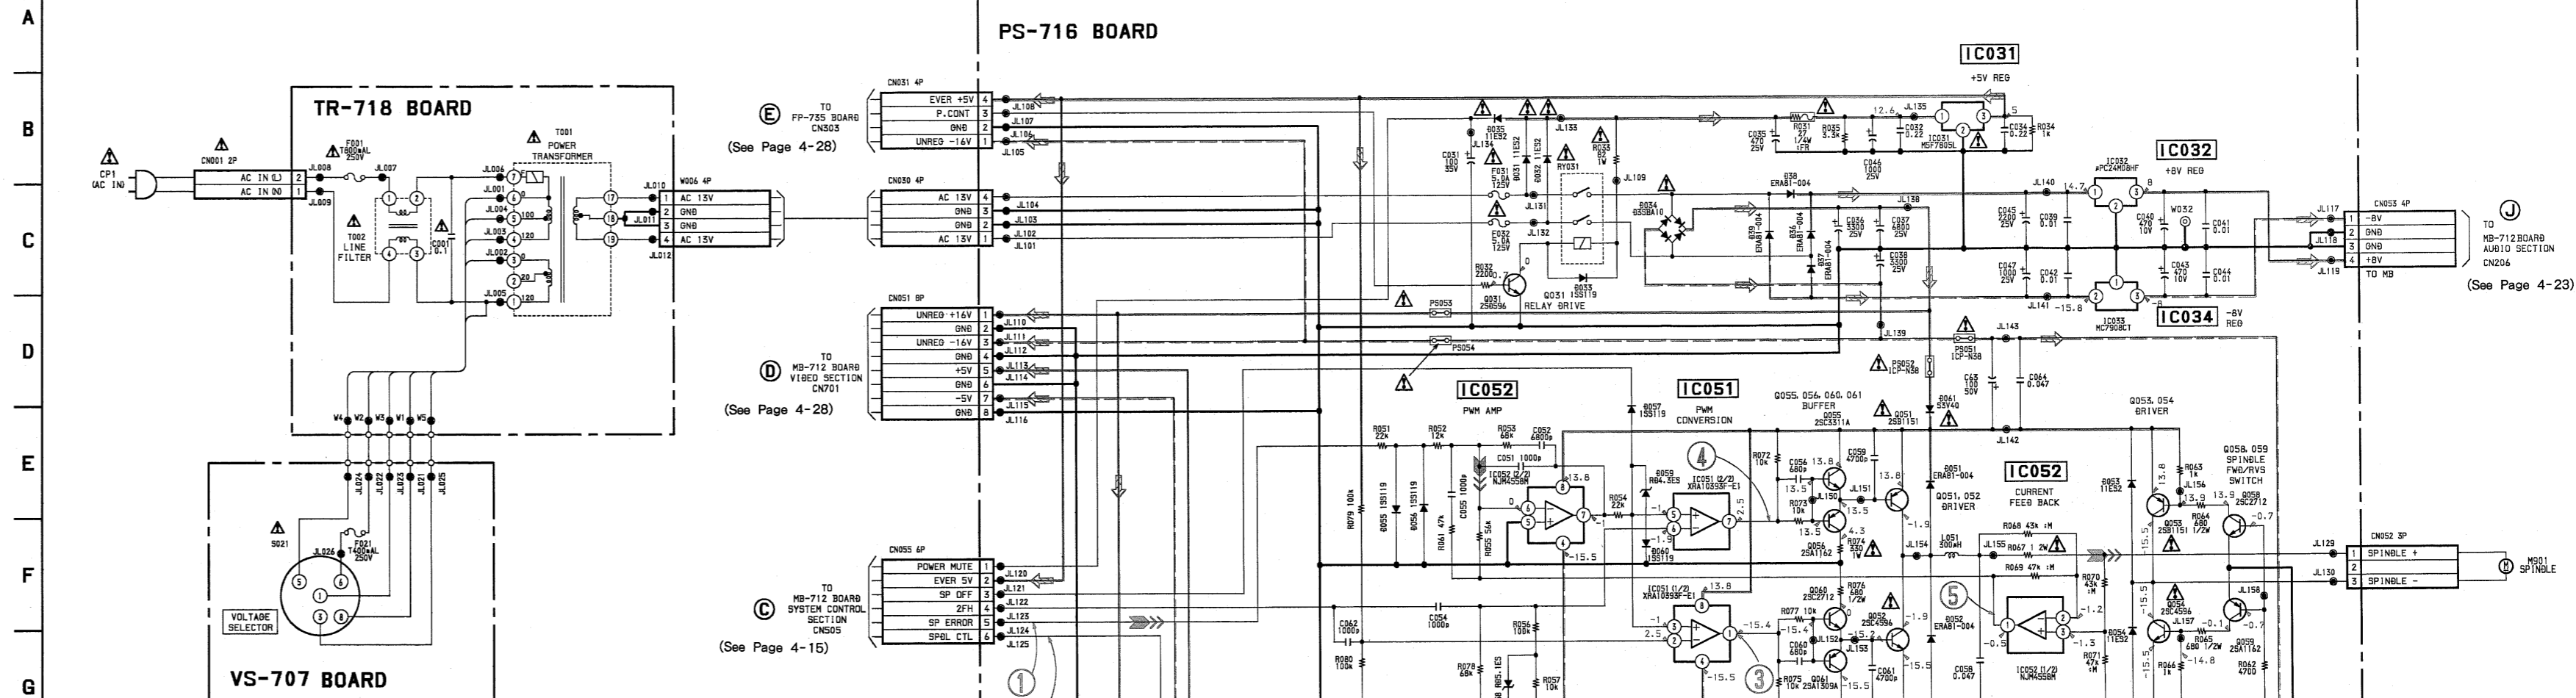

### PS-716 BOARD

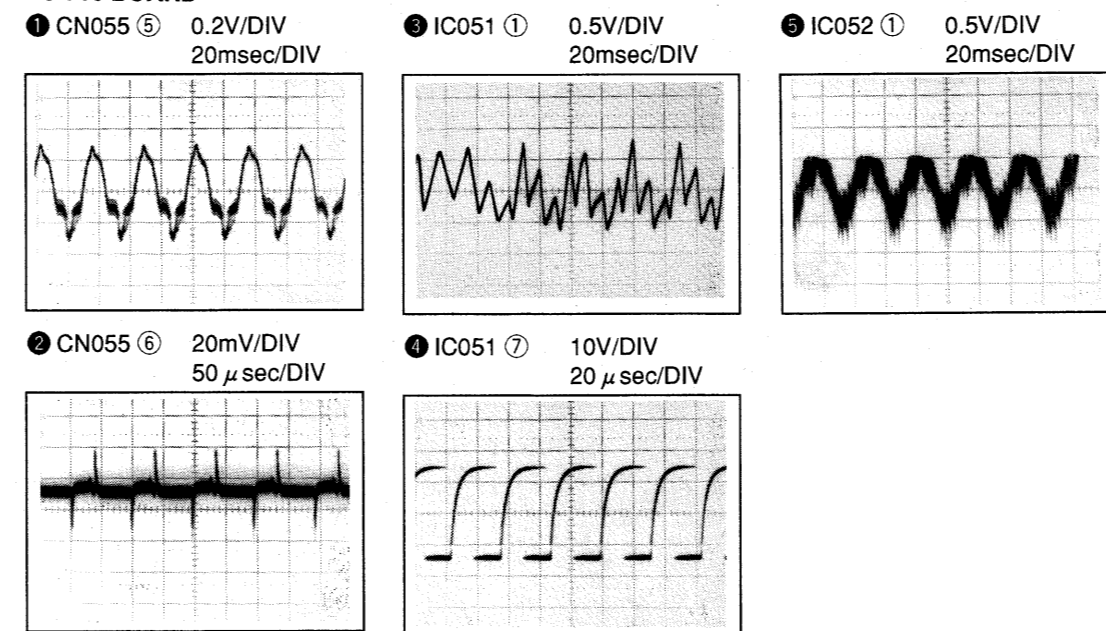

4-42

4-43

4-44 E

4-40

4-41

## SECTION 5 REPAIR PARTS LIST

### 5-1. EXPLODED VIEWS


**NOTE:**

- - XX, - X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts  
Example :  
KNOB, BALANCE (WHITE)...(RED)  
                  ↑                  ↑  
          Parts color   Cabinet's color

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.


The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

#### 5-1-1. UPPER CASE, FRONT PANEL ASSEMBLY

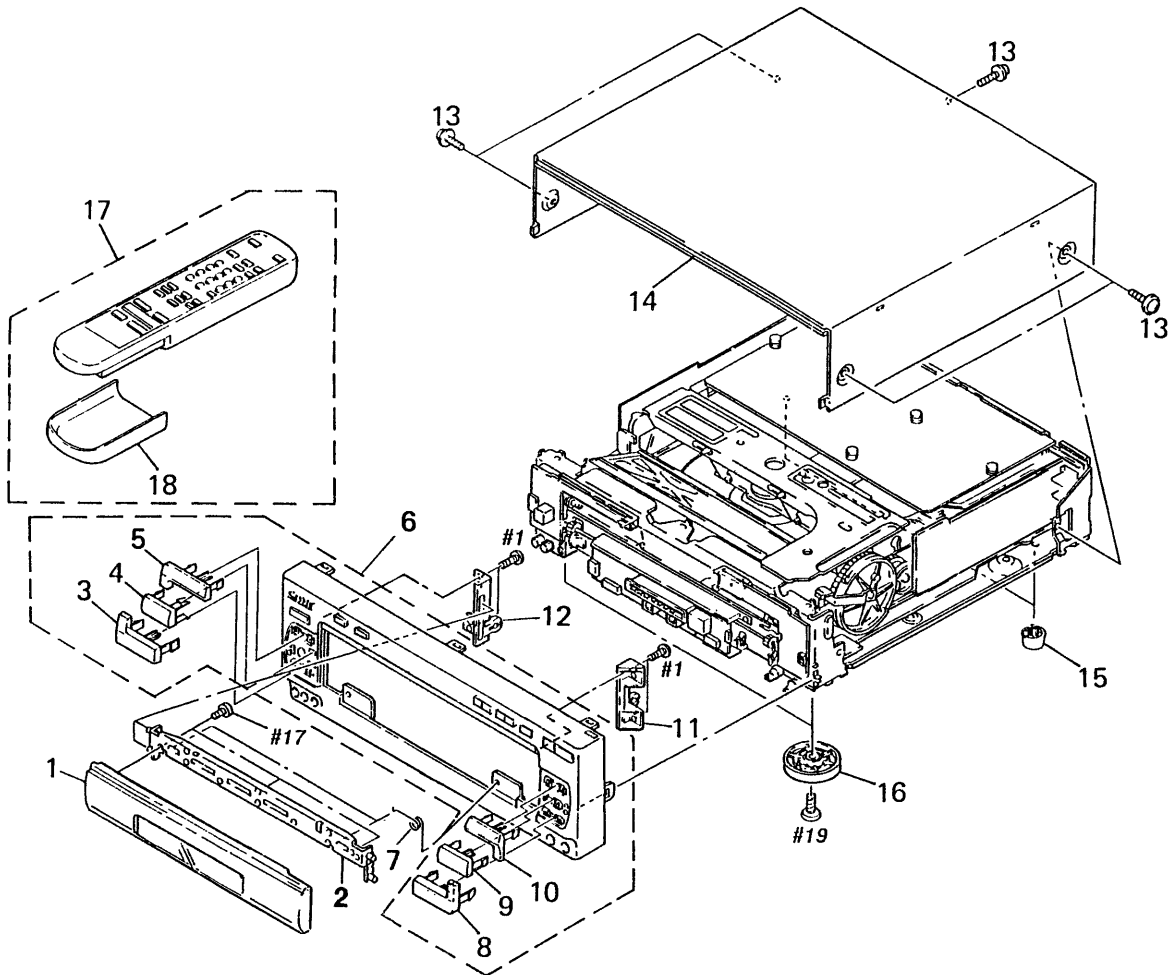


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-3943-729-1	DOOR ASSY		10	3-956-064-31	BUTTON, SIDE A (SIDE A)	
2	X-3942-785-1	DISK ASSY, DOOR		* 11	3-956-073-01	HOLDER (R), SLIDE	
3	3-956-061-31	BUTTON, DISPLAY (LINE IN)		* 12	3-956-074-01	HOLDER (L), SLIDE	
4	3-956-062-01	WINDOW, REMOTE CONTROL		13	3-710-901-41	SCREW, TAPPING	
5	3-956-060-31	BUTTON, OPEN (OPEN/CLOSE)		* 14	X-3943-911-1	CASE ASSY , UPPER	
6	X-3943-727-1	PANEL ASSY, FRONT		* 15	3-957-819-01	FOOT	
7	3-957-697-01	SPRING, TORSION		16	X-3943-312-1	FOOT ASSY (2.5)	
8	3-956-065-31	BUTTON, SIDE B (SIDE B)		17	1-467-603-51	REMOTE COMMANDER (RMT-M24A)	
9	3-956-066-01	BUTTON, PLAY (▷)		18	9-900-029-01	LID, BATTERY CASE	

5-1-2. CHUCK FRAME ASSEMBLY

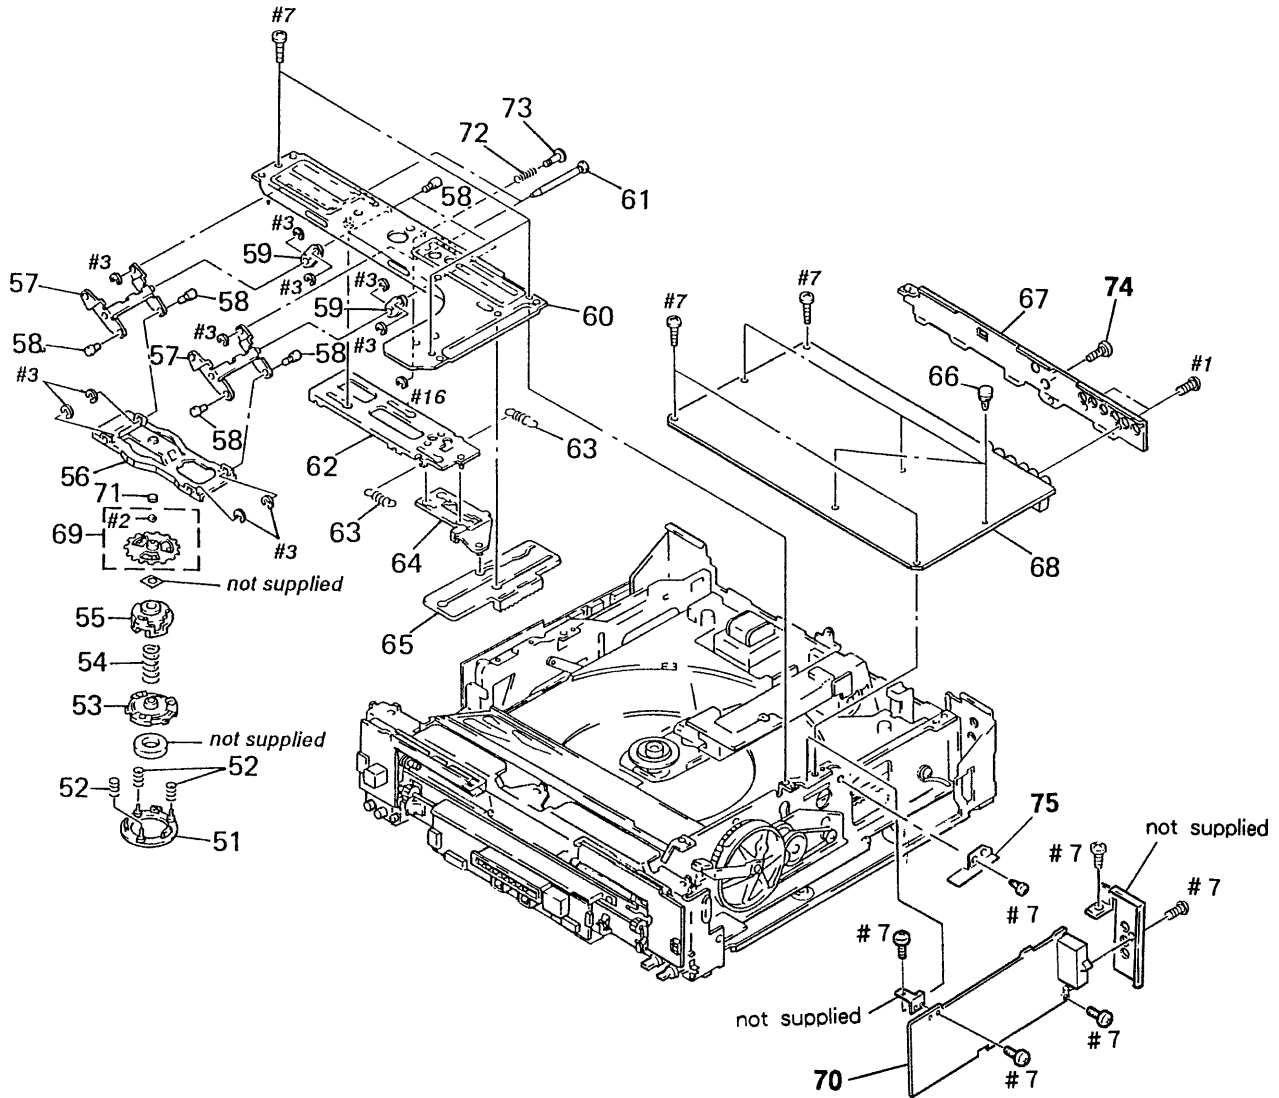


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	X-3943-043-1	GUIDE (B) ASSY, CENTER		64	X-3942-800-1	LIMITER ASSY	
52	3-953-290-01	SPRING (2), COMPRESSION		65	3-953-348-01	CAM, CHUCK	
53	X-3942-776-1	HOLDER ASSY, MAGNET		* 66	4-386-173-01	SPACER	
54	3-953-291-01	SPRING (1), COMPRESSION		* 67	3-956-077-31	PLATE, JACK	
55	3-953-288-01	PLATE, CHUCKING		* 68	A-6423-168-A	MB-712 BOARD, COMPLETE	
* 56	3-953-354-01	PLATE, CHUCK		69	X-3942-787-1	PLATE ASSY, TOP	
57	X-3942-801-1	ARM (L) ASSY		* 70	A-6423-175-A	KP-707 BOARD, COMPLETE	
* 58	3-953-345-01	SHAFT, ARM (S)		71	3-953-392-01	RETAINER, THRUST	
* 59	3-953-352-01	ARM (S)		72	3-353-241-01	SPRING, COMPRESSION	
60	X-3942-798-1	FRAME ASSY, CHUCK		* 73	3-953-831-01	STOPPER, OPT	
* 61	3-953-355-01	SHAFT, SLIDE		74	3-710-901-41	SCREW, TAPPING	
62	X-3942-799-1	PLATE ASSY, SLIDE		75	3-955-673-01	SPRING, LEAF	
63	3-486-135-XX	SPRING, TENSION					

### 5-1-3. SUB FRONT PANEL ASSEMBLY

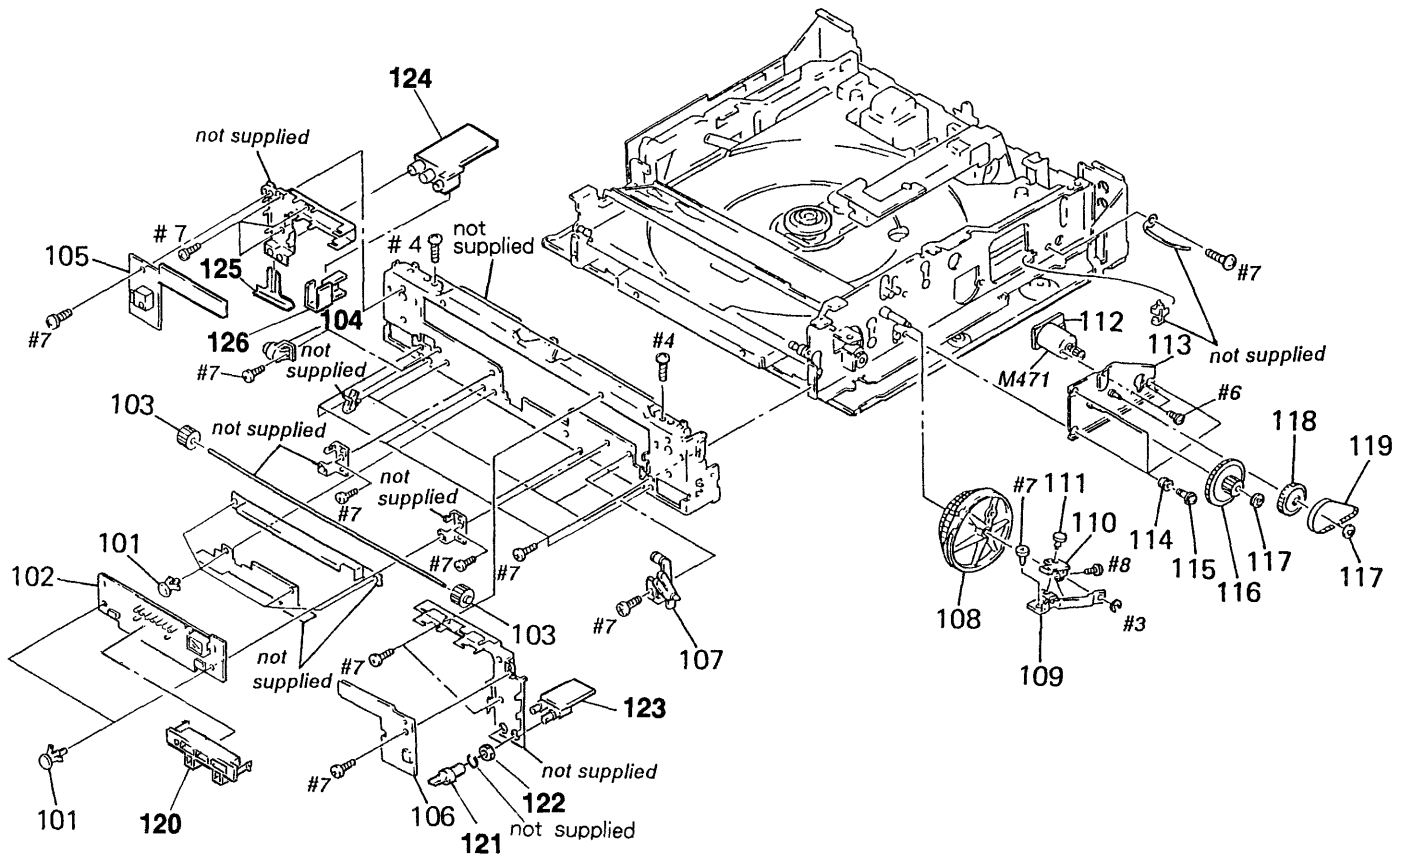

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
101	4-812-134-11	RIVET NYLON, 3.5		115	3-570-027-00	SCREW, MOTOR	
* 102	A-6423-171-A	FP-734 BOARD, COMPLETE		116	3-953-358-01	GEAR, MIDWAY	
103	3-953-325-01	GEAR, PHASE		117	3-669-595-00	WASHER (2), STOPPER	
104	4-919-393-01	DAMPER		118	3-953-394-01	PULLEY (A)	
* 105	A-6423-174-A	PW-710 BOARD, COMPLETE		119	3-953-393-01	BELT, TIMING	
* 106	A-6423-172-A	SW-728 BOARD, COMPLETE		* 120	3-957-924-01	REFLECTOR	
107	X-3942-786-1	LINK ASSY, DRIVING		121	A-6415-521-A	KNOB BLOCK ASSY (GR)	
108	3-953-356-01	GEAR, CONTROL		122	4-857-437-00	NUT (9)	
* 109	3-953-357-01	BRACKET, SW		* 123	A-6423-177-A	MA-708 BOARD, COMPLETE	
110	A-6421-954-A	SW-719 BOARD, COMPLETE		* 124	A-6423-176-A	JA-701 BOARD, COMPLETE	
111	3-531-576-11	RIVET		* 125	3-957-923-01	RETAINER, JACK	
112	A-6421-953-A	MT-702 BOARD, COMPLETE		126	3-955-377-01	PLATE (2GANG), MOUNT	
113	X-3942-805-1	BRACKET ASSY, GEAR		M471	X-3942-963-1	MOTOR ASSY (LOADING MOTOR)	
114	3-570-118-00	CUSHION, MOTOR					

5-1-4. CHASSIS ASSEMBLY

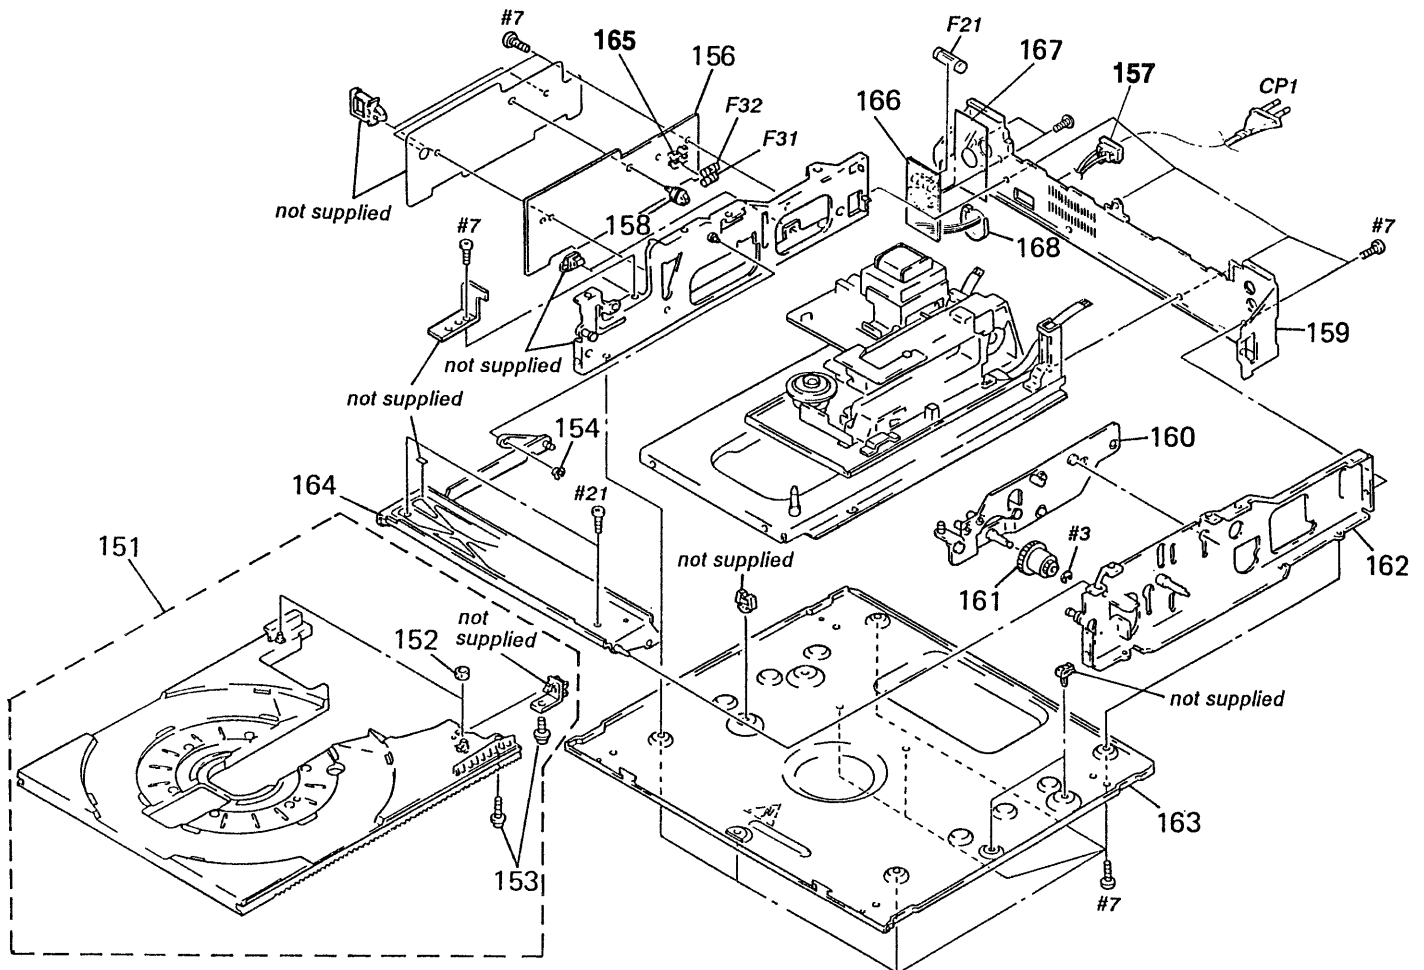


Ref. No.	Part No.	Description	Remarks
151	X-3942-781-1	TRAY ASSY	
* 152	4-914-248-01	STOPPER, RUBBER	
153	3-710-901-11	SCREW, TAPPING	
154	3-703-074-01	CAP 3, SHAFT	
* 156	A-6423-169-A	PS-716 BOARD, COMPLETE	
△157	3-703-244-00	BUSHING (2104), CORD	
* 158	4-884-834-00	SUPPORT, PC	
* 159	3-956-082-41	PANEL, REAR	
160	X-3942-802-1	PLATE ASSY, LOADING BASE	
161	3-953-361-01	GEAR, IDLER	

Ref. No.	Part No.	Description	Remarks
162	X-3943-483-1	FRAME (R) ASSY	
* 163	3-953-383-01	PLATE, BOTTOM	
164	X-3942-796-1	FRAME ASSY, TRAY (T)	
△165	1-533-223-11	HOLDER, FUSE	
* 166	A-6423-173-A	VS-707 BOARD, COMPLETE	
* 167	3-953-821-03	SHEET, INSULATING	
* 168	3-703-150-11	CLAMP	
△CP1	1-575-912-21	CORD, POWER	
△F21	1-532-066-00	FUSE, TIME-LAG (0.4A 250V)	
△F31	1-532-299-00	FUSE, TIME-LAG (5A/250V)	
△F32	1-532-299-00	FUSE, TIME-LAG (5A/250V)	

**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.



5-1-5. MD CHASSIS ASSEMBLY

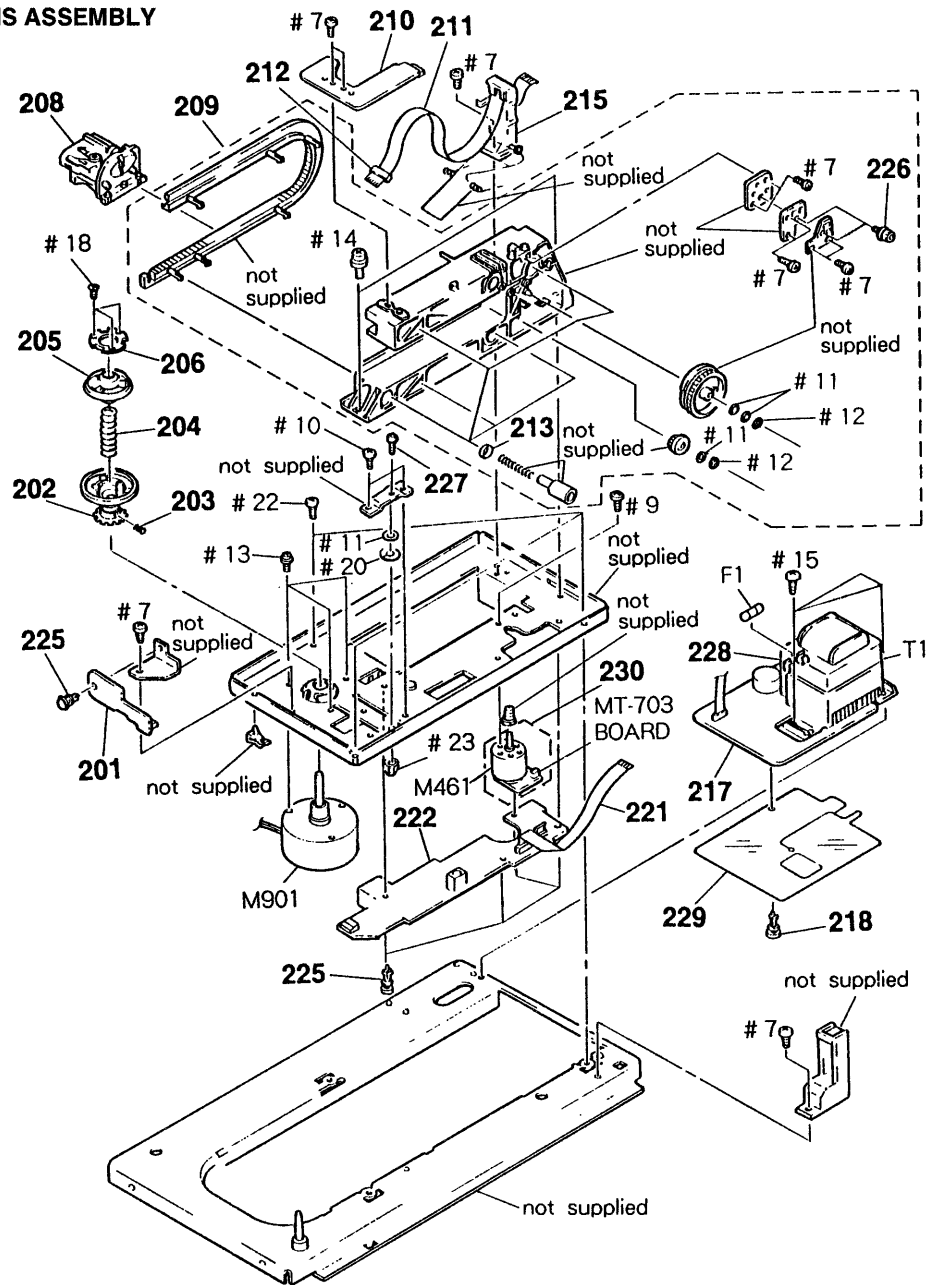

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	A-6421-957-A	FG-704 BOARD, COMPLETE		218	3-531-576-11	RIVET	
202	X-3942-779-1	TURNTABLE ASSY		221	1-765-530-11	CABLE, FLEXIBLE FLAT (14 CORE)	
203	3-701-507-00	SET SCREW, DOUBLE POINT, (M3X5)		222	A-6421-956-A	MD-703 BOARD, COMPLETE	
204	3-953-289-01	SPRING (3), COMPRESSION		225	3-703-356-00	RIVET, T TYPE	
205	3-953-292-01	GUIDE, CENTER		226	3-899-249-01	BOLT, HEXAGON SOCKET	
206	3-953-293-01	PLATE (C), YOKE		227	3-953-829-01	BOLT	
△208	8-848-286-11	DEVICE, OPTICAL KHS-150A		△228	1-533-223-11	HOLDER, FUSE	
209	A-6404-082-A	BASE BLOCK ASSY, FEED		△229	3-953-377-02	SHEET, INSULATING, TR	
210	A-6421-958-A	BI-702 BOARD, COMPLETE		230	X-3942-968-1	MOTOR BLOCK ASSY, TILT	
211	1-751-083-11	CABLE, FLEXIBLE FLAT (18 CORE)		△F1	1-532-215-00	FUSE, TIME-LAG (0.8A/250V)	
212	3-953-268-01	HOLDER (18P), FLEXIBLE		M461	1-541-930-11	MOTOR, DC (TILT)	
213	3-953-830-01	WASHER, U		M901	1-698-109-11	MOTOR, DD (SPINDLE)	
215	A-6404-076-A	STAND ASSY, FLEXIBLE RETAINER		△T1	1-423-556-11	TRANSFORMER, POWER	
* 217	A-6423-170-A	TR-718 BOARD, COMPLETE					

**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

5-2. ELECTRICAL PARTS LIST

NOTE:

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
• -XX, -X mean standardized parts, so they may have some difference from the original one.
• Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
• CAPACITORS: uF: μF

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
• COILS
uH: μH
• SEMICONDUCTORS
In each case, u: μ, for example:
uA...: μA..., uPA..., μPA...,
uPB..., μPB..., uPC..., μPC...,
uPD..., μPD...

Table with columns: Ref. No., Part No., Description, Remarks. Includes rows for BI-702 BOARD, COMPLETE, CERAMIC CHIP, PIN, CONNECTOR 5P, DIODE GP1S24, JUMPER RESISTOR, TRANSISTOR PT360FS, RESISTOR METAL CHIP.

Table with columns: Ref. No., Part No., Description, Remarks. Includes rows for FG-704 BOARD, COMPLETE, CERAMIC CHIP, CONNECTOR BOARD TO BOARD, DIODE GP1S24, JUMPER RESISTOR, TRANSISTOR 2SA1162-G, RESISTOR METAL CHIP.

\*\*\*\*\*

\*\*\*\*\*

Ref. No.	Part No.	Description	Remarks
*	A-6423-171-A	FP-734 BOARD, COMPLETE ***** (Ref. No. 3, 000 Serie)	
*	3-956-076-01	HOLDER, SEGMENT  < CAPACITOR >	
	C301	1-163-077-91 CERAMIC CHIP 0.1uF	50V
	C302	1-164-232-11 CERAMIC CHIP 0.01uF	50V
	C305	1-163-031-11 CERAMIC CHIP 0.01uF	50V
	C306	1-124-589-11 ELECT 47uF	20% 16V
	C307	1-163-031-11 CERAMIC CHIP 0.01uF	50V
△	C308	1-163-031-11 CERAMIC CHIP 0.01uF	50V
	C309	1-163-031-11 CERAMIC CHIP 0.01uF	50V
	C310	1-163-031-11 CERAMIC CHIP 0.01uF	50V
	C311	1-163-031-11 CERAMIC CHIP 0.01uF	50V
	C312	1-163-031-11 CERAMIC CHIP 0.01uF	50V
		< CONNECTOR >	
	CN301	1-506-487-11 PIN, CONNECTOR 8P	
	CN303	1-506-483-21 PIN, CONNECTOR 4P	
	CN304	1-506-486-11 PIN, CONNECTOR 7P	
	CN305	1-506-487-11 PIN, CONNECTOR 8P	
	CN306	1-506-484-11 PIN, CONNECTOR 5P	
	CN307	1-506-491-11 PIN, CONNECTOR 12P	
		< DIODE >	
	D300	8-719-302-07 LED SEL1810A (UP)	
	D301	8-719-955-04 LED PY5504S-1 (NATURAL)	
	D302	8-719-955-04 LED PY5504S-1 (NATURAL)	
	D303	8-719-302-07 LED SEL1810A (DOWN)	
	D304	8-719-302-07 LED SEL1810A (DOWN)	
	D305	8-719-302-07 LED SEL1810A (UP)	
	D306	8-719-302-07 LED SEL1810A (KARAOKE PON)	
△	D307	8-719-988-62 DIODE 1SS355	
	D308	8-719-955-04 LED PY5504S-1 (SIDE A)	
	D309	8-719-955-04 LED PY5504S-1 (SIDE B)	
	D311	8-719-047-76 DIODE GL7D206L	
		< IC >	
△	IC301	8-759-258-79 IC MB89094PF-G-123 (MODE CONTROL)	
	IC302	8-759-043-33 IC LB1721M (LED DRIVE)	
	IC303	8-759-074-40 IC PST572DMT-T1 (RESET)	
	IC304	8-759-032-29 IC (MARUBUN) MC74HC126AF	
	IC304	8-759-235-91 IC (TOSHIBA) TC74HC126AF (EL)	
	IC304	8-759-926-06 IC (MOTOROLA) SN74HC126ANS (LINE SELECT SWITCH)	
		< COIL >	
	L301	1-410-381-11 INDUCTOR CHIP 10uH	

Ref. No.	Part No.	Description	Remarks
		< TRANSISTOR >	
	Q300	8-729-904-57 TRANSISTOR DTB114EK	
	Q301	8-729-904-57 TRANSISTOR DTB114EK	
	Q303	8-729-901-04 TRANSISTOR DTA114EK	
	Q304	8-729-901-04 TRANSISTOR DTA114EK	
	Q306	8-729-901-04 TRANSISTOR DTA114EK	
	Q307	8-729-901-04 TRANSISTOR DTA114EK	
	Q308	8-729-901-04 TRANSISTOR DTA114EK	
	Q309	8-729-901-04 TRANSISTOR DTA114EK	
		< RESISTOR >	
	R300	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R301	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R302	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R303	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R304	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R305	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R306	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R307	1-216-035-00 METAL CHIP 270 5% 1/10W	
	R308	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R309	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R310	1-216-295-91 METAL GLAZE 0 5% 1/10W	
	R311	1-216-295-91 METAL GLAZE 0 5% 1/10W	
△	R312	1-208-806-11 METAL GLAZE 10K 0.50% 1/10W	
△	R313	1-208-806-11 METAL GLAZE 10K 0.50% 1/10W	
	R314	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R315	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R316	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R317	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R318	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R319	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R320	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R321	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R322	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R323	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R324	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R325	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R326	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R327	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R328	1-216-033-00 METAL CHIP 220 5% 1/10W	
	R330	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R331	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R332	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R333	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R334	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R335	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R336	1-216-037-00 METAL CHIP 330 5% 1/10W	
	R337	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R338	1-216-049-00 METAL CHIP 1K 5% 1/10W	
	R339	1-216-073-00 METAL CHIP 10K 5% 1/10W	
	R340	1-216-037-00 METAL CHIP 330 5% 1/10W	

**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**FP-734**

**JA-701**

**KP-707**

Ref. No.	Part No.	Description	Remarks
R341	1-216-037-00	METAL CHIP	330 5% 1/10W
R344	1-216-295-91	METAL GLAZE	0 5% 1/10W
R345	1-216-073-00	METAL CHIP	10K 5% 1/10W
R347	1-216-073-00	METAL CHIP	10K 5% 1/10W
R352	1-216-295-91	METAL GLAZE	0 5% 1/10W
R354	1-216-295-91	METAL GLAZE	0 5% 1/10W
R355	1-216-033-00	METAL CHIP	220 5% 1/10W
R356	1-216-033-00	METAL CHIP	220 5% 1/10W
R357	1-216-049-00	METAL CHIP	1K 5% 1/10W
R358	1-216-033-00	METAL CHIP	220 5% 1/10W
R359	1-216-033-00	METAL CHIP	220 5% 1/10W
R360	1-216-033-00	METAL CHIP	220 5% 1/10W
R361	1-216-033-00	METAL CHIP	220 5% 1/10W
R362	1-216-049-00	METAL CHIP	1K 5% 1/10W
R363	1-216-033-00	METAL CHIP	220 5% 1/10W
R364	1-216-049-00	METAL CHIP	1K 5% 1/10W
R365	1-216-073-00	METAL CHIP	10K 5% 1/10W
R367	1-216-295-91	METAL GLAZE	0 5% 1/10W
< SWITCH >			
S301	1-692-440-11	SWITCH, PUSH (DOOR SW)	
< VIBRATOR >			
X301	1-579-952-21	VIBRATOR, CERAMIC (8MHz)	
*****			
*	A-6423-176-A	JA-701 BOARD, COMPLETE	
*****			
(Ref. No. 11, 000 Serie)			
< CAPACITOR >			
C702	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C703	1-126-947-11	ELECT	47uF 20% 10V
C704	1-124-902-00	ELECT	0.47uF 20% 50V
C705	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C706	1-163-145-00	CERAMIC CHIP	0.0015uF 5% 50V
C707	1-126-964-11	ELECT	10uF 20% 50V
C708	1-124-903-11	ELECT	1uF 20% 50V
C709	1-124-903-11	ELECT	1uF 20% 50V
C710	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C711	1-126-964-11	ELECT	10uF 20% 50V
C712	1-163-145-00	CERAMIC CHIP	0.0015uF 5% 50V
C713	1-124-902-00	ELECT	0.47uF 20% 50V
C714	1-126-947-11	ELECT	47uF 20% 10V
C715	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V
C718	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V
< CONNECTOR >			
CN701	1-506-486-11	PIN, CONNECTOR 7P	
< DIODE >			
D701	8-719-800-76	DIODE	1SS226
D702	8-719-800-76	DIODE	1SS226

Ref. No.	Part No.	Description	Remarks
< FERRITE BEAD >			
FB701	1-412-390-21	INDUCTOR CHIP	0uH
FB702	1-412-390-21	INDUCTOR CHIP	0uH
FB703	1-412-390-21	INDUCTOR CHIP	0uH
FB704	1-412-390-21	INDUCTOR CHIP	0uH
FB705	1-412-390-21	INDUCTOR CHIP	0uH
< FILTER >			
FL701	1-424-031-11	FILTER, NOISE	
FL702	1-424-031-11	FILTER, NOISE	
< IC >			
IC701	8-759-099-06	IC M5218AFP-TE1 (MIC AMP)	
< JACK >			
J701	1-507-678-00	JACK (MIC 1/2)	
J702	1-750-990-11	JACK (LARGE TYPE) 2P (MIC 1/MIC 2)	
< RESISTOR >			
R701	1-216-025-00	METAL CHIP	100 5% 1/10W
R702	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R703	1-216-097-00	METAL CHIP	100K 5% 1/10W
R704	1-216-073-00	METAL CHIP	10K 5% 1/10W
R705	1-216-077-00	METAL CHIP	15K 5% 1/10W
R706	1-216-025-00	METAL CHIP	100 5% 1/10W
R707	1-216-025-00	METAL CHIP	100 5% 1/10W
R708	1-216-097-00	METAL CHIP	100K 5% 1/10W
R709	1-216-073-00	METAL CHIP	10K 5% 1/10W
R710	1-216-077-00	METAL CHIP	15K 5% 1/10W
R711	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R712	1-216-182-00	METAL GLAZE	220 5% 1/8W
R713	1-216-182-00	METAL GLAZE	220 5% 1/8W
R714	1-216-049-00	METAL CHIP	1K 5% 1/10W
R715	1-216-049-00	METAL CHIP	1K 5% 1/10W
*****			
*	A-6423-175-A	KP-707 BOARD, COMPLETE	
*****			
(Ref. No. 8, 000 Serie)			
< CAPACITOR >			
C501	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C502	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C503	1-124-927-11	ELECT	4.7uF 20% 100V
C504	1-124-927-11	ELECT	4.7uF 20% 100V
C505	1-124-927-11	ELECT	4.7uF 20% 100V
C506	1-124-927-11	ELECT	4.7uF 20% 100V
C508	1-124-916-11	ELECT	22uF 20% 63V
C509	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C510	1-126-947-11	ELECT	47uF 20% 10V
C511	1-126-947-11	ELECT	47uF 20% 10V

Ref. No.	Part No.	Description	Remarks
C512	1-126-947-11	ELECT 47uF	20% 10V
C513	1-126-923-11	ELECT 220uF	20% 10V
C514	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C515	1-126-947-11	ELECT 47uF	20% 10V
C516	1-163-006-11	CERAMIC CHIP 560PF	10% 50V
C517	1-163-006-11	CERAMIC CHIP 560PF	10% 50V
C518	1-126-947-11	ELECT 47uF	20% 10V
C519	1-124-927-11	ELECT 4.7uF	20% 100V
C520	1-126-947-11	ELECT 47uF	20% 10V
C521	1-124-927-11	ELECT 4.7uF	20% 100V
C522	1-124-927-11	ELECT 4.7uF	20% 100V
C523	1-126-947-11	ELECT 47uF	20% 10V
C524	1-126-947-11	ELECT 47uF	20% 10V
C526	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
C529	1-163-006-11	CERAMIC CHIP 560PF	10% 50V
C530	1-124-927-11	ELECT 4.7uF	20% 100V
C531	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C532	1-136-177-00	FILM 1uF	5% 50V
C533	1-130-479-00	MYLAR 0.0047uF	5% 50V
C535	1-126-947-11	ELECT 47uF	20% 10V
C536	1-126-947-11	ELECT 47uF	20% 10V
C537	1-130-467-00	MYLAR 470PF	5% 50V
C538	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
C539	1-163-229-11	CERAMIC CHIP 12PF	5% 50V
C540	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C541	1-126-947-11	ELECT 47uF	20% 10V
C542	1-126-947-11	ELECT 47uF	20% 10V
C543	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C544	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C545	1-136-177-00	FILM 1uF	5% 50V
C546	1-136-177-00	FILM 1uF	5% 50V
C547	1-130-479-00	MYLAR 0.0047uF	5% 50V
C548	1-130-479-00	MYLAR 0.0047uF	5% 50V
C549	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C550	1-163-115-00	CERAMIC CHIP 82PF	5% 50V
C551	1-126-947-11	ELECT 47uF	20% 10V
C552	1-126-947-11	ELECT 47uF	20% 10V
C553	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C554	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C557	1-126-947-11	ELECT 47uF	20% 10V
C558	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C559	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C560	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C561	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C562	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C563	1-126-947-11	ELECT 47uF	20% 10V
C569	1-130-467-00	MYLAR 470PF	5% 50V
C570	1-130-467-00	MYLAR 470PF	5% 50V
C571	1-126-947-11	ELECT 47uF	20% 10V
C574	1-126-947-11	ELECT 47uF	20% 10V

Ref. No.	Part No.	Description	Remarks
C580	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C581	1-163-087-00	CERAMIC CHIP 4PF	50V
C582	1-163-017-00	CERAMIC CHIP 0.0047uF	5% 50V
C583	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V
C584	1-124-927-11	ELECT 4.7uF	20% 100V
C585	1-136-166-00	FILM 0.12uF	5% 50V
C586	1-136-177-00	FILM 1uF	5% 50V
C587	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C588	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
< CONNECTOR >			
CN501	1-506-489-11	PIN, CONNECTOR 10P	
CN502	1-506-484-11	PIN, CONNECTOR 5P	
CN503	1-506-491-11	PIN, CONNECTOR 12P	
CN504	1-506-483-21	PIN, CONNECTOR 4P	
CN505	1-506-482-11	PIN, CONNECTOR 3P	
CN506	1-506-486-11	PIN, CONNECTOR 7P	
< DIODE >			
D501	8-719-800-76	DIODE 1SS226	
D502	8-719-976-91	DIODE DTZ4.3B	
D503	8-719-976-91	DIODE DTZ4.3B	
D504	8-719-988-62	DIODE 1SS355	
D505	8-719-988-62	DIODE 1SS355	
D521	8-719-106-43	DIODE RD9.1M-B1	
D522	8-719-106-43	DIODE RD9.1M-B1	
D580	8-719-988-62	DIODE 1SS355	
D581	8-719-104-34	DIODE 1S2836	
< FILTER >			
FL501	1-424-031-11	FILTER, NOISE	
FL502	1-424-031-11	FILTER, NOISE	
FL503	1-424-031-11	FILTER, NOISE	
FL504	1-424-031-11	FILTER, NOISE	
FL542	1-424-031-11	FILTER, NOISE	
< IC >			
IC500	8-759-262-34	IC LC83020E (DSP)	
IC501	8-759-300-71	IC HD14053BFP (EXT/INT SELECT)	
IC502	8-759-231-53	IC M5F7805 (+5V REG)	
IC503	8-759-634-96	IC M5207L05 (EVR MIC GAIN/ECHO)	
IC504	8-759-262-35	IC LC32464P-80 (D RAM)	
IC510	8-759-099-06	IC M5218AFP-TE1 (BUFFER)	
IC511	8-759-099-06	IC M5218AFP-TE1 (AMP)	
IC513	8-759-099-06	IC M5218AFP-TE1 (BUFFER)	
IC514	8-759-099-06	IC M5218AFP-TE1 (AMP)	
IC541	8-759-982-04	IC RC5532M (LPF/AMP)	
IC542	8-759-177-64	IC LC8390M-TLM (A/D)	
< JACK >			
J501	1-565-351-41	JACK, PIN 3P (LINE IN)	

# KP-707

Ref. No.	Part No.	Description	Remarks
< JUMPER RESISTOR >			
JR502	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR592	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR593	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR594	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR595	1-216-295-91	METAL GLAZE 0 5% 1/10W	
< COIL >			
L501	1-424-033-21	FILTER, NOISE	
L502	1-424-033-21	FILTER, NOISE	
< TRANSISTOR >			
Q501	8-729-900-53	TRANSISTOR DTC114EK	
Q580	8-729-216-22	TRANSISTOR 2SA1162-G	
Q581	8-729-216-22	TRANSISTOR 2SA1162-G	
Q582	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
< RESISTOR >			
R501	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R502	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R503	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R504	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R505	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R506	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R507	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R508	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R509	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R510	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R511	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R512	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	
R513	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R514	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R515	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R516	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R518	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R520	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R522	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R526	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	
R527	1-216-089-91	METAL GLAZE 47K 5% 1/10W	
R529	1-216-048-00	METAL CHIP 910 5% 1/10W	
R530	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R531	1-216-050-00	METAL GLAZE 1.1K 5% 1/10W	
R532	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R533	1-216-048-00	METAL CHIP 910 5% 1/10W	
R534	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R535	1-216-121-00	METAL CHIP 1M 5% 1/10W	
R536	1-216-074-00	METAL CHIP 11K 5% 1/10W	
R537	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R538	1-216-098-00	METAL CHIP 110K 5% 1/10W	
R539	1-216-121-00	METAL CHIP 1M 5% 1/10W	
R540	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R541	1-216-097-00	METAL CHIP 100K 5% 1/10W	

Ref. No.	Part No.	Description	Remarks
R542	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R543	1-216-048-00	METAL CHIP 910 5% 1/10W	
R544	1-216-048-00	METAL CHIP 910 5% 1/10W	
R545	1-216-048-00	METAL CHIP 910 5% 1/10W	
R546	1-216-050-00	METAL GLAZE 1.1K 5% 1/10W	
R547	1-216-050-00	METAL GLAZE 1.1K 5% 1/10W	
R548	1-216-048-00	METAL CHIP 910 5% 1/10W	
R549	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R550	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R551	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R552	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R553	1-216-074-00	METAL CHIP 11K 5% 1/10W	
R554	1-216-074-00	METAL CHIP 11K 5% 1/10W	
R555	1-216-098-00	METAL CHIP 110K 5% 1/10W	
R556	1-216-098-00	METAL CHIP 110K 5% 1/10W	
R557	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R558	1-216-096-00	METAL GLAZE 91K 5% 1/10W	
R559	1-216-025-00	METAL CHIP 100 5% 1/10W	
R560	1-216-025-00	METAL CHIP 100 5% 1/10W	
R561	1-216-025-00	METAL CHIP 100 5% 1/10W	
R562	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R563	1-216-097-00	METAL CHIP 100K 5% 1/10W	
R564	1-216-025-00	METAL CHIP 100 5% 1/10W	
R565	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R566	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R570	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R571	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R572	1-216-025-00	METAL CHIP 100 5% 1/10W	
R573	1-216-025-00	METAL CHIP 100 5% 1/10W	
R574	1-216-025-00	METAL CHIP 100 5% 1/10W	
R575	1-216-025-00	METAL CHIP 100 5% 1/10W	
R576	1-216-025-00	METAL CHIP 100 5% 1/10W	
R577	1-216-025-00	METAL CHIP 100 5% 1/10W	
R578	1-216-025-00	METAL CHIP 100 5% 1/10W	
R580	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R581	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R582	1-216-121-00	METAL CHIP 1M 5% 1/10W	
R583	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	
R584	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R585	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R586	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R587	1-216-085-00	METAL CHIP 33K 5% 1/10W	
R589	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R647	1-216-121-00	METAL CHIP 1M 5% 1/10W	
R648	1-216-121-00	METAL CHIP 1M 5% 1/10W	
< VIBRATOR >			
X501	1-567-814-11	VIBRATOR, CRYSTAL (24.576 MHz)	
*****			

Ref. No.	Part No.	Description	Remarks
*	A-6423-177-A	MA-708 BOARD, COMPLETE ***** (Ref. No. 10, 000 Serie)	
		< CAPACITOR >	
C401	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C402	1-163-031-11	CERAMIC CHIP 0.01uF	50V
		< CONNECTOR >	
CN401	1-506-483-21	PIN, CONNECTOR 4P	
		< RESISTOR >	
R401	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R402	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R403	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R404	1-216-049-00	METAL CHIP 1K 5% 1/10W	
		< VARIABLE RESISTOR >	
RV401	1-223-685-11	RES, VAR, CARBON 50K (MIC 1/2)	
RV402	1-223-685-11	RES, VAR, CARBON 50K (ECHO)	
*****			
*	A-6423-168-A	MB-712 BOARD, COMPLETE ***** (Ref. No. 1, 000 Serie)	
		< CAPACITOR >	
C002	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C004	1-124-465-00	ELECT 0.47uF 20%	50V
C005	1-163-125-00	CERAMIC CHIP 220PF 5%	50V
C006	1-163-125-00	CERAMIC CHIP 220PF 5%	50V
C007	1-163-251-11	CERAMIC CHIP 100PF 5%	50V
C008	1-163-239-11	CERAMIC CHIP 33PF 5%	50V
C009	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C010	1-137-370-11	FILM 0.01uF 5%	50V
C011	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C012	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C014	1-164-182-11	CERAMIC CHIP 0.0033uF 10%	50V
C015	1-130-489-00	MYLAR 0.033uF 5%	50V
C016	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C017	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C018	1-126-916-11	ELECT 1000uF 20%	6.3V
C019	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C020	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C022	1-163-019-00	CERAMIC CHIP 0.0068uF 10%	50V
C023	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C024	1-137-399-11	FILM 0.1uF 5%	50V
C025	1-163-227-11	CERAMIC CHIP 10PF 0.5PF	50V
C026	1-126-947-11	ELECT 47uF 20%	10V
C027	1-126-947-11	ELECT 47uF 20%	10V
C029	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C030	1-163-103-00	CERAMIC CHIP 27PF 5%	50V

Ref. No.	Part No.	Description	Remarks
C031	1-163-107-00	CERAMIC CHIP 39PF 5%	50V
C032	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C034	1-137-374-11	FILM 0.047uF 5%	50V
C035	1-130-489-00	MYLAR 0.033uF 5%	50V
C036	1-137-440-11	FILM 0.018uF 5%	50V
C037	1-130-489-00	MYLAR 0.033uF 5%	50V
C038	1-124-903-11	ELECT 1uF 20%	50V
C039	1-163-117-00	CERAMIC CHIP 100PF 5%	50V
C040	1-124-925-11	ELECT 2.2uF 20%	100V
C041	1-163-117-00	CERAMIC CHIP 100PF 5%	50V
C042	1-163-117-00	CERAMIC CHIP 100PF 5%	50V
C043	1-137-370-11	FILM 0.01uF 5%	50V
C045	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C046	1-126-947-11	ELECT 47uF 20%	10V
C047	1-163-019-00	CERAMIC CHIP 0.0068uF 10%	50V
C048	1-137-370-11	FILM 0.01uF 5%	50V
C049	1-124-903-11	ELECT 1uF 20%	50V
C050	1-137-374-11	FILM 0.047uF 5%	50V
C051	1-124-903-11	ELECT 1uF 20%	50V
C052	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C053	1-163-117-00	CERAMIC CHIP 100PF 5%	50V
C055	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C056	1-126-947-11	ELECT 47uF 20%	10V
C057	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C060	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C061	1-126-947-11	ELECT 47uF 20%	10V
C063	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C064	1-163-139-00	CERAMIC CHIP 820PF 5%	50V
C065	1-137-374-11	FILM 0.047uF 5%	50V
C066	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C067	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C068	1-126-916-11	ELECT 1000uF 20%	6.3V
C069	1-163-253-11	CERAMIC CHIP 120PF 5%	50V
C070	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C071	1-126-947-11	ELECT 47uF 20%	10V
C072	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C073	1-163-253-11	CERAMIC CHIP 120PF 5%	50V
C074	1-124-903-11	ELECT 1uF 20%	50V
C075	1-163-227-11	CERAMIC CHIP 10PF 0.5PF	50V
C076	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C077	1-163-235-11	CERAMIC CHIP 22PF 5%	50V
C078	1-163-237-11	CERAMIC CHIP 27PF 5%	50V
C079	1-163-237-11	CERAMIC CHIP 27PF 5%	50V
C080	1-163-253-11	CERAMIC CHIP 120PF 5%	50V
C081	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C082	1-163-103-00	CERAMIC CHIP 27PF 5%	50V
C083	1-163-031-11	CERAMIC CHIP 0.01uF	50V
C084	1-124-292-00	ELECT 33uF 20%	6.3V
C085	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C086	1-163-237-11	CERAMIC CHIP 27PF 5%	50V

# MB-712

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			
C087	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C150	1-163-038-00	CERAMIC CHIP	0.1uF	25V		
C088	1-163-257-11	CERAMIC CHIP	180PF	5%	50V	C151	1-163-077-91	CERAMIC CHIP	0.1uF	50V	
C089	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C152	1-126-947-11	ELECT	47uF	20%	10V	
C091	1-126-947-11	ELECT	47uF	20%	10V	C153	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C092	1-163-227-11	CERAMIC CHIP	10PF	0.5PF	50V	C154	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C093	1-163-257-11	CERAMIC CHIP	180PF	5%	50V	C158	1-124-925-11	ELECT	2.2uF	20%	100V
C095	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C160	1-126-947-11	ELECT	47uF	20%	10V	
C096	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C162	1-126-947-11	ELECT	47uF	20%	10V
C097	1-163-099-00	CERAMIC CHIP	18PF	5%	50V	C163	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C098	1-126-947-11	ELECT	47uF	20%	10V	C164	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C099	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C165	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C100	1-124-903-11	ELECT	1uF	20%	50V	C166	1-163-097-00	CERAMIC CHIP	15PF	5%	50V
C101	1-137-372-11	FILM	0.022uF	5%	50V	C167	1-163-249-11	CERAMIC CHIP	82PF	5%	50V
C102	1-137-370-11	FILM	0.01uF	5%	50V	C169	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C103	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C172	1-126-947-11	ELECT	47uF	20%	10V	
C104	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C173	1-163-038-00	CERAMIC CHIP	0.1uF	25V		
C105	1-131-347-00	TANTALUM	1uF	10%	35V	C174	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C106	1-124-903-11	ELECT	1uF	20%	50V	C203	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C108	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C206	1-124-927-11	ELECT	4.7uF	20%	100V	
C109	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C207	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	
C110	1-126-916-11	ELECT	1000uF	20%	6.3V	C208	1-126-964-11	ELECT	10uF	20%	50V
C111	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C211	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C112	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C212	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C113	1-124-925-11	ELECT	2.2uF	20%	100V	C213	1-126-947-11	ELECT	47uF	20%	10V
C114	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	C214	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C115	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C215	1-137-368-11	FILM	0.0047uF	5%	50V	
C116	1-163-109-00	CERAMIC CHIP	47PF	5%	50V	C216	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C117	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C217	1-124-927-11	ELECT	4.7uF	20%	100V	
C118	1-163-109-00	CERAMIC CHIP	47PF	5%	50V	C218	1-126-947-11	ELECT	47uF	20%	10V
C120	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C219	1-124-927-11	ELECT	4.7uF	20%	100V	
C121	1-124-925-11	ELECT	2.2uF	20%	100V	C220	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C122	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C221	1-126-947-11	ELECT	47uF	20%	10V	
C124	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C222	1-137-433-11	FILM	0.0012uF	5%	50V	
C125	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C223	1-126-947-11	ELECT	47uF	20%	10V	
C126	1-126-947-11	ELECT	47uF	20%	10V	C225	1-126-947-11	ELECT	47uF	20%	10V
C128	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C226	1-137-433-11	FILM	0.0012uF	5%	50V	
C129	1-163-121-00	CERAMIC CHIP	150PF	5%	50V	C227	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C130	1-163-097-00	CERAMIC CHIP	15PF	5%	50V	C228	1-124-927-11	ELECT	4.7uF	20%	100V
C131	1-163-031-11	CERAMIC CHIP	0.01uF	50V	C229	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C132	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C230	1-126-947-11	ELECT	47uF	20%	10V
C133	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V	C231	1-126-947-11	ELECT	47uF	20%	10V
C136	1-163-116-00	CERAMIC CHIP	91PF	5%	50V	C233	1-126-947-11	ELECT	47uF	20%	10V
C137	1-126-964-11	ELECT	10uF	20%	50V	C234	1-124-927-11	ELECT	4.7uF	20%	100V
C138	1-126-964-11	ELECT	10uF	20%	50V	C237	1-137-368-11	FILM	0.0047uF	5%	50V
C139	1-126-964-11	ELECT	10uF	20%	50V	C239	1-164-232-11	CERAMIC CHIP	0.01uF	50V	
C140	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C240	1-164-005-11	CERAMIC CHIP	0.47uF	25V	
C141	1-126-947-11	ELECT	47uF	20%	10V	C241	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C147	1-163-237-11	CERAMIC CHIP	27PF	5%	50V	C243	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C148	1-163-237-11	CERAMIC CHIP	27PF	5%	50V	C244	1-163-125-00	CERAMIC CHIP	220PF	5%	50V
C149	1-163-038-00	CERAMIC CHIP	0.1uF	25V	C245	1-163-038-00	CERAMIC CHIP	0.1uF	25V		



<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
C248	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C406	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C249	1-163-128-00	CERAMIC CHIP	300PF	5%	50V	C407	1-124-277-11	ELECT	4.7uF	20%	35V
C251	1-124-287-00	ELECT	10uF	20%	10V	C408	1-163-022-00	CERAMIC CHIP	0.012uF	10%	50V
C252	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C409	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V
C253	1-163-243-11	CERAMIC CHIP	47PF	5%	50V	C410	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C254	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C411	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C255	1-124-499-11	ELECT, NONPOLAR	1uF	20%	50V	C413	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C257	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C414	1-124-767-00	ELECT	2.2uF	20%	50V
C258	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C415	1-163-014-00	CERAMIC CHIP	0.0027uF	5%	50V
C259	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	C417	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C260	1-126-947-11	ELECT	47uF	20%	10V	C419	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C261	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C421	1-124-499-11	ELECT, NONPOLAR	1uF	20%	50V
C262	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C422	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C263	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C423	1-124-287-00	ELECT	10uF	20%	10V
C264	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C424	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C265	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C425	1-124-273-00	ELECT	3.3uF	20%	50V
C271	1-124-287-00	ELECT	10uF	20%	10V	C427	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C272	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C428	1-126-947-11	ELECT	47uF	20%	35V
C273	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C429	1-163-249-11	CERAMIC CHIP	82PF	5%	50V
C274	1-137-368-11	FILM	0.0047uF	5%	50V	C430	1-126-947-11	ELECT	47uF	20%	35V
C275	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	C432	1-163-022-00	CERAMIC CHIP	0.012uF	10%	50V
C276	1-126-947-11	ELECT	47uF	20%	10V	C433	1-163-097-00	CERAMIC CHIP	15PF	5%	50V
C277	1-137-399-11	FILM	0.1uF	5%	50V	C434	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V
C278	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C435	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C279	1-137-442-11	FILM	0.039uF	5%	50V	C436	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V
C280	1-136-169-00	FILM	0.22uF	5%	50V	C437	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C281	1-126-933-11	ELECT	100uF	20%	10V	C438	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C282	1-163-241-11	CERAMIC CHIP	39PF	5%	50V	C439	1-126-947-11	ELECT	47uF	20%	10V
C283	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C440	1-126-947-11	ELECT	47uF	20%	10V
C284	1-136-169-00	FILM	0.22uF	5%	50V	C441	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C285	1-137-442-11	FILM	0.039uF	5%	50V	C442	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C286	1-124-902-00	ELECT	0.47uF	20%	50V	C443	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C287	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C444	1-126-160-11	ELECT	1uF	20%	50V
C288	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	C445	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C289	1-137-368-11	FILM	0.0047uF	5%	50V	C446	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C290	1-126-947-11	ELECT	47uF	20%	10V	C447	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C291	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C448	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C292	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C449	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C293	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C450	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C294	1-163-119-00	CERAMIC CHIP	120PF	5%	50V	C451	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C297	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C452	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C298	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C463	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C299	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C465	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C300	1-163-005-11	CERAMIC CHIP	470PF	10%	50V	C466	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C399	1-216-295-91	METAL GLAZE	0	5%	1/10W	C467	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C400	1-164-346-11	CERAMIC CHIP	1uF		16V	C468	1-164-699-11	CERAMIC CHIP	0.0033uF	5%	50V
C401	1-163-121-00	CERAMIC CHIP	150PF	5%	50V	C469	1-163-088-00	CERAMIC CHIP	5PF		50V
C402	1-164-005-11	CERAMIC CHIP	0.47uF		25V	C500	1-126-947-11	ELECT	47uF	20%	10V
C403	1-163-133-00	CERAMIC CHIP	470PF	5%	50V	C501	1-128-453-21	ELECT CHIP	47uF	20%	6.3V
						C502	1-163-251-11	CERAMIC CHIP	100PF	5%	50V

# MB-712

Ref. No.	Part No.	Description	Remarks
C503	1-126-603-11	ELECT CHIP	4.7uF 20% 35V
C504	1-163-245-11	CERAMIC CHIP	56PF 5% 50V
C505	1-164-182-11	CERAMIC CHIP	0.0033uF 10% 50V
C506	1-128-024-11	ELECT CHIP	4.7uF 0 10V
C507	1-126-947-11	ELECT	47uF 20% 35V
C508	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C510	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C511	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C512	1-163-257-11	CERAMIC CHIP	180PF 5% 50V
C513	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C514	1-163-257-11	CERAMIC CHIP	180PF 5% 50V
C515	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C516	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C517	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C518	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C519	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C520	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C522	1-163-235-11	CERAMIC CHIP	22PF 5% 50V
C523	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C526	1-137-364-11	FILM	0.001uF 5% 50V
C529	1-137-366-11	FILM	0.0022uF 5% 50V
C530	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C531	1-124-925-11	ELECT	2.2uF 20% 100V
C533	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V
C590	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C801	1-163-129-00	CERAMIC CHIP	330PF 5% 50V
C802	1-164-232-11	CERAMIC CHIP	0.01uF 50V
C950	1-126-964-11	ELECT	10uF 20% 50V
< FILTER >			
CF001	1-527-831-00	FILTER, CERAMIC	
< CONNECTOR >			
* CN201	1-568-787-11	PIN, CONNECTOR	10P
CN202	1-506-470-11	PIN, CONNECTOR	5P
CN206	1-506-469-11	PIN, CONNECTOR	4P
CN401	1-750-687-11	HOUSING, CONNECTOR	(PC BOARD)
* CN402	1-764-594-21	CONNECTOR, FPC	18P
* CN403	1-764-595-21	CONNECTOR, FPC	14P
CN500	1-506-468-11	PIN, CONNECTOR	3P
CN501	1-506-468-11	PIN, CONNECTOR	3P
CN502	1-506-469-11	PIN, CONNECTOR	4P
CN503	1-506-472-11	PIN, CONNECTOR	7P
CN504	1-506-473-11	PIN, CONNECTOR	8P
* CN505	1-568-783-11	PIN, CONNECTOR	6P
CN701	1-506-473-11	PIN, CONNECTOR	8P
< TRIMMER >			
CT001	1-141-442-91	TRIMMER, CERAMIC	20PF
CT501	1-141-424-11	CAP, ADJ	30PF

Ref. No.	Part No.	Description	Remarks
< DIODE >			
D001	8-719-105-52	DIODE	RD3.6M-B2
D002	8-719-801-78	DIODE	ISS184
D003	8-719-988-62	DIODE	ISS355
D202	8-719-105-82	DIODE	RD5.1M-B2
D203	8-719-032-05	DIODE	KV1460TL00
D205	8-719-801-78	DIODE	ISS184
D208	8-719-801-78	DIODE	ISS184
D251	8-719-800-76	DIODE	ISS226
D253	8-719-800-76	DIODE	ISS226
D401	8-719-800-76	DIODE	ISS226
D402	8-719-800-76	DIODE	ISS226
D403	8-719-800-76	DIODE	ISS226
D405	8-719-988-62	DIODE	ISS355
D502	8-719-402-34	DIODE	MA3120-TX
D503	8-719-988-62	DIODE	ISS355
D506	8-719-104-34	DIODE	IS2836
D507	8-719-988-62	DIODE	ISS355
D508	8-719-988-62	DIODE	ISS355
D550	8-729-900-61	TRANSISTOR	DTA114ES
< FILTER >			
FL003	1-409-810-11	FILTER, LOW PASS	
FL004	1-236-478-11	FILTER, LOW PASS	
FL005	1-239-823-21	FILTER, CHROMA TRAP	
FL006	1-235-943-11	BPF	
FL007	1-239-824-11	LFP (3MHz)	
FL008	1-408-409-00	INDUCTOR	10uH
FL205	1-760-185-11	FILTER, CERAMIC	
FL206	1-760-186-11	FILTER, CERAMIC	
FL401	1-235-922-11	FILTER, LOW PASS	(1.7MHz)
< IC >			
IC001	8-759-058-52	IC	XRA10324AF-E2 (AMP)
IC002	8-759-058-52	IC	XRA10324AF-E2 (AMP)
IC003	8-759-100-97	IC	uPC339G2 (HYSTERESIS COMPARATOR)
IC004	8-752-353-92	IC	CXL5005M-T4 (CCD 1H DELAY)
IC005	8-759-233-64	IC	TC74HCU04AF (INVERTER)
IC006	8-759-257-87	IC	MM1117XFBE (SWITCH)
IC007	8-752-055-37	IC	CXA1255Q (VIDEO SIGNAL PROCESSOR)
IC008	8-759-502-69	IC	CXD1152-MS (C MOS INV)
IC009	8-752-055-36	IC	CXA1254Q (DEMODULATOR)
IC011	8-759-098-80	IC	MB90085-123 (CHARACTER GENERATOR)
IC201	8-759-093-98	IC	CXD8451M-ET (D/A CONVERTER)
IC202	8-759-008-67	IC	MC14066BF (LINE OUT SELECT)
IC203	8-752-351-78	IC	CXD2500BQ (DIGITAL SIGNAL PROCESSOR)
IC204	8-759-253-26	IC	CA0002AM-TP (AFM DEMOD CX NR)
IC205	8-759-100-96	IC	uPC4558G2 (CD SPINDLE ERROR AMP)

Ref. No.	Part No.	Description	Remarks
IC206	8-759-100-96	IC uPC4558G2 (L. P. F AMP)	
IC207	8-759-100-96	IC uPC4558G2 (L. P. F AMP)	
IC208	8-759-100-96	IC uPC4558G2 (AMP)	
IC209	8-759-100-96	IC uPC4558G2 (AMP)	
IC401	8-752-056-79	IC CXA1632Q (SERVO)	
IC402	8-759-048-30	IC LA6510L (SLED DRIVE AMP)	
IC403	8-759-300-71	IC HD14053BFP (SWITCH)	
IC404	8-759-300-71	IC HD14053BFP (SWITCH)	
IC405	8-759-060-00	IC BA10324AF (TILT ERROR AMP ADD)	
IC406	8-759-100-96	IC uPC4558G2 (DRIVE AMP)	
IC409	8-759-100-96	IC uPC4558G2 (PHASE AMP)	
IC410	8-759-242-64	IC TC4W53F (RF AMP)	
IC411	8-759-100-96	IC uPC4558G2 (PHASE AMP)	
IC420	8-759-242-64	IC TC4W53F (TRACKING ERROR AMP)	
IC500	8-759-100-97	IC uPC339G2 (COMPARATOR)	
IC501	8-759-258-78	IC MB89094PF-G-122 (SYSTEM CONTROL)	
IC502	8-759-098-78	IC MB606F06 (SYSTEM CONTROL)	
IC503	8-759-973-95	IC BA6219B (MOTOR DRIVE)	
IC504	8-759-058-52	IC XRA10324AF-E2 (AMP)	
IC505	8-759-009-06	IC MC14052BF (SIGNAL SELECT)	
IC506	8-759-300-71	IC HD14053BFP (SWITCH)	
IC507	8-759-206-28	IC MC74HC123F (MONO MULTI)	
< JACK >			
J201	1-764-592-11	JACK 3P (LINE OUT 1)	
J202	1-764-592-11	JACK 3P (LINE OUT 2)	
< JUMPER RESISTOR >			
JR001	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR002	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR003	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR004	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR005	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR006	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR007	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR008	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR009	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR010	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR011	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR204	1-216-097-00	METAL CHIP 100K 5% 1/10W	
JR207	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR210	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR235	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR282	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR401	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR402	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR403	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR502	1-216-295-91	METAL GLAZE 0 5% 1/10W	
JR502	1-216-296-91	METAL GLAZE 0 5% 1/8W	
JR511	1-216-295-91	METAL GLAZE 0 5% 1/10W	

Ref. No.	Part No.	Description	Remarks
< COIL >			
L003	1-408-419-00	INDUCTOR 68uH	
L008	1-410-657-21	INDUCTOR CHIP 180uH	
L010	1-408-421-00	INDUCTOR 100uH	
L011	1-408-422-00	INDUCTOR 120uH	
L015	1-410-385-11	INDUCTOR CHIP 22uH	
L016	1-408-609-41	INDUCTOR 33uH	
L017	1-408-773-31	INDUCTOR CHIP 4.7uH	
L201	1-408-421-00	INDUCTOR 100uH	
L202	1-408-418-00	INDUCTOR 56uH	
L210	1-408-417-00	INDUCTOR 47uH	
L401	1-408-409-00	INDUCTOR 10uH	
L402	1-408-409-00	INDUCTOR 10uH	
L501	1-410-381-11	INDUCTOR CHIP 10uH	
< TRANSISTOR >			
Q001	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q002	8-729-140-75	TRANSISTOR 2SD999-CLCK	
Q003	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q004	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q005	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q006	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q007	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q008	8-729-216-22	TRANSISTOR 2SA1162-G	
Q009	8-729-216-22	TRANSISTOR 2SA1162-G	
Q010	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q011	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q012	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q013	8-729-216-22	TRANSISTOR 2SA1162-G	
Q014	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q015	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q016	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q017	8-729-216-22	TRANSISTOR 2SA1162-G	
Q018	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q019	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q021	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q024	8-729-216-22	TRANSISTOR 2SA1162-G	
Q026	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q031	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q201	8-729-901-04	TRANSISTOR DTA114EK	
Q202	8-729-900-53	TRANSISTOR DTC114EK	
Q203	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q204	8-729-202-38	TRANSISTOR 2SC3326N	
Q205	8-729-901-04	TRANSISTOR DTA114EK	
Q207	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q209	8-729-202-38	TRANSISTOR 2SC3326N	
Q210	8-729-901-04	TRANSISTOR DTA114EK	
Q211	8-729-900-53	TRANSISTOR DTC114EK	
Q212	8-729-900-53	TRANSISTOR DTC114EK	
Q213	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q214	8-729-901-04	TRANSISTOR DTA114EK	

# MB-712

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q215	8-729-901-04	TRANSISTOR	DTA114EK	R021	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q216	8-729-900-53	TRANSISTOR	DTC114EK	R022	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q217	8-729-901-04	TRANSISTOR	DTA114EK	R023	1-216-113-00	METAL CHIP	470K 5% 1/10W
Q218	8-729-230-49	TRANSISTOR	2SC2712-YG	R024	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q219	8-729-230-49	TRANSISTOR	2SC2712-YG	R025	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q222	8-729-900-53	TRANSISTOR	DTC114EK	R026	1-216-063-00	METAL CHIP	3.9K 5% 1/10W
Q400	8-729-230-49	TRANSISTOR	2SC2712-YG	R027	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q401	8-729-216-22	TRANSISTOR	2SA1162	R028	1-216-113-00	METAL CHIP	470K 5% 1/10W
Q403	8-729-024-95	TRANSISTOR	2SB1565EF	R029	1-208-806-11	METAL GLAZE	10K 0.50% 1/10W
Q404	8-729-019-01	TRANSISTOR	2SD2394-EF	R030	1-208-804-11	METAL GLAZE	8.2K 0.50% 1/10W
Q405	8-729-019-01	TRANSISTOR	2SD2394-EF	R031	1-208-806-11	METAL GLAZE	10K 0.50% 1/10W
Q406	8-729-024-95	TRANSISTOR	2SB1565EF	R032	1-208-800-11	METAL GLAZE	5.6K 0.50% 1/10W
Q407	8-729-230-49	TRANSISTOR	2SC2712-YG	R033	1-216-079-00	METAL CHIP	18K 5% 1/10W
Q408	8-729-901-04	TRANSISTOR	DTA114EK	R034	1-216-089-91	METAL GLAZE	47K 5% 1/10W
Q409	8-729-230-49	TRANSISTOR	2SC2712-YG	R035	1-216-063-00	METAL CHIP	3.9K 5% 1/10W
Q410	8-729-230-49	TRANSISTOR	2SC2712-YG	R036	1-216-113-00	METAL CHIP	470K 5% 1/10W
Q411	8-729-230-49	TRANSISTOR	2SC2712-YG	R037	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q412	8-729-230-49	TRANSISTOR	2SC2712-YG	R038	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
Q500	8-729-900-53	TRANSISTOR	DTC114EK	R039	1-216-079-00	METAL CHIP	18K 5% 1/10W
Q501	8-729-216-22	TRANSISTOR	2SA1162	R040	1-216-077-00	METAL CHIP	15K 5% 1/10W
Q502	8-729-901-04	TRANSISTOR	DTA114EK	R041	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q503	8-729-901-04	TRANSISTOR	DTA114EK	R042	1-208-830-11	METAL GLAZE	100K 0.50% 1/10W
Q504	8-729-901-04	TRANSISTOR	DTA114EK	R043	1-216-121-00	METAL CHIP	1M 5% 1/10W
Q505	8-729-230-49	TRANSISTOR	2SC2712-YG	R044	1-216-077-00	METAL CHIP	15K 5% 1/10W
Q506	8-729-900-53	TRANSISTOR	DTC114EK	R045	1-216-049-00	METAL CHIP	1K 5% 1/10W
Q507	8-729-900-53	TRANSISTOR	DTC114EK	R046	1-216-033-00	METAL CHIP	220 5% 1/10W
Q950	8-729-202-38	TRANSISTOR	2SC3326N-G	R047	1-216-041-00	METAL CHIP	470 5% 1/10W
Q951	8-729-901-04	TRANSISTOR	DTA114EK	R048	1-216-040-00	METAL GLAZE	430 5% 1/10W
		< RESISTOR >		R049	1-216-041-00	METAL CHIP	470 5% 1/10W
R001	1-216-075-00	METAL CHIP	12K 5% 1/10W	R050	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R002	1-216-085-00	METAL CHIP	33K 5% 1/10W	R051	1-216-049-00	METAL CHIP	1K 5% 1/10W
R003	1-216-085-00	METAL CHIP	33K 5% 1/10W	R052	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R004	1-216-073-00	METAL CHIP	10K 5% 1/10W	R053	1-216-049-00	METAL CHIP	1K 5% 1/10W
R005	1-216-073-00	METAL CHIP	10K 5% 1/10W	R054	1-216-043-00	METAL CHIP	560 5% 1/10W
R006	1-216-073-00	METAL CHIP	10K 5% 1/10W	R055	1-216-091-00	METAL CHIP	56K 5% 1/10W
R007	1-216-049-00	METAL CHIP	1K 5% 1/10W	R056	1-216-077-00	METAL CHIP	15K 5% 1/10W
R008	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R057	1-216-041-00	METAL CHIP	470 5% 1/10W
R009	1-216-073-00	METAL CHIP	10K 5% 1/10W	R058	1-216-049-00	METAL CHIP	1K 5% 1/10W
R010	1-216-077-00	METAL CHIP	15K 5% 1/10W	R059	1-216-053-00	METAL CHIP	1.5K 5% 1/10W
R011	1-216-095-00	METAL CHIP	82K 5% 1/10W	R060	1-216-049-00	METAL CHIP	1K 5% 1/10W
R012	1-216-081-00	METAL CHIP	22K 5% 1/10W	R061	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R013	1-216-089-91	METAL GLAZE	47K 5% 1/10W	R062	1-216-049-00	METAL CHIP	1K 5% 1/10W
R014	1-216-075-00	METAL CHIP	12K 5% 1/10W	R063	1-216-049-00	METAL CHIP	1K 5% 1/10W
R015	1-216-097-00	METAL CHIP	100K 5% 1/10W	R064	1-216-121-00	METAL CHIP	1M 5% 1/10W
R016	1-216-097-00	METAL CHIP	100K 5% 1/10W	R065	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R017	1-216-049-00	METAL CHIP	1K 5% 1/10W	R066	1-216-021-00	METAL CHIP	68 5% 1/10W
R018	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R067	1-216-083-00	METAL CHIP	27K 5% 1/10W
R019	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R068	1-216-089-91	METAL GLAZE	47K 5% 1/10W
R020	1-216-097-00	METAL CHIP	100K 5% 1/10W	R069	1-216-097-00	METAL CHIP	100K 5% 1/10W
				R070	1-216-077-00	METAL CHIP	15K 5% 1/10W

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
R071	1-216-113-00	METAL CHIP	470K	5%	1/10W	R121	1-216-085-00	METAL CHIP	33K	5%	1/10W
R072	1-216-083-00	METAL CHIP	27K	5%	1/10W	R122	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R073	1-216-097-00	METAL CHIP	100K	5%	1/10W	R123	1-216-037-00	METAL CHIP	330	5%	1/10W
R074	1-216-097-00	METAL CHIP	100K	5%	1/10W	R124	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R075	1-216-113-00	METAL CHIP	470K	5%	1/10W	R125	1-216-295-91	METAL GLAZE	0	5%	1/10W
R076	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R126	1-216-081-00	METAL CHIP	22K	5%	1/10W
R077	1-216-095-00	METAL CHIP	82K	5%	1/10W	R127	1-216-033-00	METAL CHIP	220	5%	1/10W
R078	1-216-097-00	METAL CHIP	100K	5%	1/10W	R128	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R079	1-216-097-00	METAL CHIP	100K	5%	1/10W	R129	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R080	1-216-113-00	METAL CHIP	470K	5%	1/10W	R130	1-208-782-11	METAL GLAZE	1K	0.50%	1/10W
R081	1-216-049-00	METAL CHIP	1K	5%	1/10W	R131	1-208-781-11	METAL GLAZE	910	0.50%	1/10W
R082	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	R132	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R083	1-216-079-00	METAL CHIP	18K	5%	1/10W	R133	1-216-081-00	METAL CHIP	22K	5%	1/10W
R084	1-216-109-00	METAL CHIP	330K	5%	1/10W	R134	1-216-081-00	METAL CHIP	22K	5%	1/10W
R085	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R137	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R086	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R138	1-216-039-00	METAL CHIP	390	5%	1/10W
R087	1-216-109-00	METAL CHIP	330K	5%	1/10W	R139	1-216-091-00	METAL CHIP	56K	5%	1/10W
R088	1-216-121-00	METAL CHIP	1M	5%	1/10W	R140	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R089	1-216-121-00	METAL CHIP	1M	5%	1/10W	R141	1-216-041-00	METAL CHIP	470	5%	1/10W
R090	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R142	1-216-043-00	METAL CHIP	560	5%	1/10W
R091	1-216-077-00	METAL CHIP	15K	5%	1/10W	R143	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R092	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	R144	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R093	1-216-075-00	METAL CHIP	12K	5%	1/10W	R145	1-216-049-00	METAL CHIP	1K	5%	1/10W
R094	1-216-043-00	METAL CHIP	560	5%	1/10W	R146	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R095	1-216-079-00	METAL CHIP	18K	5%	1/10W	R147	1-216-045-00	METAL CHIP	680	5%	1/10W
R096	1-216-043-00	METAL CHIP	560	5%	1/10W	R148	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R097	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R149	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R098	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	R150	1-216-095-00	METAL CHIP	82K	5%	1/10W
R099	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R151	1-216-045-00	METAL CHIP	680	5%	1/10W
R100	1-216-073-00	METAL CHIP	10K	5%	1/10W	R152	1-216-033-00	METAL CHIP	220	5%	1/10W
R101	1-216-009-00	METAL CHIP	22	5%	1/10W	R153	1-216-081-00	METAL CHIP	22K	5%	1/10W
R102	1-216-073-00	METAL CHIP	10K	5%	1/10W	R154	1-216-081-00	METAL CHIP	22K	5%	1/10W
R103	1-216-073-00	METAL CHIP	10K	5%	1/10W	R155	1-216-049-00	METAL CHIP	1K	5%	1/10W
R104	1-216-121-00	METAL CHIP	1M	5%	1/10W	R156	1-216-295-91	METAL GLAZE	0	5%	1/10W
R105	1-216-073-00	METAL CHIP	10K	5%	1/10W	R157	1-216-295-91	METAL GLAZE	0	5%	1/10W
R106	1-216-097-00	METAL CHIP	100K	5%	1/10W	R158	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R107	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R159	1-216-117-00	METAL CHIP	680K	5%	1/10W
R108	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	R160	1-216-041-00	METAL CHIP	470	5%	1/10W
R109	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	R161	1-216-295-91	METAL GLAZE	0	5%	1/10W
R110	1-216-097-00	METAL CHIP	100K	5%	1/10W	R162	1-216-033-00	METAL CHIP	220	5%	1/10W
R111	1-216-073-00	METAL CHIP	10K	5%	1/10W	R163	1-216-097-00	METAL CHIP	100K	5%	1/10W
R112	1-216-085-00	METAL CHIP	33K	5%	1/10W	R164	1-216-049-00	METAL CHIP	1K	5%	1/10W
R113	1-216-097-00	METAL CHIP	100K	5%	1/10W	R165	1-216-295-91	METAL GLAZE	0	5%	1/10W
R114	1-216-097-00	METAL CHIP	100K	5%	1/10W	R166	1-216-049-00	METAL CHIP	1K	5%	1/10W
R115	1-216-085-00	METAL CHIP	33K	5%	1/10W	R167	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R116	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R169	1-216-049-00	METAL CHIP	1K	5%	1/10W
R117	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R170	1-216-115-00	METAL CHIP	560K	5%	1/10W
R118	1-216-085-00	METAL CHIP	33K	5%	1/10W	R174	1-216-059-00	METAL CHIP	2.7K	5%	1/10W
R119	1-216-079-00	METAL CHIP	18K	5%	1/10W	R175	1-216-021-00	METAL CHIP	68	5%	1/10W
R120	1-216-047-00	METAL CHIP	820	5%	1/10W	R179	1-216-031-00	METAL CHIP	180	5%	1/10W

# MB-712

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
R182	1-216-021-00	METAL CHIP	68	5%	1/10W	R247	1-216-073-00	METAL CHIP	10K	5%	1/10W
R189	1-216-041-00	METAL CHIP	470	5%	1/10W	R248	1-216-651-11	METAL CHIP	1K	0.5%	1/10W
R190	1-216-041-00	METAL CHIP	470	5%	1/10W	R250	1-216-295-91	METAL GLAZE	0	5%	1/10W
R191	1-216-041-00	METAL CHIP	470	5%	1/10W	R251	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W
R192	1-216-041-00	METAL CHIP	470	5%	1/10W	R252	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R193	1-216-081-00	METAL CHIP	22K	5%	1/10W	R253	1-216-084-00	METAL CHIP	30K	5%	1/10W
R194	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R254	1-216-295-91	METAL GLAZE	0	5%	1/10W
R197	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R255	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R199	1-216-095-00	METAL CHIP	82K	5%	1/10W	R256	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R200	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	R257	1-216-085-00	METAL CHIP	33K	5%	1/10W
R201	1-216-073-00	METAL CHIP	10K	5%	1/10W	R258	1-216-073-00	METAL CHIP	10K	5%	1/10W
R202	1-216-049-00	METAL CHIP	1K	5%	1/10W	R259	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R203	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	R262	1-216-649-11	METAL CHIP	820	0.5%	1/10W
R204	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	R263	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W
R205	1-216-651-11	METAL CHIP	1K	0.5%	1/10W	R264	1-216-081-00	METAL CHIP	22K	5%	1/10W
R206	1-216-676-11	METAL CHIP	11K	0.5%	1/10W	R265	1-216-105-00	METAL CHIP	220K	5%	1/10W
R207	1-216-672-11	METAL CHIP	7.5K	0.5%	1/10W	R266	1-216-676-11	METAL CHIP	11K	0.5%	1/10W
R208	1-216-635-11	METAL CHIP	220	0.5%	1/10W	R267	1-216-672-11	METAL CHIP	7.5K	0.5%	1/10W
R209	1-216-649-11	METAL CHIP	820	0.5%	1/10W	R268	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R210	1-216-049-00	METAL CHIP	1K	5%	1/10W	R269	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R211	1-216-689-11	METAL CHIP	39K	0.5%	1/10W	R271	1-218-760-11	METAL GLAZE	220K	2%	1/10W
R212	1-218-760-11	METAL GLAZE	220K	2%	1/10W	R272	1-216-073-00	METAL CHIP	10K	5%	1/10W
R213	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W	R274	1-216-074-00	METAL CHIP	11K	5%	1/10W
R214	1-216-676-11	METAL CHIP	11K	0.5%	1/10W	R275	1-216-097-00	METAL CHIP	100K	5%	1/10W
R215	1-216-672-11	METAL CHIP	7.5K	0.5%	1/10W	R276	1-216-676-11	METAL CHIP	11K	0.5%	1/10W
R216	1-216-073-00	METAL CHIP	10K	5%	1/10W	R277	1-216-672-11	METAL CHIP	7.5K	0.5%	1/10W
R217	1-216-685-11	METAL CHIP	27K	0.5%	1/10W	R278	1-216-121-00	METAL CHIP	1M	5%	1/10W
R218	1-216-685-11	METAL CHIP	27K	0.5%	1/10W	R279	1-216-095-00	METAL CHIP	82K	5%	1/10W
R219	1-216-295-91	METAL GLAZE	0	5%	1/10W	R281	1-216-097-00	METAL CHIP	100K	5%	1/10W
R220	1-216-073-00	METAL CHIP	10K	5%	1/10W	R283	1-216-121-00	METAL CHIP	1M	5%	1/10W
R221	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	R284	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R224	1-216-649-11	METAL CHIP	820	0.5%	1/10W	R286	1-208-838-11	METAL GLAZE	220K	0.50%	1/10W
R226	1-216-657-11	METAL CHIP	1.8K	0.5%	1/10W	R287	1-208-798-11	METAL GLAZE	4.7K	0.50%	1/10W
R228	1-216-073-00	METAL CHIP	10K	5%	1/10W	R289	1-208-829-11	METAL GLAZE	91K	0.50%	1/10W
R229	1-216-105-00	METAL CHIP	220K	5%	1/10W	R290	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R231	1-216-651-11	METAL CHIP	1K	0.5%	1/10W	R291	1-208-824-11	METAL GLAZE	56K	0.50%	1/10W
R232	1-216-295-91	METAL GLAZE	0	5%	1/10W	R292	1-216-097-00	METAL CHIP	100K	5%	1/10W
R233	1-216-295-91	METAL GLAZE	0	5%	1/10W	R293	1-216-097-00	METAL CHIP	100K	5%	1/10W
R234	1-218-760-11	METAL GLAZE	220K	2%	1/10W	R295	1-216-073-00	METAL CHIP	10K	5%	1/10W
R236	1-216-084-00	METAL CHIP	30K	5%	1/10W	R298	1-216-073-00	METAL CHIP	10K	5%	1/10W
R237	1-216-085-00	METAL CHIP	33K	5%	1/10W	R299	1-216-097-00	METAL CHIP	100K	5%	1/10W
R238	1-216-651-11	METAL CHIP	1K	0.5%	1/10W	R300	1-208-824-11	METAL GLAZE	56K	0.50%	1/10W
R239	1-216-635-11	METAL CHIP	220	0.5%	1/10W	R301	1-216-295-91	METAL GLAZE	0	5%	1/10W
R240	1-216-649-11	METAL CHIP	820	0.5%	1/10W	R303	1-216-097-00	METAL CHIP	100K	5%	1/10W
R241	1-218-760-11	METAL GLAZE	220K	2%	1/10W	R304	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R242	1-216-685-11	METAL CHIP	27K	0.5%	1/10W	R305	1-208-824-11	METAL GLAZE	56K	0.50%	1/10W
R243	1-216-081-00	METAL CHIP	22K	5%	1/10W	R306	1-208-824-11	METAL GLAZE	56K	0.50%	1/10W
R244	1-218-760-11	METAL GLAZE	220K	2%	1/10W	R307	1-208-837-11	METAL GLAZE	200K	0.50%	1/10W
R245	1-218-760-11	METAL GLAZE	220K	2%	1/10W	R308	1-216-073-00	METAL CHIP	10K	5%	1/10W
R246	1-216-295-91	METAL GLAZE	0	5%	1/10W	R309	1-216-073-00	METAL CHIP	10K	5%	1/10W

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
R311	1-216-097-00	METAL CHIP	100K	5%	1/10W	R425	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R315	1-216-095-00	METAL CHIP	82K	5%	1/10W	R426	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R317	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	R427	1-216-099-00	METAL CHIP	120K	5%	1/10W
R318	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R428	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R319	1-216-101-00	METAL CHIP	150K	5%	1/10W	R429	1-216-093-00	METAL CHIP	68K	5%	1/10W
R320	1-216-101-00	METAL CHIP	150K	5%	1/10W	R431	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R321	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	R432	1-216-082-00	METAL GLAZE	24K	5%	1/10W
R322	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R433	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R323	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R434	1-216-097-00	METAL CHIP	100K	5%	1/10W
R324	1-216-077-00	METAL CHIP	15K	5%	1/10W	R435	1-216-073-00	METAL CHIP	10K	5%	1/10W
R325	1-216-104-00	METAL CHIP	200K	5%	1/10W	R436	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R326	1-216-017-00	METAL CHIP	47	5%	1/10W	R437	1-216-077-00	METAL CHIP	15K	5%	1/10W
R327	1-216-049-00	METAL CHIP	1K	5%	1/10W	R438	1-216-085-00	METAL CHIP	33K	5%	1/10W
R328	1-216-049-00	METAL CHIP	1K	5%	1/10W	R439	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R329	1-216-049-00	METAL CHIP	1K	5%	1/10W	R440	1-216-049-00	METAL CHIP	1K	5%	1/10W
R330	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	R441	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R331	1-216-041-00	METAL CHIP	470	5%	1/10W	R442	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R332	1-216-023-00	METAL CHIP	82	5%	1/10W	R443	1-216-085-00	METAL CHIP	33K	5%	1/10W
R333	1-216-077-00	METAL CHIP	15K	5%	1/10W	R444	1-216-033-00	METAL CHIP	220	5%	1/10W
R334	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R445	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R335	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R446	1-216-081-00	METAL CHIP	22K	5%	1/10W
R336	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	R447	1-216-081-00	METAL CHIP	22K	5%	1/10W
R340	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R448	1-216-092-00	METAL GLAZE	62K	5%	1/10W
R341	1-216-071-00	METAL CHIP	8.2K	5%	1/10W	R449	1-216-113-00	METAL CHIP	470K	5%	1/10W
R399	1-412-390-21	INDUCTOR CHIP	0uH			R450	1-216-073-00	METAL CHIP	10K	5%	1/10W
R400	1-216-097-00	METAL CHIP	100K	5%	1/10W	R451	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R401	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R452	1-216-073-00	METAL CHIP	10K	5%	1/10W
R402	1-216-045-00	METAL CHIP	680	5%	1/10W	R453	1-216-085-00	METAL CHIP	33K	5%	1/10W
R403	1-216-045-00	METAL CHIP	680	5%	1/10W	R454	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R404	1-216-093-00	METAL CHIP	68K	5%	1/10W	R455	1-216-097-00	METAL CHIP	100K	5%	1/10W
R405	1-216-107-00	METAL CHIP	270K	5%	1/10W	R456	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R406	1-216-099-00	METAL CHIP	120K	5%	1/10W	R457	1-216-073-00	METAL CHIP	10K	5%	1/10W
R407	1-216-075-00	METAL CHIP	12K	5%	1/10W	R458	1-216-073-00	METAL CHIP	10K	5%	1/10W
R408	1-216-083-00	METAL CHIP	27K	5%	1/10W	R459	1-216-049-00	METAL CHIP	1K	5%	1/10W
R409	1-216-049-00	METAL CHIP	1K	5%	1/10W	R460	1-216-075-00	METAL CHIP	12K	5%	1/10W
R410	1-216-101-00	METAL CHIP	150K	5%	1/10W	R461	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R411	1-216-077-00	METAL CHIP	15K	5%	1/10W	R462	1-216-085-00	METAL CHIP	33K	5%	1/10W
R412	1-216-101-00	METAL CHIP	150K	5%	1/10W	R463	1-216-077-00	METAL CHIP	15K	5%	1/10W
R413	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R464	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R414	1-216-075-00	METAL CHIP	12K	5%	1/10W	R465	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R415	1-216-085-00	METAL CHIP	33K	5%	1/10W	R466	1-216-081-00	METAL CHIP	22K	5%	1/10W
R416	1-216-103-91	METAL GLAZE	180K	5%	1/10W	R467	1-216-089-91	METAL GLAZE	47K	5%	1/10W
R417	1-216-097-00	METAL CHIP	100K	5%	1/10W	R468	1-216-081-00	METAL CHIP	22K	5%	1/10W
R418	1-216-091-00	METAL CHIP	56K	5%	1/10W	R469	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R419	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R470	1-216-075-00	METAL CHIP	12K	5%	1/10W
R420	1-216-085-00	METAL CHIP	33K	5%	1/10W	R471	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R421	1-216-097-00	METAL CHIP	100K	5%	1/10W	R472	1-216-017-00	METAL CHIP	47	5%	1/10W
R422	1-216-109-00	METAL CHIP	330K	5%	1/10W	R473	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R423	1-216-101-00	METAL CHIP	150K	5%	1/10W	R474	1-216-003-11	METAL GLAZE	12	5%	1/10W
R424	1-216-067-00	METAL CHIP	5.6K	5%	1/10W	R475	1-216-081-00	METAL CHIP	22K	5%	1/10W

# MB-712

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R476	1-216-146-00	METAL GLAZE	6.8	5%	1/8W	R527	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R477	1-216-079-00	METAL CHIP	18K	5%	1/10W	R528	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R478	1-216-109-00	METAL CHIP	330K	5%	1/10W	R529	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R479	1-216-093-00	METAL CHIP	68K	5%	1/10W	R530	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R480	1-216-095-00	METAL CHIP	82K	5%	1/10W	R531	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R481	1-216-369-00	METAL OXIDE	1	5%	2W F	R532	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R482	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	△R533	1-212-950-00	FUSIBLE	4.7	5%	1/2W F
R483	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	R534	1-216-105-00	METAL CHIP	220K	5%	1/10W
R484	1-216-033-00	METAL CHIP	220	5%	1/10W	R535	1-216-093-00	METAL CHIP	68K	5%	1/10W
R485	1-216-041-00	METAL CHIP	470	5%	1/10W	R536	1-216-095-00	METAL CHIP	82K	5%	1/10W
R486	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R537	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R487	1-216-039-00	METAL CHIP	390	5%	1/10W	R538	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R488	1-216-047-00	METAL CHIP	820	5%	1/10W	R539	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R489	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	R540	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R490	1-216-037-00	METAL CHIP	330	5%	1/10W	R541	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R491	1-216-146-00	METAL GLAZE	6.8	5%	1/8W	R542	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R492	1-216-073-00	METAL CHIP	10K	5%	1/10W	R545	1-216-049-00	METAL CHIP	1K	5%	1/10W
R493	1-216-095-00	METAL CHIP	82K	5%	1/10W	R546	1-216-049-00	METAL CHIP	1K	5%	1/10W
R494	1-216-079-00	METAL CHIP	18K	5%	1/10W	R547	1-216-049-00	METAL CHIP	1K	5%	1/10W
R495	1-216-079-00	METAL CHIP	18K	5%	1/10W	R548	1-216-073-00	METAL CHIP	10K	5%	1/10W
R496	1-216-099-00	METAL CHIP	120K	5%	1/10W	R549	1-216-105-00	METAL CHIP	220K	5%	1/10W
R497	1-216-099-00	METAL CHIP	120K	5%	1/10W	R550	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R498	1-216-077-00	METAL CHIP	15K	5%	1/10W	R552	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R499	1-216-099-00	METAL CHIP	120K	5%	1/10W	R553	1-216-029-00	METAL CHIP	150	5%	1/10W
R500	1-216-073-00	METAL CHIP	10K	5%	1/10W	R554	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R501	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R556	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R502	1-216-111-00	METAL CHIP	390K	5%	1/10W	R557	1-216-081-00	METAL CHIP	22K	5%	1/10W
R503	1-216-113-00	METAL CHIP	470K	5%	1/10W	R558	1-216-021-00	METAL CHIP	68	5%	1/10W
R504	1-208-808-11	METAL GLAZE	12K	0.50%	1/10W	R559	1-216-097-00	METAL CHIP	100K	5%	1/10W
R505	1-216-035-00	METAL CHIP	270	5%	1/10W	R560	1-216-049-00	METAL CHIP	1K	5%	1/10W
R506	1-208-810-11	METAL GLAZE	15K	0.50%	1/10W	R561	1-216-049-00	METAL CHIP	1K	5%	1/10W
R507	1-208-844-11	METAL GLAZE	390K	0.50%	1/10W	R562	1-216-049-00	METAL CHIP	1K	5%	1/10W
R508	1-216-049-00	METAL CHIP	1K	5%	1/10W	R563	1-216-049-00	METAL CHIP	1K	5%	1/10W
R509	1-208-816-11	METAL GLAZE	27K	0.50%	1/10W	R564	1-216-049-00	METAL CHIP	1K	5%	1/10W
R510	1-208-838-11	METAL GLAZE	220K	0.50%	1/10W	R565	1-216-121-00	METAL CHIP	1M	5%	1/10W
R511	1-208-806-11	METAL GLAZE	10K	0.50%	1/10W	R566	1-216-049-00	METAL CHIP	1K	5%	1/10W
R512	1-208-818-11	METAL GLAZE	33K	0.50%	1/10W	R568	1-216-049-00	METAL CHIP	1K	5%	1/10W
R513	1-208-830-11	METAL GLAZE	100K	0.50%	1/10W	R569	1-216-049-00	METAL CHIP	1K	5%	1/10W
R514	1-216-077-00	METAL CHIP	15K	5%	1/10W	R570	1-216-049-00	METAL CHIP	1K	5%	1/10W
R515	1-208-818-11	METAL GLAZE	33K	0.50%	1/10W	R571	1-216-049-00	METAL CHIP	1K	5%	1/10W
R516	1-216-085-00	METAL CHIP	33K	5%	1/10W	R572	1-216-049-00	METAL CHIP	1K	5%	1/10W
R517	1-216-105-00	METAL CHIP	220K	5%	1/10W	R573	1-216-049-00	METAL CHIP	1K	5%	1/10W
R518	1-216-081-00	METAL CHIP	22K	5%	1/10W	R574	1-216-049-00	METAL CHIP	1K	5%	1/10W
R520	1-216-073-00	METAL CHIP	10K	5%	1/10W	R575	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R521	1-216-045-00	METAL CHIP	680	5%	1/10W	R576	1-216-049-00	METAL CHIP	1K	5%	1/10W
R522	1-216-105-00	METAL CHIP	220K	5%	1/10W	R577	1-216-049-00	METAL CHIP	1K	5%	1/10W
R523	1-216-033-00	METAL CHIP	220	5%	1/10W	R578	1-216-049-00	METAL CHIP	1K	5%	1/10W
R524	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R579	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R525	1-216-073-00	METAL CHIP	10K	5%	1/10W	R580	1-216-049-00	METAL CHIP	1K	5%	1/10W
R526	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	R581	1-216-049-00	METAL CHIP	1K	5%	1/10W

**Note:** The components identified by mark **△** or dotted line with mark **△** are critical for safety. Replace only with part number specified.



Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R582	1-216-049-00	METAL CHIP	1K	5%	1/10W	R644	1-216-295-91	METAL GLAZE	0	5%	1/10W
R583	1-216-049-00	METAL CHIP	1K	5%	1/10W	R645	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R584	1-216-089-91	METAL GLAZE	47K	5%	1/10W	R646	1-216-073-00	METAL CHIP	10K	5%	1/10W
R585	1-216-049-00	METAL CHIP	1K	5%	1/10W	R647	1-216-073-00	METAL CHIP	10K	5%	1/10W
R586	1-216-049-00	METAL CHIP	1K	5%	1/10W	R648	1-216-073-00	METAL CHIP	10K	5%	1/10W
R587	1-216-049-00	METAL CHIP	1K	5%	1/10W	R649	1-216-025-00	METAL CHIP	100	5%	1/10W
R588	1-216-049-00	METAL CHIP	1K	5%	1/10W	R650	1-216-101-00	METAL CHIP	150K	5%	1/10W
R589	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R651	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R590	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R801	1-216-105-00	METAL CHIP	220K	5%	1/10W
R591	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R802	1-216-105-00	METAL CHIP	220K	5%	1/10W
R592	1-216-049-00	METAL CHIP	1K	5%	1/10W	R803	1-216-295-91	METAL GLAZE	0	5%	1/10W
R593	1-208-795-11	METAL GLAZE	3.6K	0.50%	1/10W	R804	1-216-097-00	METAL CHIP	100K	5%	1/10W
R594	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	R805	1-216-117-00	METAL CHIP	680K	5%	1/10W
R595	1-216-049-00	METAL CHIP	1K	5%	1/10W	R806	1-216-085-00	METAL CHIP	33K	5%	1/10W
R597	1-216-049-00	METAL CHIP	1K	5%	1/10W	R807	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R598	1-216-295-91	METAL GLAZE	0	5%	1/10W	R808	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R604	1-216-049-00	METAL CHIP	1K	5%	1/10W	R809	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R605	1-216-295-91	METAL GLAZE	0	5%	1/10W	R810	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R606	1-216-037-00	METAL CHIP	330	5%	1/10W	R812	1-216-295-91	METAL GLAZE	0	5%	1/10W
R608	1-216-049-00	METAL CHIP	1K	5%	1/10W	R813	1-216-295-91	METAL GLAZE	0	5%	1/10W
R609	1-216-049-00	METAL CHIP	1K	5%	1/10W	R814	1-216-295-91	METAL GLAZE	0	5%	1/10W
R610	1-216-049-00	METAL CHIP	1K	5%	1/10W	R815	1-216-109-00	METAL CHIP	330K	5%	1/10W
R611	1-216-049-00	METAL CHIP	1K	5%	1/10W	R816	1-216-043-00	METAL CHIP	560	5%	1/10W
R612	1-216-295-91	METAL GLAZE	0	5%	1/10W	R850	1-216-077-00	METAL CHIP	15K	5%	1/10W
R613	1-216-049-00	METAL CHIP	1K	5%	1/10W	R900	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R614	1-216-049-00	METAL CHIP	1K	5%	1/10W	R901	1-208-808-11	METAL GLAZE	12K	0.50%	1/10W
R615	1-216-049-00	METAL CHIP	1K	5%	1/10W	R902	1-208-808-11	METAL GLAZE	12K	0.50%	1/10W
R616	1-216-049-00	METAL CHIP	1K	5%	1/10W	R903	1-216-021-00	METAL CHIP	68	5%	1/10W
R617	1-216-049-00	METAL CHIP	1K	5%	1/10W	R904	1-216-021-00	METAL CHIP	68	5%	1/10W
R618	1-216-049-00	METAL CHIP	1K	5%	1/10W	R905	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R619	1-216-073-00	METAL CHIP	10K	5%	1/10W	R906	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R620	1-216-049-00	METAL CHIP	1K	5%	1/10W	R907	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R621	1-216-049-00	METAL CHIP	1K	5%	1/10W	R912	1-216-095-00	METAL CHIP	82K	5%	1/10W
R622	1-216-049-00	METAL CHIP	1K	5%	1/10W	R913	1-216-083-00	METAL CHIP	27K	5%	1/10W
R623	1-216-049-00	METAL CHIP	1K	5%	1/10W	R914	1-216-049-00	METAL CHIP	1K	5%	1/10W
R625	1-216-049-00	METAL CHIP	1K	5%	1/10W	R915	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R626	1-216-073-00	METAL CHIP	10K	5%	1/10W	R916	1-216-077-00	METAL CHIP	15K	5%	1/10W
R628	1-216-041-00	METAL CHIP	470	5%	1/10W	R917	1-216-047-00	METAL CHIP	820	5%	1/10W
R630	1-216-049-00	METAL CHIP	1K	5%	1/10W	R918	1-216-045-00	METAL CHIP	680	5%	1/10W
R632	1-216-049-00	METAL CHIP	1K	5%	1/10W	R923	1-216-022-00	METAL CHIP	75	5%	1/10W
R633	1-216-097-00	METAL CHIP	100K	5%	1/10W	R950	1-216-049-00	METAL CHIP	1K	5%	1/10W
R634	1-216-073-00	METAL CHIP	10K	5%	1/10W	R951	1-216-097-00	METAL CHIP	100K	5%	1/10W
R635	1-216-049-00	METAL CHIP	1K	5%	1/10W						
R636	1-216-049-00	METAL CHIP	1K	5%	1/10W						< VARIABLE RESISTOR >
R637	1-216-057-00	METAL CHIP	2.2K	5%	1/10W						
R638	1-216-081-00	METAL CHIP	22K	5%	1/10W	RV001	1-223-239-11	RES, ADJ, CARBON	10K		
R639	1-216-081-00	METAL CHIP	22K	5%	1/10W	RV002	1-223-239-11	RES, ADJ, CARBON	10K		
R641	1-216-295-91	METAL GLAZE	0	5%	1/10W	RV401	1-238-602-11	RES, ADJ, CARBON	47K		
R642	1-216-089-91	METAL GLAZE	47K	5%	1/10W	RV402	1-238-602-11	RES, ADJ, CARBON	47K		
R643	1-216-049-00	METAL CHIP	1K	5%	1/10W	RV501	1-223-240-11	RES, ADJ, CARBON	22K		
											< SWITCH >
						S201	1-553-725-21	SWITCH, SLIDE (ATT)			

**MB-712**

**MD-703**

**MT-702**

Ref. No.	Part No.	Description	Remarks
		< TEST PIN >	
TP501	1-537-676-11	PIN, TERMINAL	
		< VIBRATOR >	
X201	1-567-908-11	VIBRATOR, CRYSTAL (16.934MHz)	
X501	1-567-900-11	OSCILLATOR, CRYSTAL (14.31818MHz)	
*****			
	A-6421-956-A	MD-703 BOARD, COMPLETE	
		*****	
		(Ref. No. 2, 000 Serie)se)	
	3-953-262-01	HOLDER, LED	
		< CAPACITOR >	
C431	1-126-947-11	ELECT 47uF	20% 35V
		< CONNECTOR >	
* CN431	1-764-595-21	CONNECTOR, FPC 14P	
CN432	1-506-470-11	PIN, CONNECTOR 5P	
CN433	1-564-014-11	PIN, CONNECTOR 4P	
CN434	1-506-468-11	PIN, CONNECTOR 3P	
		< DIODE >	
D431	8-719-912-39	LED SLR-932A	
D432	8-729-020-74	DIODE GP1S24	
D433	8-729-020-74	DIODE GP1S24	
D434	8-729-020-74	DIODE GP1S24	
		< IC >	
IC431	8-759-927-46	IC SN74HC00ANS (DETECTOR CONTROL)	
		< JUMPER RESISTOR >	
JR413	1-216-296-00	METAL CHIP	0 5% 1/8W
JR414	1-216-295-91	METAL GLAZE	0 5% 1/10W
JR431	1-216-296-00	METAL CHIP	0 5% 1/8W
JR432	1-216-296-00	METAL CHIP	0 5% 1/8W
JR433	1-216-296-00	METAL CHIP	0 5% 1/8W
JR435	1-216-296-00	METAL CHIP	0 5% 1/8W
JR437	1-216-296-00	METAL CHIP	0 5% 1/8W
JR438	1-216-296-00	METAL CHIP	0 5% 1/8W
JR439	1-216-296-00	METAL CHIP	0 5% 1/8W
JR440	1-216-296-00	METAL CHIP	0 5% 1/8W
JR441	1-216-296-00	METAL CHIP	0 5% 1/8W
JR442	1-216-296-00	METAL CHIP	0 5% 1/8W
JR443	1-216-296-00	METAL CHIP	0 5% 1/8W
JR444	1-216-296-00	METAL CHIP	0 5% 1/8W
JR445	1-216-296-00	METAL CHIP	0 5% 1/8W

Ref. No.	Part No.	Description	Remarks
JR446	1-216-296-00	METAL CHIP	0 5% 1/8W
JR447	1-216-296-00	METAL CHIP	0 5% 1/8W
JR448	1-216-296-00	METAL CHIP	0 5% 1/8W
JR449	1-216-296-00	METAL CHIP	0 5% 1/8W
JR450	1-216-296-00	METAL CHIP	0 5% 1/8W
JR451	1-216-296-00	METAL CHIP	0 5% 1/8W
JR452	1-216-296-00	METAL CHIP	0 5% 1/8W
JR453	1-216-296-00	METAL CHIP	0 5% 1/8W
JR454	1-216-296-00	METAL CHIP	0 5% 1/8W
JR455	1-216-296-00	METAL CHIP	0 5% 1/8W
JR456	1-216-296-00	METAL CHIP	0 5% 1/8W
JR457	1-216-296-00	METAL CHIP	0 5% 1/8W
JR458	1-216-296-00	METAL CHIP	0 5% 1/8W
JR460	1-216-296-00	METAL CHIP	0 5% 1/8W
JR461	1-216-296-00	METAL CHIP	0 5% 1/8W
JR462	1-216-296-00	METAL CHIP	0 5% 1/8W
		< RESISTOR >	
R431	1-216-033-00	METAL CHIP	220 5% 1/10W
R432	1-216-049-00	METAL CHIP	1K 5% 1/10W
R433	1-216-049-00	METAL CHIP	1K 5% 1/10W
R434	1-216-045-00	METAL CHIP	680 5% 1/10W
R435	1-216-099-00	METAL CHIP	120K 5% 1/10W
R436	1-216-039-00	METAL CHIP	390 5% 1/10W
R437	1-216-099-00	METAL CHIP	120K 5% 1/10W
R438	1-216-095-00	METAL CHIP	82K 5% 1/10W
R439	1-216-095-00	METAL CHIP	82K 5% 1/10W
		< SWITCH >	
S431	1-692-440-11	SWITCH, PUSH (TILT)	
*****			
	A-6421-953-A	MT-702 BOARD, COMPLETE	
		*****	
		(Ref. No. 4, 000 Serie)se)	
		< CAPACITOR >	
C471	1-161-063-00	CERAMIC	0.1uF 10% 50V
		< CONNECTOR >	
* CN471	1-695-105-11	PIN, CONNECTOR (PC BOARD) 3P BOARD	
*****			

Ref. No.	Part No.	Description	Remarks
*	A-6423-169-A	PS-716 BOARD, COMPLETE ***** (Ref. No. 6, 000 Seriese)	
Δ	1-533-223-11	HOLDER, FUSE	
	7-685-646-81	SCREW +BVTP 3X8 TYPE2	
		< CAPACITOR >	
C031	1-126-948-11	ELECT	100uF 20% 35V
C032	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C034	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C035	1-126-941-11	ELECT	470uF 20% 25V
C036	1-126-944-11	ELECT	3300uF 20% 25V
C037	1-126-946-11	ELECT	6800uF 20% 25V
C038	1-126-944-11	ELECT	3300uF 20% 25V
C039	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C040	1-124-997-11	ELECT	470uF 20% 10V
C041	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C042	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C043	1-124-997-11	ELECT	470uF 20% 10V
C044	1-163-031-11	CERAMIC CHIP	0.01uF 50V
C045	1-124-563-11	ELECT	2200uF 20% 25V
C046	1-124-557-11	ELECT	1000uF 20% 25V
C047	1-124-557-11	ELECT	1000uF 20% 25V
C051	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C052	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V
C054	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C055	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C056	1-163-007-11	CERAMIC CHIP	680PF 10% 50V
C058	1-163-035-00	CERAMIC CHIP	0.047uF 50V
C059	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
C060	1-163-007-11	CERAMIC CHIP	680PF 10% 50V
C061	1-163-017-00	CERAMIC CHIP	0.0047uF 5% 50V
C062	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
C063	1-124-122-11	ELECT	100uF 20% 50V
C064	1-163-035-00	CERAMIC CHIP	0.047uF 50V
C701	1-126-916-11	ELECT	1000uF 20% 6.3V
C702	1-126-916-11	ELECT	1000uF 20% 6.3V
C703	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C704	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V
C706	1-163-011-11	CERAMIC CHIP	0.0015uF 10% 50V
C707	1-126-964-11	ELECT	10uF 20% 50V
C708	1-163-809-11	CERAMIC CHIP	0.047uF 10% 25V
C709	1-163-139-00	CERAMIC CHIP	820PF 5% 50V
C710	1-124-927-11	ELECT	4.7uF 20% 100V
C711	1-126-916-11	ELECT	1000uF 20% 6.3V
C712	1-126-916-11	ELECT	1000uF 20% 6.3V
C713	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C714	1-126-966-11	ELECT	33uF 20% 16V
C718	1-126-948-11	ELECT	100uF 20% 35V

Ref. No.	Part No.	Description	Remarks
		< CONNECTOR >	
* CN030	1-564-029-00	PIN, CONNECTOR 4P	
CN031	1-506-483-21	PIN, CONNECTOR 4P	
CN051	1-506-487-11	PIN, CONNECTOR 8P	
CN052	1-564-506-11	PLUG, CONNECTOR 3P	
CN053	1-506-483-21	PIN, CONNECTOR 4P	
CN055	1-506-485-11	PIN, CONNECTOR 6P	
		< DIODE >	
ΔD031	8-719-200-82	DIODE 11ES2	
ΔD032	8-719-200-82	DIODE 11ES2	
D033	8-719-911-19	DIODE 1SS119	
ΔD034	8-719-025-17	DIODE D3SBA10-4100	
ΔD035	8-719-911-19	DIODE 1SS119	
D036	8-719-980-78	DIODE ERA83-006	
D037	8-719-980-78	DIODE ERA83-006	
D038	8-719-980-78	DIODE ERA83-006	
D039	8-719-980-78	DIODE ERA83-006	
D051	8-719-980-78	DIODE ERA83-006	
D052	8-719-980-78	DIODE ERA83-006	
D053	8-719-200-82	DIODE 11ES2	
D054	8-719-200-82	DIODE 11ES2	
D055	8-719-911-19	DIODE 1SS119	
D056	8-719-911-19	DIODE 1SS119	
D057	8-719-911-19	DIODE 1SS119	
D058	8-719-109-85	DIODE RD5.1ESB2	
D059	8-719-109-75	DIODE RD4.3ESB2	
D060	8-719-911-19	DIODE 1SS119	
ΔD061	8-719-503-40	DIODE S3V40	
D701	8-719-980-78	DIODE ERA83-006	
D702	8-719-980-78	DIODE ERA83-006	
		< IC >	
ΔIC031	8-759-231-53	IC TA7805S (+5V REG)	
IC032	8-759-199-82	IC uPC24M08HF (+8V REG)	
IC033	8-759-012-70	IC MC7908CT (-8V REG)	
IC051	8-759-509-91	IC XRA10393F (PWM CONVERSION)	
IC052	8-759-100-96	IC uPC4558G2 (PWM AMP/CURRENT FEED BACK)	
ΔIC701	8-759-946-09	IC FA7611M (REG)	
		< COIL >	
L051	1-424-219-11	COIL, CHOKE 300uH	
L701	1-424-219-11	COIL, CHOKE 300uH	
L702	1-412-525-21	INDUCTOR 10uH	
L703	1-412-537-31	INDUCTOR 100uH	
L704	1-424-219-11	COIL, CHOKE 300uH	
L705	1-412-525-21	INDUCTOR 10uH	

**Note:** The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
< IC LINK >			
△PS051	1-532-675-00	LINK, IC 1.5A	
△PS052	1-532-675-00	LINK, IC 1.5A	
△PS053	1-532-843-21	LINK, IC	
△PS054	1-532-843-21	LINK, IC	
< TRANSISTOR >			
Q031	8-729-141-75	TRANSISTOR 2SD596DV345	
△Q051	8-729-117-11	TRANSISTOR 2SB1151-L	
△Q052	8-729-019-31	TRANSISTOR 2SC4596E	
△Q053	8-729-117-11	TRANSISTOR 2SB1151-L	
△Q054	8-729-019-31	TRANSISTOR 2SC4596E	
Q055	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q056	8-729-216-22	TRANSISTOR 2SA1162-G	
Q058	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q059	8-729-216-22	TRANSISTOR 2SA1162-G	
Q060	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q061	8-729-119-76	TRANSISTOR 2SA1175-HFE	
△Q701	8-729-925-37	TRANSISTOR 2SB891	
△Q702	8-729-925-37	TRANSISTOR 2SB891	
< RESISTOR >			
△R031	1-212-867-00	FUSIBLE 27 5%	1/4W F
R032	1-216-057-00	METAL CHIP 2.2K 5%	1/10W
△R033	1-216-426-11	METAL OXIDE 82 5%	1W F
R034	1-216-049-00	METAL CHIP 1K 5%	1/10W
R035	1-216-061-00	METAL CHIP 3.3K 5%	1/10W
R051	1-216-081-00	METAL CHIP 22K 5%	1/10W
R052	1-216-075-00	METAL CHIP 12K 5%	1/10W
R053	1-216-093-00	METAL CHIP 68K 5%	1/10W
R054	1-216-081-00	METAL CHIP 22K 5%	1/10W
R055	1-216-091-00	METAL CHIP 56K 5%	1/10W
R056	1-216-097-00	METAL CHIP 100K 5%	1/10W
R057	1-216-073-00	METAL CHIP 10K 5%	1/10W
R061	1-216-089-91	METAL GLAZE 47K 5%	1/10W
R062	1-216-065-00	METAL CHIP 4.7K 5%	1/10W
R063	1-216-049-00	METAL CHIP 1K 5%	1/10W
R064	1-247-750-11	CARBON 680 5%	1/2W
R065	1-247-750-11	CARBON 680 5%	1/2W
R066	1-216-049-00	METAL CHIP 1K 5%	1/10W
△R067	1-216-369-00	METAL OXIDE 1 5%	2W F
R068	1-208-821-11	METAL GLAZE 43K 0.50%	1/10W
R069	1-208-822-11	METAL GLAZE 47K 0.50%	1/10W
R070	1-208-821-11	METAL GLAZE 43K 0.50%	1/10W
R071	1-208-822-11	METAL GLAZE 47K 0.50%	1/10W
R072	1-216-073-00	METAL CHIP 10K 5%	1/10W
R073	1-216-073-00	METAL CHIP 10K 5%	1/10W
△R074	1-215-866-11	METAL OXIDE 330 5%	1W F
R075	1-216-073-00	METAL CHIP 10K 5%	1/10W
R076	1-247-750-11	CARBON 680 5%	1/2W
R077	1-216-073-00	METAL CHIP 10K 5%	1/10W
R078	1-216-093-00	METAL CHIP 68K 5%	1/10W

Ref. No.	Part No.	Description	Remarks
R079	1-216-097-00	METAL CHIP 100K 5%	1/10W
R080	1-216-097-00	METAL CHIP 100K 5%	1/10W
R701	1-208-790-11	METAL GLAZE 2.2K 0.50%	1/10W
R702	1-208-814-11	METAL GLAZE 22K 0.50%	1/10W
R703	1-216-035-00	METAL CHIP 270 5%	1/10W
R704	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R705	1-216-043-00	METAL CHIP 560 5%	1/10W
R706	1-216-043-00	METAL CHIP 560 5%	1/10W
R707	1-208-822-11	METAL GLAZE 47K 0.50%	1/10W
R708	1-216-109-00	METAL CHIP 330K 5%	1/10W
R709	1-216-119-00	METAL CHIP 820K 5%	1/10W
R710	1-216-043-00	METAL CHIP 560 5%	1/10W
R711	1-208-830-11	METAL GLAZE 100K 0.50%	1/10W
R712	1-208-814-11	METAL GLAZE 22K 0.50%	1/10W
R713	1-208-794-11	METAL GLAZE 3.3K 0.50%	1/10W
R714	1-208-805-11	METAL GLAZE 9.1K 0.50%	1/10W
R715	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R716	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R717	1-216-029-00	METAL CHIP 150 5%	1/10W
< RELAY >			
△RY031	1-515-833-11	RELAY	
*****			
*	A-6423-174-A	PW-710 BOARD, COMPLETE	
*****			
(Ref. No. 7, 000 Serie)			
< CAPACITOR >			
C201	1-163-038-00	CERAMIC CHIP 0.1uF	25V
< CONNECTOR >			
CN201	1-506-487-11	PIN, CONNECTOR 8P	
< DIODE >			
D201	8-719-046-97	DIODE GL8ED5 (POWER)	
D202	8-719-042-48	DIODE SLR-33DC3F (SELECT)	
D203	8-719-042-48	DIODE SLR-33DC3F (SURROUND MODE)	
D204	8-719-042-48	DIODE SLR-33DC3F (LINE IN)	
< IC >			
IC201	8-741-810-59	IC SBX1810-59 (REMOTE CONTROL)	
< TRANSISTOR >			
Q201	8-729-901-04	TRANSISTOR DTA114EK	
Q202	8-729-901-04	TRANSISTOR DTA114EK	
Q203	8-729-901-04	TRANSISTOR DTA114EK	
Q204	8-729-901-04	TRANSISTOR DTA114EK	

PW-710

SW-719

SW-728

TR-718

VS-707

Ref. No.	Part No.	Description	Remarks
< RESISTOR >			
R201	1-216-063-00	METAL CHIP 3.9K 5%	1/10W
R202	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
R203	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
R204	1-216-037-00	METAL CHIP 330 5%	1/10W
R205	1-216-037-00	METAL CHIP 330 5%	1/10W
R206	1-216-081-00	METAL CHIP 22K 5%	1/10W
R207	1-216-037-00	METAL CHIP 330 5%	1/10W
R208	1-216-037-00	METAL CHIP 330 5%	1/10W
R209	1-216-037-00	METAL CHIP 330 5%	1/10W
< SWITCH >			
S201	1-572-946-11	SWITCH, TACTIL (POWER)	
S202	1-572-946-11	SWITCH, TACTIL (OPEN/CLOSE)	
S203	1-572-946-11	SWITCH, TACTIL (LINE IN)	
S204	1-572-946-11	SWITCH, TACTIL (VOCAL)	
S205	1-572-946-11	SWITCH, TACTIL (SELECT)	
*****			
	A-6421-954-A	SW-719 BOARD, COMPLETE	
*****			
(Ref. No. 4, 000 Serie)se			
< CONNECTOR >			
* CN481	1-566-779-11	PIN, CONNECTOR (PC BOARD) 4P BOARD	
< SWITCH >			
S481	1-692-439-11	SWITCH, PUSH (LOAD/CHUCK)	
*****			
*	A-6423-172-A	SW-728 BOARD, COMPLETE	
*****			
(Ref. No. 7, 000 Serie)se			
< CONNECTOR >			
CN101	1-506-484-11	PIN, CONNECTOR 5P	
< DIODE >			
D103	8-719-992-30	LED SLR-305MC3F (AUTO RESUME)	
D104	8-719-992-30	LED SLR-305MC3F (AUTO RESUME)	
< TRANSISTOR >			
Q103	8-729-901-04	TRANSISTOR DTA114EK	
< RESISTOR >			
R103	1-216-037-00	METAL CHIP 330 5%	1/10W
R104	1-216-037-00	METAL CHIP 330 5%	1/10W
R105	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
R106	1-216-063-00	METAL CHIP 3.9K 5%	1/10W
R107	1-216-071-00	METAL CHIP 8.2K 5%	1/10W

Ref. No.	Part No.	Description	Remarks
R108	1-216-081-00	METAL CHIP 22K 5%	1/10W
R109	1-216-059-00	METAL CHIP 2.7K 5%	1/10W
R110	1-216-063-00	METAL CHIP 3.9K 5%	1/10W
R111	1-216-071-00	METAL CHIP 8.2K 5%	1/10W
< SWITCH >			
S101	1-572-946-11	SWITCH, TACTIL (SIDE B)	
S102	1-572-946-11	SWITCH, TACTIL (>)	
S103	1-572-946-11	SWITCH, TACTIL (SIDE A)	
S104	1-572-946-11	SWITCH, TACTIL (■)	
S105	1-572-946-11	SWITCH, TACTIL (■)	
S106	1-572-946-11	SWITCH, TACTIL (DOWN)	
S107	1-572-946-11	SWITCH, TACTIL (UP)	
S108	1-572-946-11	SWITCH, TACTIL (◀)	
S109	1-572-946-11	SWITCH, TACTIL (▶)	
*****			
*	A-6423-170-A	TR-718 BOARD, COMPLETE	
*****			
(Ref. No. 5, 000 Serie)se			
△	1-533-223-11	HOLDER, FUSE	
< CAPACITOR >			
△C001	1-104-705-11	FILM 0.1uF 20%	250V
< CONNECTOR >			
△CN001	1-564-419-11	HEADER, SPRING (POWER) 2P	
< TRANSFORMER >			
△T001	1-423-556-11	TRANSFORMER, POWER	
△T002	1-406-884-11	FILTER, LINE	
*****			
*	A-6423-173-A	VS-707 BOARD, COMPLETE	
*****			
(Ref. No. 9, 000 Serie)se			
△	1-533-223-11	HOLDER, FUSE	
< SWITCH >			
△S021	1-570-615-11	SELECTOR, POWER VOLTAGE	
*****			

**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS	
		*****	
211	1-751-083-11	CABLE, FLEXIBLE FLAT (18 CORE)	
221	1-765-530-11	CABLE, FLEXIBLE FLAT (14 CORE)	
△CP1	1-575-912-21	CORD, POWER	
△F31	1-532-299-00	FUSE, TIME-LAG (5A/250V)	
△F32	1-532-299-00	FUSE, TIME-LAG (5A/250V)	
△F1	1-532-215-00	FUSE, TIME-LAG (0.8A/250V)	
M461	1-541-930-11	MOTOR, DC (TILT)	
M471	X-3942-963-1	MOTOR ASSY (LOADING MOTOR)	
M901	1-698-109-11	MOTOR, DD (SPINDLE)	

\*\*\*\*\*

ACCESSORIES & PACKING MATERIALS  
\*\*\*\*\*

	1-467-603-51	REMOTE COMMANDER (RMT-M24A)	
△	1-569-008-11	ADAPTER, CONVERSION 2P	
	1-751-271-11	CORD, CONNECTION (A/V CABLE) (1.5m)	
	3-758-251-11	MANUAL, INSTRUCTION (ENGLISH, CHINESE, SPANISH)	
*	3-958-652-01	INDIVIDUAL CARTON	
*	3-958-653-01	CUSHION (UPPER)	
*	3-958-654-01	CUSHION (LOWER)	

\*\*\*\*\*

Ref. No.	Part No.	Description	Remarks
		*****	
		<b>HARDWARE LIST</b>	
		*****	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-671-155-01	STEEL BALL 3.0	
#3	7-624-105-04	STOP RING 2.3, TYPE -E	
#4	7-682-546-04	SCREW +PTT 3X5 (S)	
#6	7-682-645-01	SCREW +PS 3X4	
#7	7-685-647-79	SCREW +BVTP 3X10 TYPE2	
#8	7-627-553-48	SCREW, PRECISION +P 2X4	
#9	7-628-253-05	SCREW +PS 2X4	
#10	7-621-759-35	+PSW, 2.6X5	
#11	7-688-003-11	W 3, MIDDLE	
#12	7-624-190-81	STOP RING 2, TYPE-CS	
#13	7-682-946-09	SCREW +PSW 3X5	
#14	7-621-759-65	+PSW, 2.6X8	
#15	7-685-661-14	SCREW +BVTP 4X12 TYPE2 IT-3	
#16	7-624-102-04	STOP RING 1.5, TYPE -E	
#17	7-621-770-87	SCREW +B 2.6X5	
#18	7-685-103-19	SCREW +P 2X5 TYPE2 SLIT	
#19	7-685-158-19	SCREW +P 4X6 TYPE2 NON-SLIT	
#20	7-623-210-22	SW 4, TYPE 2	
#21	7-685-648-79	SCREW +BVTP 3X12 TYPE2	
#22	7-685-646-81	SCREW +BVTP 3X8 TYPE2	
#23	7-684-220-02	NUT 3, HEXAGON CAP	

**Note:** The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

SECTION 6  
INTERFACE · IC PIN FUNCTION

6-1. SYSTEM CONTROL MICROPROCESSOR PIN FUNCTION  
(MB-712 BOARD IC501 MB89094PF-G-117)

PIN NO.	PIN NAME	I/O	FUNCTION
1	N/C		NOT USED. OPEN
2	CLK32	1	CRYSTAL OSCILLATOR (32 KHZ) INPUT
3	GND	1	GND
4	GND	1	GND
5	ZFSC	1	2.166 (7.159 MHz) INPUT
6	N/C		NOT USED. OPEN
7	V <sub>SS</sub>	1	GND
8	MRST	1	RESET INPUT TERMINAL (L: RESET)
9	FRBO	1	PHILLIPS CODE (FRAME NO.) READ OUT ENABLE INPUT
10	FOACK	0	PHILLIPS CODE (SUBO CODE) DATA OUTPUT CONTROL (H: DATA OUTPUT)
11	FOSEL	0	PHILLIPS CODE (SUBO DATA SELECT (L: SUBO))
12	JPCTR	0	1 TRACK JUMP (ITJ) MULTI TRACK JUMP (MTJ) SELECT SIGNAL OUTPUT (H: ITJ)
13	SFLOCK	1	SPINDLE SERVO LOCK SIGNAL (H: DURING SPINDLE SERVO IS LOCKING)
14	TBCHOLDIN	0	CHROMA TBC CONTROL SIGNAL OUTPUT
15	SCOR	1	H WHEN SUB CODE SYNC IS DETECTED
16	PB V	1	PLAYBACK V SYNC SIGNAL INPUT
17	REF V	1	REFERENCE V SYNC SIGNAL
18	ALT	0	INTERNAL A REGISTER LATCH OF EXPANSION OUTPUT PORT IC (IC502 ON MB-712 BOARD) OUTPUT
19	BLT	0	INTERNAL B REGISTER LATCH OF EXPANSION OUTPUT PORT IC (IC502 ON MB-712 BOARD) OUTPUT
20	BUSY	1	COMMUNICATION ENABLE SIGNAL FROM MODE CONTROL MICROPROCESSOR (H: COMMUNICATION ENABLE)
21-24	N/C		NOT USED. OPEN
25	CLSCS	0	CHIP SELECT SIGNAL OUTPUT FOR CLS DT (PIN ②) SIGNAL
26	SPDPLFS	0	SPINDLE PULSE DRIVE SIGNAL OUTPUT (H: SPINDLE FREE-RUN)
27	TBRAMON	0	SERVO IC BRAKE MONITOR (H: BRAKE ON). NOT USED
28	PULL UP +5V	1	+5 V
29	CLS DT	1	CLV SCAN V SYNC COUNTER SERIAL DATA FROM IC502 INPUT. NORMALLY L. WHEN SERIAL DATA OUTPUT TO DSP (DIGITAL SIGNAL PROCESSOR) IC (IC203 ON MB-712 BOARD) AND EXPANSION OUTPUT PORT IC
30	SETDT	0	SERIAL DATA OUTPUT TO DSP (DIGITAL SIGNAL PROCESSOR) IC (IC203 ON MB-712 BOARD) AND EXPANSION OUTPUT PORT IC
31	SETCK	0	SERIAL TRANSFERRING CLOCK TO DSP IC AND IC502
32	SPDLFG1	1	SPINDLE FG INPUT 1 (1 ROTATION: 12 WAVES)
33	CG V	1	CGV SYNC SIGNAL
34	LD SEARCH	0	SPINDLE SERVO CONTROL OUTPUT (H: DURING LD SEARCHING)
35	SPDL FR	0	SPINDLE ROTATING DIRECTION SIGNAL OUTPUT (H: FWD)
36	AUX SEL	0	H WHEN THERE IS AUXILIARY INPUT. NOT USED. FIXED TO L
37	JMP TRIG	0	TRACK JUMP TRIGGER PULSE OUTPUT
38	ANALOG	0	AUDIO ANALOG/DIGITAL SELECT (H: ANALOGUE, L: DIGITAL)
39	CDG	1	NOT USED. CONNECTED TO GND
40	CDG MUTE	0	NOT USED. OPEN
41	MTI	1	TRACKING PULSE OUTPUT FOR MTI. NORMALLY INPUT. OUTPUT DURING JUMPING TRACKS (L: FWD)
42	MTF ON/OFF	0	MTF CORRECTION ON/OFF SIGNAL (H: MTF ON)
43	TRK OFF	0	PUT OFF SERVO IC TRACKING CONTROL (L: TRACKING OFF)
44	N/C		NOT USED. OPEN
45	GMUTE	0	ON CLV SCAN, GRAY PICTURE MUTE CONTROL OUTPUT (L: PLAYBACK PICTURE) (H: GRAY PICTURE)
46	N/C		NOT USED. OPEN
47	CAV	0	H: CAV DISC, L: OTHERS OR UNIDENTIFIED
48	POK	1	FOCUS LOCK SIGNAL INPUT (H: FOCUS LOCK)
49	V <sub>CC</sub>	1	+5 V POWER SUPPLY
50	BUSY	1	COMMUNICATION ENABLE SIGNAL FROM MODE CONTROL MICROPROCESSOR (H: COMMUNICATION ENABLE)
51	TV/DISC	0	RF TV/DISC SELECT (H: TV, L: DISC). NOT USED. OPEN
52	SLED FWD	0	SLED FWD FORCED MOVE SIGNAL OUTPUT FROM PORT (H: FWD MOVE)
53	SLED REV	0	SLED REV FORCED MOVE SIGNAL OUTPUT FROM PORT (H: REV MOVE)
54	MIMICS	0	SERIAL COMMUNICATION CHIP SELECT SIGNAL OUTPUT TO MODE CONTROL MICROPROCESSOR
55	LOADING	0	TRAY LOADING DRIVE
56	UN LOADING	0	TRAY EJECT DRIVE
57	N/C		NOT USED. OPEN

PIN NO.	PIN NAME	I/O	FUNCTION
58	V <sub>SS</sub>	1	GND
59	LINE MUTE	0	AUDIO OUTPUT MUTE SIGNAL OUTPUT (H: MUTE)
60	SLED SPEED	0	SLED DRIVE SPEED CHANGE (L: SLOW)
61	SV DSP RST	0	RESET OUTPUT TO (L: RESET) SERVO IC (IC401 ON MB-712 BOARD). DSP IC AND DIA CONVERTER (IC201 ON MB-712 BOARD)
62	LD ON	0	LASER DIODE ON/OFF SIGNAL (H: ON EMITTING)
63	CDLD CDV	0	L: PLAYING CD OR AUDIO PART OF CDV, H: OTHERS
64	SLED MODE	0	SLED CONTROL OUTPUT
65	SIDE A/B	0	TILT SERVO SIDE SELECT (A, H, B, L)
66	T/H SV	0	TILT/HIGH SELECT (L: TILT)
67	LCSV1	1	LOADING/CHUCKING POSITION SENSOR INPUT 1
68	LD LED	0	LED EMITTING SIGNAL FOR DISC DISCRIMINATION
69	LCSV3	1	LOADING/CHUCKING POSITION SENSOR INPUT 2
70	LCSV2	1	LOADING/CHUCKING POSITION SENSOR INPUT 3
71	SPDL FG2	1	SPINDLE FG INPUT 2
72	TILT LIMIT	1	TILT UP/DOWN LIMIT SW INPUT
73	TILT CTR	1	TILT CENTER POSITION SW INPUT
74	MECH S1	1	32 BYTE SERIAL TRANSFERRING DATA INPUT
75, 76	N/C		NOT USED. OPEN
77	MECH S1	1	32 BYTE SERIAL TRANSFERRING DATA OUTPUT. SERIAL DATA INPUT FROM MODE CONTROL MICROPROCESSOR
78	MECH S0	0	32 BYTE SERIAL TRANSFERRING DATA INPUT. SERIAL DATA OUTPUT TO MODE CONTROL MICROPROCESSOR
79	MECH CLK	0	32 BYTE SERIAL TRANSFERRING CLOCK
80	T CNT	1	JUMPING TRACKS COUNTING SIGNAL INPUT. NOT USED
81, 82	N/C		NOT USED. OPEN
83	AV <sub>SS</sub>	1	GND
84	LDDET	1	A/D INPUT. THERE IS DISC OR NOT. 8/12 INCH DETECTION
85	CDVFR LMT	1	A/D INPUT SLED POSITION INFORMATION (CDV)
86	CD ABLD	1	A/D INPUT SLED POSITION INFORMATION (CD, ALD, BLD)
87	INLIMIT	1	A/D INPUT SLED POSITION INFORMATION (INLIMIT)
88	EXPLT	0	LATCH SIGNAL FOR DSP IC OUTPUT
89	MUTG	0	DSP MUTE SIGNAL (H: MUTE)
90	LOCK	1	FRAME SYNC (EFM) LOCK SIGNAL (H: LOCK)
91	SENSE	1	VARIOUS SENSE INPUT SIGNAL FROM DSP
92	AV <sub>CC</sub>	1	+5 V POWER SUPPLY
93	EMP ON	0	EMPHASIS SELECT SIGNAL OUTPUT (L: EMPHASIS ON)
94	N/C		NOT USED. OPEN
95	A MUTE 2	0	L CH AUDIO OUTPUT MODE SELECT *
96	A MUTE 1	0	R CH AUDIO OUTPUT MODE SELECT *
97	CX	0	CX ON/OFF CONTROL OUTPUT (L: CX ON)
98	N/C		NOT USED. OPEN
99	DSPSEL	0	SELECTS COMMUNICATION WITH DSP (L: CONNECT, H: SEPARATE)
100	V <sub>CC</sub>	1	POWER SUPPLY TERMINAL (-5 V)

\* AUDIO OUTPUT MODE SELECT

A MUTE 1	A MUTE 2	MODE	AUDIO OUTPUT
L	L	STEREO	L
L	H	STEREO	R
H	L	MONO (L)	L/CH1
H	H	MONO (R)	R/CH2
		MUTE	MUTE
		MUTE	MUTE

**6-2. EXPANSION OUTPUT PORT IC PIN FUNCTION  
(MB-712 BOARD IC502 MB606F06)**

PIN NO.	PIN NAME	I/O	FUNCTION
1	SP OFF	0	SPINDLE MOTOR ON/OFF SIGNAL OUTPUT (H: SPINDLE MOTOR ON)
2	V <sub>SS</sub>		GND
3	TBC MUT	0	TBC MUTE SIGNAL OUTPUT
4	TBC REFH	0	REFERENCE HORIZONTAL SYNC. SIGNAL FOR TBC OUTPUT
5	PBCS	1	PB COMPOSITE V. H SYNC. SIGNAL INPUT
6	SP RHO	0	REFERENCE H SYNC. SIGNAL FOR SPINDLE SERVO OUTPUT
7	SP RHI	1	REFERENCE H SYNC. SIGNAL FOR SPINDLE SERVO INPUT
8	CNT2	0	TBC CONTROL OUTPUT (H: LINE SYSTEM, L: BURST SYSTEM)
9	JUMP TGL	0	JUMP TOGGLE OUTPUT
10	SVEX	0	SYNC. SIGNAL FOR CHARACTER GENERATOR SELECT. NOT USED
11	CGV	0	V SYNC. GENERAL FOR CHARACTER GENERATOR OUTPUT. NOT USED
12	V <sub>SS</sub>		GND
13	SELH	0	H SYNC. SIGNAL FOR CHARACTER GENERATOR (IC011 ON MB-712 BOARD) OUTPUT
14	XPHS	0	PB H SYNC. SIGNAL OUTPUT. NOT USED
15	SP PBHO	0	PB H SYNC. SIGNAL FOR SPINDLE SERVO OUTPUT
16	SP PBHI	1	PB H SYNC. SIGNAL FOR SPINDLE SERVO INPUT
17	HS	0	CENTER OF ECCENTRICITY OUTPUT. NOT USED
18	MEM REFH	0	REF H OUTPUT FOR THE SET. WITH MEMORY (NOT RESET). NOT USED
19	FSC	0	fsc (3.579545 MHz) OUTPUT
20	XOUT	0	4 fsc (14.31818 MHz) OUTPUT
21	XIN	1	4 fsc (14.31818 MHz) INPUT (CLOCK)
22	HD	1	H SYNC. SIGNAL FOR DIGITAL TBC INPUT
23	V <sub>SS</sub>		GND
24	V. MUTE	0	VIDEO MUTE SIGNAL OUTPUT
25	V. MUTE2	0	SIGNAL FOR ADDING REF. V SYNC. SIGNAL TO PLAYBACK VIDEO SIGNAL DURING CLV SCANNING
26	G BURST	0	BURST SIGNAL (3.58 MHz) FOR GRAY PICTURE GENERATION DURING CLV SCANNING
27	PC OUT1	0	SPINDLE SERVO FORCED ACCELERATION/DECELERATION SIGNAL OUTPUT. (H: ACCELERATION, L: DECELERATION, Hiz: OTHERS)
28	PC OUT2	0	SPINDLE SERVO H SERVO ERROR OUTPUT
29	TBC H	1	H SYNC. SIGNAL AFTER TBC CORRECTION FOR CHARACTER GENERATOR INPUT
30	DS GATE	0	GATE SIGNAL FOR READING OUT PHILLIPS CODE (FRAME NO.)
31	DATA	1	PHILLIPS CODE DATA INPUT
32	V. MUTE1	0	BLANKING V SYNC. SIGNAL OF PLAYBACK VIDEO SIGNAL DURING CLV SCANNING
33	V <sub>DD</sub>		+5 V
34	DLRH	0	GRAY SIGNAL FOR GENERATING GRAY PICTURE DURING CLV SCANNING
35	-GRH	0	H SYNC. SIGNAL FOR GENERATING GRAY PICTURE DURING CLV SCANNING
36	SP UNLOCK	0	SIGNAL FOR SETTING BY MECHANISM CONTROLLER OUTPUT WHEN SPINDLE IS UNLOCKED
37	8 $\frac{1}{2}$	0	LD DISC SIZE SET OUTPUT. (H: 8 INCHES, L: 12 INCHES) NOT USED
38	CD/LDCDV	0	DISC TYPE SET OUTPUT H: PLAYBACK CD OR AUDIO PART OF CDV L: PLAYBACK LD OR VIDEO PART OF CDV
39	CDV	0	SPINDLE SERVO MODE SET (H: VIDEO PART OF CDV)
40	FG/ID	0	SPINDLE SERVO MODE SET (H: FG MODE (WHILE COUNTING SPINDLE FG, FORCING TO ACCELERATE/DECELERATE SPINDLE MOTOR))

PIN NO.	PIN NAME	I/O	FUNCTION
41	HP OUT	0	HOLD PULSE OUTPUT. NORMALLY OUT. PULSE OUTPUT DURING JUMPING TRACKS
42	V <sub>SS</sub>		GND
43	SV CLK	0	CLOCK FOR SERVO IC (IC401 ON MB-712 BOARD) 1/8 fsc (APPROX. 450 kHz)
44	JMP	1	TRACK JUMP CONTROL SIGNAL INPUT (GATE FOR HP OUT)
45	SET CLK	1	INTERNAL A, B REGISTER CLOCK INPUT FROM SYSTEM CONTROL MICROPROCESSOR (IC901 ON MB-712 BOARD)
46	GVID	1	GRAY PICTURE CONTROL SIGNAL INPUT DURING CLV SCANNING (H: GRAY PICTURE, L: PLAYBACK PICTURE)
47	SET DT	1	INTERNAL A, B REGISTER SERIAL DATA INPUT FROM SYSTEM CONTROLLER
48	CLS DT	0	CLV SCAN V SYNC. COUNTER DATA OUTPUT TO SYSTEM CONTROLLER. NORMALLY L. DATA OUTPUT WHEN CLS CLK (PIN 48) IS H.
49	CLS CLK	1	CLOCK FOR READING OUT CLV SCAN V SYNC COUNTER DATA CONTROL SIGNAL INPUT
50	B LD	1	INTERNAL B REGISTER LATCH INPUT
51	A LD	1	INTERNAL A REGISTER LATCH INPUT
52	V <sub>SS</sub>		GND
53	REF V	0	REFERENCE V SYNC. SIGNAL OUTPUT
54	PB V	0	PLAYBACK V SYNC. SIGNAL OUTPUT
55	TBC HOLD	1	CHROMA TBC CONTROL SIGNAL INPUT
56	SP LOCK	0	SPINDLE SERVO LOCK SIGNAL OUTPUT (H: DURING LOCKING). NOT USED
57	JP CTL	1	TRACK JUMP SELECT SIGNAL INPUT (H: 1 TRACK JUMP, L: MULTI TRACK JUMP)
58	FQSEL	1	PHILLIPS CODE/SUBQ (SUB CODE) SELECT SIGNAL INPUT (L: SUBQ)
59	FQACK	1	PHILLIPS CODE/SUBQ DATA OUTPUT CONTROL (H: DATA OUTPUT)
60	F REQ	0	PHILLIPS CODE READING OUT ENABLE SIGNAL OUTPUT
61	MRST	1	SYSTEM RESET INPUT (L: RESET)
62	FSC2	0	2 fsc (7.159 MHz) OUTPUT
63	V <sub>SS</sub>		GND
64	FH2	0	2 fsc (3.15 kHz) CARRIER FOR SPINDLE MOTOR PWM DRIVE CIRCUIT
65	DRFSEL	1	CLOCK CONTROL SIGNAL FOR DSP IC (IC203 ON MB-712 BOARD) (L: CONNECTED TO DSP)
66	FOCLK	1	CLOCK FOR READING OUT PHILLIPS CODE, SUBQ DATA INPUT
67	D OUT	0	PHILLIPS CODE, SUBQ CODE SERIAL DATA OUTPUT
68	SUBQ CLK	0	SUBQ TRANSFERRING CLOCK
69	SUBQ	1	SUBQ DATA INPUT
70	DSP CLK	0	CLOCK FOR DSP IC OUTPUT
71	DOCINH	0	DROP OUT CORRECTION INHIBITION OUTPUT. NOT USED
72	CLV1	0	SPINDLE SERVO GAIN MONITOR OUTPUT. NOT USED
73	V <sub>DD</sub>		+5 V
74	CLV2	0	SPINDLE SERVO GAIN MONITOR OUTPUT. NOT USED
75	REF HE	0	REF HE MONITOR OUTPUT. NOT USED
76	REF HC	0	REF HC MONITOR OUTPUT
77	HMSK	0	PHILLIPS CODE MASKING SIGNAL MONITOR OUTPUT
78	BO6	0	B REGISTER D6 OUTPUT. NOT USED
79	BO7	0	B REGISTER D7 OUTPUT. NOT USED
80	TEST	1	TEST MODE INPUT (H: TEST)



**6-3. MODE CONTROL MICROPROCESSOR PIN FUNCTION  
(FP-735 BOARD IC301 MB89094PG-G-119)**

Pin No.	Pin Name	I/O	Description
1	CL1	O	N.C
2	CL0	I	GND
3	MOD0	I	GND
4	MOD1	I	GND
5	X0	I	8MHz in
6	X1	I	8MHz out
7	GND	I	GND
8	RST	I	X RST
9	MRST	O	Resetting mechanism control microprocessor.
10	BUSY	O	Mechanism control microprocessor communication busy.
11	P.CONT	O	Power supply control.
12	LED A	O	A-side LED
13	LED B	O	B-side LED
14	GND	I	GND
15	GND	I	GND
16	GND	I	GND
17	REF V	I	V. sync signal
18	MMICS	I	Mechanism control microprocessor chip select
19	GND	I	GND
20	GND	I	GND
21	GND	I	GND
22	GND	I	GND
23	GND	I	GND
24	GND	I	GND
25	GND	I	GND
26	OTASUKE	I	GND
27	HDET	I	External input signal exist/not exist
28	CMOD	I	PULL UP
29	N.C	I	N.C
30	DSP SI	O	DSP output data
31	DSP CLK	O	DSP output clock
32	SIRCS IN	I	SIRCS data input
33	MIC IN	I	Microphone input
34	DSP ACK	I	DSP ACK input
35	DSP REQ	O	DSP request output
36	DSP READY	O	DSP ready output
37	DSP RST	O	DSP reset
38	DSP PORT COUT	O	DSP port control
39	AUX	O	External input switching
40	LED1	O	Karaoke on LED
41	LED2	O	Key control negative (-) LED
42	LED3	O	Key control standard LED
43	LED4	O	Key control positive (+) LED
44	GND	I	GND
45	J/OS	I	
46	AU MUTE	O	Audio mute
47	CG CS	O	OSD chip select
48	LED M PLAY	O	Continuous play LED
49	Vcc	I	EVER+5V
50	DOOR SW	I	Door switch

Pin No.	Pin Name	I/O	Description
51	GND	I	GND
52	GND	I	GND
53	GND	I	GND
54	GND	I	GND
55	GND	I	GND
56	GND	I	GND
57	GND	I	GND
58	Vss	I	GND
59	SEG D	O	7-Segment
60	SEG E	O	7-Segment
61	SEG C	O	7-Segment
62	SEG G	O	7-Segment
63	SEG A	O	7-Segment
64	SEG F	O	7-Segment
65	SEG B	O	7-Segment
66	N.C	I	N.C
67	7CTL	O	7-Segment control
68	GND	I	GND
69	GND	I	GND
70	GND	I	GND
71	GND	I	GND
72	GND	I	GND
73	GND	I	GND
74	LINE SELECT	O	Serial communication path switching
75	N.C	I	N.C
76	MMICS	I	Mechanism control microprocessor chip select
77	MECH SO	I	Mechanism control microprocessor received data
78	MECH SI	O	Mechanism control microprocessor/OSD send data
79	MECH CLK	O	Communication clock
80	N.C	I	N.C
81	N.C	I	GND
82	N.C	I	GND
83	Vss	I	GND
84	AD0	I	Key input
85	AD1	I	Key input
86	AD2	I	Key input
87	N.C	I	N.C
88	N.C	I	N.C
89	N.C	I	GND
90	N.C	I	GND
91	N.C	I	GND
92	AVcc	I	EVER+5V
93	N.C	I	GND
94	REG MONITOR	I	REG5V power supply voltage monitoring
95	-16V MONITOR	I	UNREG -16V power supply voltage monitoring
96	REMOTE CONT	I	Microphone key input
97	LED V MODE	O	VOCAL LED
98	LED S MODE	O	SORROUND LED
99	LED AUX	O	External input LED
100	Vcc	I	EVER+5V

## SECTION 7 ELECTRICAL ADJUSTMENT

During the adjustments, see the parts alignment diagram for adjustment starting from page 7-21.

### 7-1. LIST OF SERVICING JIGS

- Oscilloscope
- Color monitor TV
- Digital voltmeter
- Frequency counter
- Remote commander (RMT-M26A)
- LD alignment disc HVL-8 (8-797-008-00)  
NTSC Reference Disc (Reference 7 can also be used.)

### 7-2. CAUTIONS ON ADJUSTMENT

- Disc load/unload operation must not be performed when servicing with the unit laying down sideways. (Never press the OPEN and CLOSE buttons.)
- When laying the unit down sideways, perform adjustment with the left side down and with the power on.
- When adjusting the servo system, be sure to set up the unit horizontally.

### 7-3. DEBUGGING MODE

- What is the debugging mode?

The contents in the RAM of the microprocessor can be displayed on the screen for the repair and maintenance purposes. The status of the MDP-A600K in which this debugging function is available is called "the debugging mode".

The followings are the differences between the debugging mode and the normal operation mode.

- (1) The background color of the screen changes in green when the debugging commands are effective. (When the background color is set to display.)
- (2) Under the status described item (1) above, pressing the key on the remote control unit displays the history of emergency conditions or other debugging information.  
Some keys are not effective when the background color is green.

#### 1. How to enter the debugging mode

To enter the debugging mode from a normal operation mode (in a normal status of operation), turn on the unit, press the 0 key and then the STOP key on the remote control unit while holding down the SELECT key on the main unit.

When the following display appears on the screen, the unit is in the debugging mode. This display shows the version number of the microprocessor. For details, refer to 4-1. "[FRAME/TIME] key for displaying version number of the microprocessor".

The SELECT key functions as the debug command ON/OFF switch key when the main unit is in the debugging mode.

When the background color is displayed (in the STOP, PAUSE or some other modes), and if the debug command is effective, the background color changes in green.

(Note that it is violet in the service mode.)

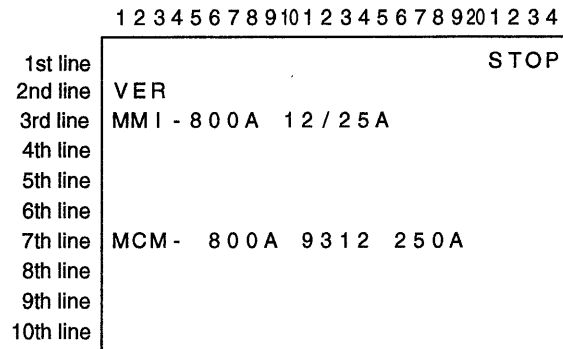


Fig. 7-1 Debugging mode initial display

#### 2. How to exit the debugging mode


To exit the debugging mode, press the CLEAR key on the remote control unit when the menu (version number of the microprocessor indication in the green background color) in Fig. 7-1 is displayed.

The same key operation as step (1) also sets the mode back in the normal operation mode. The SELECT will have its normal key function after the machine exists the debugging mode.


### 3. Switching the screen display

The display is set for “debugging display” immediately after entering the debugging mode. The display mode can be switched in the same way as in the normal operation mode by pressing the screen display key. In the debugging mode, however, “debugging display” mode can be selected as one of the display modes, in addition to “no display (displays nothing in most cases)”, “small display (displays only the 1st line in most cases)”, and “large display (displays full screen in most cases)” modes.

Pressing the screen display key in the normal operation mode changes the display mode as follows:



Pressing the screen display key in the debugging mode changes the display mode as follows:



### 4. Explanation of the debugging display

In the debugging display mode, the information on the mode controller is displayed on the screen as a dump list. The title is displayed at the left on the 2nd line from the top. The data is displayed on the 3rd line through the 9th line.

The display of the data in one line consists of up to four sets (total of 8 bytes) of four character (2 bytes character each) sets in hexadecimal notation.

The information to be displayed can be selected in the “debugging mode”, by setting the back ground color to green and pressing the desired key (as listed below).

The following table lists the information which are currently available and which can be displayed.

Table 7-1 List of the keys to be used in the debugging mode and corresponding information

Keys	Information to be displayed
[FRAME/TIME]	Version number of the microprocessor
[1]	History of the function modes
[2]	History of the emergency occurrence
[3]	Information for repair service in normal mode
[4]	Trap-flag
[5]	Key/remote control data
[7]	Information on communication with the mechanism controller

#### 4-1. [FRAME/TIME] Version number of the microprocessor

[FRAME/TIME] key for displaying version number of the microprocessor

Pressing this key displays the version number of the microprocessor. The version number of the mode controller appears on the 3rd line, and that of the mechanism controller appears on the 7th line. An example in Fig. 7-2 shows that the version number of the mode controller is “MMI-800A 12/25A” and that of the mechanism controller is “MCM-800A 9312 250A”.

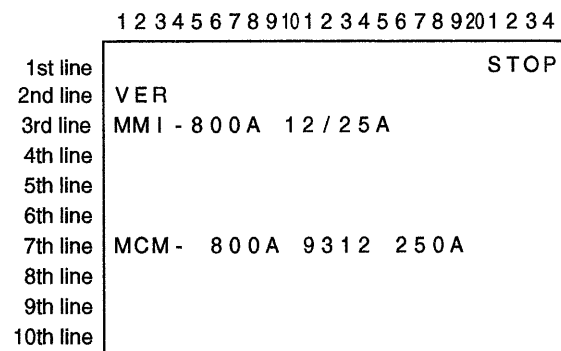


Fig. 7-2 Version number of the microprocessor

#### 4-2. [1] History of the function modes

[1] key for displaying the history of the function modes

Pressing this key displays the history of the principal operation commands such as STOP and PLAY (which represent function modes) sent from the mode controller to the mechanism controller.

The function mode data is the one-byte (two digits in hexadecimal notation) data. Up to 8 histories of the function modes can be displayed on a line. A total of 16 histories of the function modes are available using two lines. Unless the unit is unplugged, the data are kept intact in memory even when the unit is turned off.

The data to be stored appears on the screen from left to right 1 byte by 1 byte, and “FF” appears to the right of the last data byte. The data byte continues from the right end on the 1st line to the left end of the 2nd line, and from the right end on the 2nd line to the left end on the 1st of line. The last stored data of the function modes (which is the mode selected at present) appears on the left of “FF”. That is, when “FF” appears at the left end of the 1st (or the 2nd) line, the last stored data appears at the right end on the 2nd (or the 1st respectively) line.

“FE” means there has been an emergency case at the data point. To check the type of the emergency case, refer to 4-3 “The [2] key for displaying the history of the emergency occurrence”.

	1	2	3	4	5	6	7	8	9	10	1	2	3	4		
1st line														STOP		
2nd line	FM	H	I	S	T											
3rd line		0	1	2	0	3	0	FE	5	0	6	0	7	0	6	0
4th line						2	0	FF	0	0	0	0	0	0	0	0
5th line																
6th line																
7th line																
8th line																
9th line																
10th line																

Fig. 7-3 History of the function modes

Figure 7-3 shows that the function modes have changed as follows:

- 01 (Power on start up)
- 20 (Stop)
- 30 (Start up of side A)
- FE (An emergency occurred.)
- 50 (Chapter search)
- 60 (Playback)
- 70 (Slow speed scanning in normal direction)
- 60 (Playback)
- 20 (Stop) [The last function mode]

Table 7-5 lists the function modes.

#### 4-3. [2] History of the emergency occurrence

Pressing the [2] key displays the history of the emergency occurrence with the codes which are the emergency codes. If an emergency occurs in the mechanism controller, the emergency codes are generated and sent to the mode controller microprocessor. This is the one-byte data or the two-digit data in hexadecimal notation.

Some emergency codes simply have the meanings of the status codes such as "64 (Detection of minimum chapter)". The emergency codes "80" and higher are generated by the mode controller itself, not input from the mechanism controller.

The data will show "00" if there has been no emergency occurrence since when the unit has been plugged in.

The display type is the same as that for the history of the function modes. However, up to 8 histories using only one are available in this case. The emergency code which appears just before "FF" corresponds to the data of "FE" in the history of the function modes, which is the closest one to "FF".

	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10	1	2	3	4
1st line																								STOP
2nd line	EMG	H	I	S	T																			
3rd line						6	0	7	4	6	4	6	1	6	4	6	4	7	4	FF				
4th line																								
5th line																								
6th line																								
7th line																								
8th line																								
9th line																								
10th line																								

Fig. 7-4. History of emergency occurrence

Figure 7-4 shows that the emergency has occurred in the following order because the data next to "FF" is 60 on the left of the line.

- 60 (Detection of lead-in point)
- 74 (Focusing failed)
- 64 (Detection of minimum chapter)
- 61 (Detection of lead-out point)
- 64 (Detection of minimum chapter)
- 64 (Detection of minimum chapter)
- 74 (Focusing failed) [The last function mode]

Table 7-5. lists the emergency code.

4-4. [3] Information for repair service, sent from the mechanism controller

Pressing this key displays the information sent from the mechanism controller, which is necessary for repair service.

At present, the information listed in Table 7-4 is available. Data numbers in the table correspond to the numbers on the 3rd line through the 5th line in Figure 7-5.

Data number	Data
(02)	Mode of mechanisms (internal mode of the mechanism controller) See the following section for details.

Table 7-4. Information for repair service, sent from the mechanism controller

	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	20	1	2	3	4	
1st line																									STOP
2nd line	S	E	R	V	I	C	E																		
3rd line		(00)	(01)	(02)	(03)	(04)	(05)	(06)	(07)																
4th line		(08)	(09)	(10)	(11)	(12)	(13)	(14)	(15)																
5th line		(16)	(17)	(18)	(19)	(20)	(21)	(22)	(23)																
6th line																									
7th line																									
8th line																									
9th line																									
10th line																									

Fig. 7-5. Information for repair service, sent from the mechanism controller

• About the operation modes of the mechanisms

The operation modes of the mechanisms are the basic operation mod in the mechanism controller. Those almost the same as those available with the unit as the function modes. But, there are several supplemental modes for the mechanisms.

The table below shows the operation modes of the mechanisms.

No.	Functions
00	Power off
01	Initialization of the mechanism controller (Without operating the mechanisms)
03	In the process from power ON to power OFF
04	In the process from power OFF to power ON
05	Initialization of the mechanisms and related ICs.
10	Ejected status of the tray
11	In the process of ejection of the tray
12	In the process of loading of the tray
20	In stop status with the disc chucking up
21	In the process of chucking up from chucking of side A
22	In the process of chucking of side A from chucking up
23	In chucking status of side A
30	Until focus servo of side A has been locked.
31	From lock of focus servo to start-up of 0 search
32	In operation from side A/B to stop
33	In process of reversing side B from side A
40	Until focus servo of side B has been locked.
50	Chapter search
51	Frame/Time search
60	Playback
61	Pause
70	Slow speed normal direction scanning
71	High speed normal direction scanning
72	Slow speed reverse direction scanning
73	High speed reverse direction scanning
74	In the process of scanning completion
80~FF	The same as function mode)

Table 7-5. Operation modes of the mechanisms

Table 7-2. List of the function modes

Number	State	Description
00	Power OFF	
01	Power ON and start up	Initializes when power is turned ON.
10	Open	Opens the door and ejects the tray.
20	Stop	Closes the tray and stops.
30	Preparation for side A playback	From stop up to immediately before side A search
40	Preparation for side B playback	From stop up to immediately before side B search
50	Chapter search	Searches a chapter, including disc top search.
51	Frame/time search	Searches a frame and time in CAV.
60	Playback	Plays back.
61	Pause	Pauses.
70	Slow speed scanning in normal direction	>>
71	High speed scanning in normal direction	>>>
72	Slow speed scanning in reverse direction	<<
73	High speed scanning in reverse direction	<<<
80	Still playback in normal direction	Plays back in STILL mode. (Only in CAV mode)
81	Step playback in normal direction	Plays back one frame after frame. (Only in CAV mode)
82	1/90 times speed playback in normal direction	(Only in CAV mode)
83	1/30 times speed playback in normal direction	(Only in CAV mode)
84	1/16 times speed playback in normal direction	(Only in CAV mode)
85	1/8 times speed playback in normal direction	(Only in CAV mode)
86	1/4 times speed playback in normal direction	(Only in CAV mode)
87	1/2 times speed playback in normal direction	(Only in CAV mode)
88	Normal (1 time) speed playback in normal direction	(Only in CAV mode)
89	2 times speed playback in normal direction	(Only in CAV mode)
8A	3 times speed playback in normal direction	(Only in CAV mode)
8B	5 times speed playback in normal direction	(Only in CAV mode)
8C	10 times speed playback in normal direction	(Only in CAV mode)
90	Still playback in reverse direction	Plays back in STILL mode. (Only in CAV mode)
91	Step playback in reverse direction	Plays back one frame after frame. (Only in CAV mode)
92	1/90 times speed playback in reverse direction	(Only in CAV mode)
93	1/30 times speed playback in reverse direction	(Only in CAV mode)
94	1/16 times speed playback in reverse direction	(Only in CAV mode)
95	1/8 times speed playback in reverse direction	(Only in CAV mode)
96	1/4 times speed playback in reverse direction	(Only in CAV mode)
97	1/2 times speed playback in reverse direction	(Only in CAV mode)
98	Normal (1 time) speed playback in reverse direction	(Only in CAV mode)
99	2 times speed playback in reverse direction	(Only in CAV mode)
9A	3 times speed playback in reverse direction	(Only in CAV mode)
9B	5 times speed playback in reverse direction	(Only in CAV mode)
9C	10 times speed playback in reverse direction	(Only in CAV mode)
FE	Appears for indicating an occurrence of emergency.	An emergency occurred.
FF	Appears next to the last data.	(The last function mode)

Table 7-3. List of the emergency codes

Number	State	Description
01	Requirement of forced power off	Power off
02	Requirement of forced ejection of the tray	Eject
03	Requirement of stop	Stop
04	Requirement of stop when opening the door	stop
05	Requirement of forced playback	Play
06	Requirement of determination for mode change when power off	Freezes power off display
07	Requirement of power off after communication stops.	Power off
10	Detection of movement for pushing in the tray	Play
11	Detection of no movement of the tray	Power off
20	Detection of no movement of the sledder	Power off
30	Detection of no movement of the tilt	Power off
40	No detection of the spindle FG	Power off
41	No achievement of continuous servo lock from FG servo to H servo	Stop
42	Above the high rotation limit	Stop
43	Below the low rotation limit	Stop
44	No complete stop operation for the spindle movement	Power off
45	Time over error for the spindle control operation	Power off
50	Focusing failed	Stop
51	Focusing failed (with a disc loaded)	Stop
52	Detected as if the disc was an LD	Stop
53	Focusing of LD8 failed	Stop
54	Reading of TOC failed on a disc of CD or CDV	Stop
60	Detection of the lead-in code	Play or so
61	Detection of the lead-out code	Stop/Pause or so
62	Detection of the lead-out of part A on CDV	Stop/Pause or so
63	Detection of a picture stop	Still
64	Detection of the minimum chapter	None
65	Reading of subcode failed on a disc of CD or CDV	Stop
66	Reading of Philips code failed on a disc of LD	Stop
67	The locked groove processing was executed.	None
70	Detection of over search	Play
71	Detection of under search	Play
72	Time over for the search operation	Play
74	Focusing failed during search	Stop
76	Focus servo unlocked and retry was executed.	None
80	Emergency time out	Power off
81	Search time out	Play
82	Mechanism controller communication time out	Power off
83	DSP communication time out	Power off

#### 4-5. [4] Trap-flag

[4] key for displaying the trap-flags

Pressing this key displays the cause of the trap-flag. The trap-flag is “an abnormal power off” of the mode controller (this excludes when it is turned off with the power key).

The one byte at the right (2 digits of hexadecimal notation) is the flag which has specific meaning. The bit which corresponds to the cause of the last abnormal power off is set 1.

The one byte at the left is the flag for all (logic OR of) the causes of abnormal power off since when the unit has been plugged in.

Both the flags can be cleared by setting the background color in green and pressing the clear key.

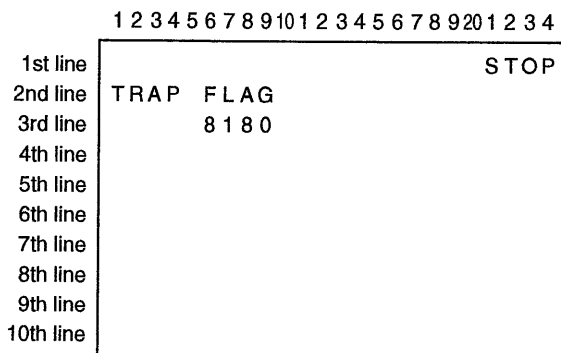


Fig. 7-6. Trap-flag

An example of the trap-flag shown in Figure 7-6 shows that there have been two cases of abnormal power off before; 80 by abnormal voltage level and 01 by forced reset by the user (see the byte 81 in hexadecimal notation on the left). It also shows that the last abnormal power off has been caused by 80 (abnormal voltage level) (see the byte 80 in hexadecimal notation on the right).

Table 7-6 shows meaning and causes of the trap-flag.

Table 7-6. Trap-flag and bits and their meaning

Bit number (Pattern)	Causes
7(80h)	Power off caused by abnormal voltage level
6(40h)	Power off caused by abnormal communication with the mechanism controller
5(20h)	Power off caused by an occurrence of emergency
4(10h)	Forced power off by the key operation
3(08h)	Resetting by self-check by the mode controller
2(04h)	Resetting by self-check by the mode controller
1(02h)	Resetting by self-check by the mode controller
0(01h)	Forced resetting by the key operation

Note 1: Resetting, which is indicated with bits 0 to 3 in the table, means that setting the status of the mode controller back to the same status as the when the unit was plugged in, except for initialization of the trap-flag.

Note 2: A of hexadecimal notation is 2+8. In the same manner, B=1+2+8. C=4+8. D=1+4+8. E=2+4+8. F=1+2+4+8.

#### 4-6. [5] Key/remote control data

[5] key for displaying the key/remote control data

Pressing this key displays the key input data of the main unit and the input data by the remote control unit, using SIRCS codes. Note that this operation is effective on the remote control unit for MDPs only.

The one byte (2 digits in hexadecimal notation) on the left of the 3rd line in Figure 7-7 is the SIRCS code of the key input data of the main unit, and that on the right is the SIRCS code of the input data by the remote control unit. When no key is pressed or there is no input, “FF.” appears. When two keys are pressed almost at the same time, the SIRCS code of the input data by the first pressed key will appear.

The keys to which SIRCS codes are not assigned (i.e., KARAOKE PON key) are defined as internal keys, using the data of 80 or higher in hexadecimal notation.

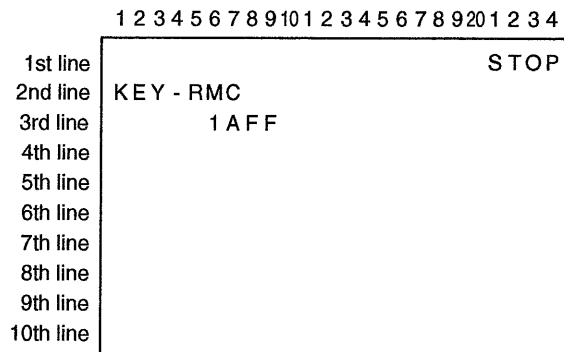


Fig. 7-7. Key and remote control data

An example in Figure 7-7 shows that the playback key (1A in hexadecimal notation) on the main unit is pressed but there is no input (FF in hexadecimal notation) from the remote control unit.

However, note that, in some cases, the remote control unit generates SIRCS codes momentarily only at the moment when the key is pressed.

Table 7-7 lists the SIRCS codes used in the MDP-A600K.



Table 7-7. List of SIRCS codes for MDPs

No.	Functions
00	Numeral 1
01	Numeral 2
02	Numeral 3
03	Numeral 4
04	Numeral 5
05	Numeral 6
06	Numeral 7
07	Numeral 8
08	Numeral 9
09	Numeral 0
0F	Clear
15	Power ON/OFF
16	Close/open of tray
17	Audio monitoring
18	Stop
19	Pause
1A	Playback
1E	Slow speed reverse direction scanning
1F	Slow speed normal direction scanning
29	Repeat
2B	Step in normal direction
2C	Step in reverse direction
30	Program
34	ACS in normal direction
35	ACS in reverse direction
39	Numeral + 10
3A	Screen display
40	Analog audio/CX
47	1/one side/double side
4F	Medium speed normal direction playback
5D	Side A
5E	Side B
60	Key control up
61	Key control standard
62	Key control down
63	Surround
7B	Next disc reserve
7E	Continuous playback
	(The followings are the expended codes.)
90	Vocal
91	KARAOKE PON
94	Select
95	External input selection
FF	No keys are pressed.

FF Appears when there is no input.

4-7. [7] Information on communication with the mechanism controller

[7] key for displaying the information on communication with the mechanism controller

Pressing this key displays the communication data with the mechanism controller.

The data transmitted from the mode controller to the mechanism controller appears on the 3rd line through the 5th line. The data transmitted from the mechanism controller to the mode controller appears on the 7th line through the 9th line. The exclamation marks “!” at the left on the 8th and the 9th lines indicate that the communication is carried out successfully. Question mark “?” appears if communication stops. A bracket mark [ n ] appears if communication stops after carrying out once the communication on the purpose of servicing.

	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	20	1	2	3	4	
1st line																									STOP
2nd line	M	E	S	S																					
3rd line	S	(00)	(01)	(02)	(03)	(04)	(05)	(06)	(07)																
4th line		(08)	(09)	(10)	(11)	(12)	(13)	(14)	(15)																
5th line		(16)	(17)	(18)	(19)	(20)	(21)	(22)	(23)																
6th line																									
7th line	R	(00)	(01)	(02)	(03)	(04)	(05)	(06)	(07)																
8th line	!	(08)	(09)	(10)	(11)	(12)	(13)	(14)	(15)																
9th line	!	(16)	(17)	(18)	(19)	(20)	(21)	(22)	(23)																
10th line																									

Fig. 7-8. Information on communication with the mechanism

The table below shows some communication information.

Table 7-8. Data from the mode controller to the mechanism (Upper block in Figure 7-8)

No.	Description
(01)	The function mode at present (next)
(02)	The function mode of final purpose
(03-05)	Target address of search (Time/Frame)

Table 7-9. Data from the mechanism controller to the mode controller (Lower block in Figure 7-8)

No.	Description
(01)	The function mode at present (next)
(06)	The flag for completion of function mode change (0 bit)
(13)	Current chapter/track number
(14)	Current index number
(15-17)	Current address (Time/Frame)

## 7-4. SERVICE MODE

- What is the service mode?

The functions for the use of reparation and maintenance (the service mode) are incorporated in the MDP-A600K. The mode in which those functions are available is called “the service mode”.

The followings are the differences between the service mode and the normal operation mode.

- (1) Special operations such as focusing search and sledding can be carried out.
- (2) Power is not turned off automatically in an emergency condition of power off.
- (3) When entering the service mode, also the debugging mode is started automatically.

### 1. How to enter the service mode

The following procedure shows how to enter the service mode.

- (1) While the power is turned off, connect the test pin (TP501 for service mode setting) on the MB board of the main unit, to the ground.
- (2) Turn on the power by pressing the power key of the main unit. Nothing is displayed on the screen at this moment.
- (3) Disconnect the test pin (the connection was performed in step (1) above) from the ground.

The service mode can be started when the background color changes in violet. If the background color is blue or black, the service mode is not ready yet. If so, restart the procedure from step (1) above.

However the violet color background is established in the KARAOKE mode too with a microphone plugged in. To avoid confusion, unplug microphone beforehand.

When the unit enters the service mode, the unit is also entered in the debugging mode (the functions those available in both modes can be used). Therefore, the version number of the microprocessor appears on the screen.

### 2. How to exit the service mode

To exit the service mode, press the power key to turn off the power. If you cannot turn off the power in this way (the operation of the mechanisms is not complete), carry out the forced power off function by pressing the reverse direction scanning key and the power key on the main unit at the same time.

## 3. How to use the special key functions

The special key functions in the service mode are available only under NO DISC and STOP conditions, for safety purposes.

Check that the indication for those conditions is displayed without flashing on the screen. In order to carry out the special key functions listed in Table 7-3, in the status above, press SELECT key to turn off the 7-segment display, then press the desired key such as PLAY or PAUSE on the main unit.

The sledding motion with the SIDE A or SIDE B key is effective only while holding the key pressed. However, the operation started with the PLAY or PAUSE key continues, once it is pressed, until you press the STOP key. While the unit is carrying out the special key function, the LED of side B of the main unit is lit.

Note that multiple special key functions cannot be started even if you press multiple keys at the same time.

When the 7-segment display is turned off, some keys are not effective. Be sure to press SELECT key to turn on the 7-segment display if you don't want to carry out the special key functions.

Table 7-10. List of the special key functions

Key	Special key functions
SIDE A	Sledding in reverse direction (downward)
SIDE B	Sledding in normal direction (upward)
PLAY	Focusing search
PAUSE	Tilt servo ON
STOP	Stop special operations

The followings are the details of the special key functions available with the MD-A600K.

### 3-1. PLAY key ····· Focusing search

Focusing search can be carried out repeatedly by holding the PLAY key. There is no fault with the unit if the pickup lens moves up and down.

Be sure to start the focusing search after checking the condition that the sled is placed in appropriate position (at around the center of side A). To stop the focusing search, press the STOP key.

### 3-2. SIDE A key ····· Sledding in reverse direction

The sled can be moved in reverse direction (center of side B, to edge of side B, to edge of side A, and then to center of side A) after completing initialization of the tilt (the tilt is placed in neutral position) by holding down the SIDE A key. To stop the sledding in reverse direction, release the SIDE A key.

### 3-3. SIDE B key ..... Sledding in normal direction

As contrary to item (2) above, the sled can be moved in normal direction (center of side A, to edge of side A, to edge of side B, and then to center of side B). This movement of the sled is desired when replacing the optical part. To stop the sledding in normal direction, release the SIDE B key.

### 3-4. PAUSE key ..... Tilt servo ON

The tilt servo is activated while holding down the PAUSE key. Move the sled to around the center of side A with the SIDE A and SIDE B keys, and put a CD or equivalent on the tray so that it screens the skew sensor. Then, if the tilt moves by pressing the PAUSE key, operation is normal.

The tilt can be placed back in neutral position by moving the sled with the SIDE A and SIDE B keys. To deactivate the tilt servo, press the STOP key.

## 7-5. OPERATING THE MDP-A600K WITH HIDDEN KEY FUNCTION

- What is the hidden key function?

Special control functions to be used for the test or some other purposes of the MDP-A600K are available by pressing, at the same time and in specific order, the multiple function keys on the main unit and/or on the remote control unit. The control functions available in this way are called “special key functions”. The special key functions can be used in either of the following modes.

- the service mode, or
- the debugging mode, or
- the normal operation mode.

The special key functions can be divided into two groups according to the key control operations as follows:

- Simultaneous main-unit-key-press functions  
Some control functions can be used by pressing simultaneously multiple specific keys on the main unit.
- Simultaneous main-and-remote-control-units-key-press functions

Some other control functions can be used by pressing simultaneously two specific keys on the remote control unit while holding down a specific key on the main unit.

### 1. How to use the “simultaneous main-unit-key-press functions”

The functions available by pressing simultaneously the multiple specific keys only on the main unit are called “simultaneous main-unit-key-press functions”. These functions are to be used when a quick operation such as “forced power off” is required.

The following table lists the currently available simultaneous main-unit-key-press functions.

Table 7-11. List of simultaneous main-unit-key-press functions.

Functions	Keys to be pressed on the main unit
<p>① <u>Forced power off</u></p> <p>This function turns off power forcibly. It is to be used if you want to turn off the power in the following cases.</p> <ul style="list-style-type: none"> <li>• Operation of the mechanisms is out of control.</li> <li>• Power cannot be turned off by pressing the power key.</li> </ul> <p>Note that this function be used with care because it may turn off the power in a half way of the operation of the mechanisms.</p>	<p>“Reverse direction scanning” key and “power” key</p>
<p>② <u>Forced reset</u></p> <p>This function carries out initialization of the mode controller in addition to the forced power off function. It is to be used if you want to reset the mode controller in the following case.</p> <p>Something is wrong with the mode controller such that it operates with incorrect display.</p> <p>Note that once this function has been carried out, all information, including the history of emergency occurrence, other than the trap-flag information in the debugging mode, will be deleted.</p>	<p>“STOP” key and “power” key</p>
<p>③ <u>Lighting up all LEDs on the main unit</u></p> <p>This function turns on all LEDs after turning on the power automatically. Until you switched off the power, normal operation is possible while all LEDs are lit.</p>	<p>“B side” key and “forward direction ACS” and “power” key (With power off only)</p>

The following functions remain the same as those of the remote control unit under the same names.

Functions	Keys to be pressed on the main unit
④ High speed scanning in reverse direction	“Vocal” key and “reverse direction ACS” key
⑤ Low speed scanning in reverse direction	“Vocal” key and “reverse direction scanning” key
⑥ Low speed scanning in forward direction	“Vocal” key and “forward direction scanning” key
⑦ High speed scanning in forward direction	“Vocal” key and “forward direction ACS” key

2. How to use the “simultaneous main-and-remote-control-units-key-press functions”

The functions available by pressing the two specific keys only on remote control unit while holding down the specific key on the main unit are called “simultaneous main-and-remote-control-units-key-press functions”. It is necessary to press two keys on the remote control unit within about one seconds. This prevents an accidental use of these functions by the user.

These functions are to be carried out by using the SELECT key of the main unit so that the operation of the mechanisms should not be affected.

The following table lists the currently available simultaneous main-and-remote-control-units-key-press functions.

Table. 7-12. List of simultaneous main-and-remote-control-units-key-press functions.

Functions	Step	Keys to be pressed on the main unit and on the remote control unit
① <u>Debugging mode ON/OFF</u> This function puts the unit in the debugging mode from another mode, or puts the unit in any mode other than the debugging mode from the debugging mode.	1	“SELECT” key and “0” key
	2	“SELECT” key and “STOP” key
② <u>Forced V muting ON/OFF</u> This function releases the unit from the forced V muting condition if it is in the forced V muting condition, or puts the unit in the forced V muting condition if it is not in the forced V muting condition. It can be used to obtain a blue background during playback, or removing the blue background while the unit is in the stop mode.	1	“SELECT” key and “0” key
	2	“SELECT” key and “screen display” key
③ <u>Resetting of V muting</u> This function resets the unit in the V muting condition to normal condition. This is, it releases the unit from condition ≠ above.	1	“SELECT” key and “0” key
	2	“SELECT” key and “clear” key
④ <u>Make mechanism controller time out ineffective.</u> Make the function turning power off ineffective when communication with mechanism controller cannot be done. When mechanism controller doesn’t operate, it is used to hasten to operate mode controller.	1	“SELECT” key and “0” key
	2	“SELECT” key and “+10” key  “SELECT” key and “0” key “SELECT” key and “0” key
⑤ <u>Make mechanism controller time out effective.</u> Make the function turning power off effective when communication with mechanism controller cannot be done.	1	
	2	

## 7-6. 7-SEGMENT-DISPLAY-DURING-STANDBY FUNCTION

- What is the 7-SEGMENT-DISPLAY-DURING-STANDBY FUNCTION?

Special control function to display information on the 7-segment display device during STANDBY mode is called “7-segment-display-during-standby” function. When the unit power is turned off forcibly by the forced power off function due to an emergency occurrence so forth, the cause of the emergency or the trap-flag is displayed on the 7-segment display.

### 1. How to use the “7-segment-display-during-standby”

When the unit power is turned off forcibly by the forced power off function or by an emergency, the cause of the emergency is displayed for several seconds on the 7-segment display of the main unit at the moment of power off.

If the power off is caused by an emergency, the emergency code is displayed on the 7-segment while it is blinking. If it is caused by any other reason, the trap-flag is displayed on the 7-segment while it is blinking.


If the unit power has already been turned, the same content is displayed by pressing STOP key.

See chapter 7-3. DEBUGGING MODE for the emergency codes and the trap-flag.

## 7-7. ADJUSTMENT AFTER THE ATTACHMENT OF THE OPTICAL PICK-UP BLOCK


### 7-7-1. JIGS AND TOOLS

- Hexagonal wrench (Tangential screwdriver: 7-700-766-04)
  - Oscilloscope
  - Connector conversion jig (J-6082-059-B)
  - Alignment disc Ref. 8 (HVL8: 8-797-008-00) /LD YEDS-18 (3-702-101-01) or an equivalent/CD
  - Decentering screwdriver 4  $\phi$  (J-6095-029-A)
- \* Insert the terminal of the connector conversion jig to CN401 of the MB-712 Board.

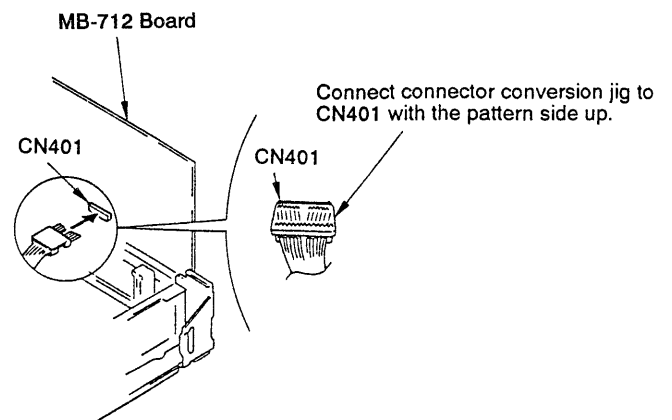


## 7-7-2. CD ADJUSTMENT

- ① Loosen the screws of feed base block assembly.

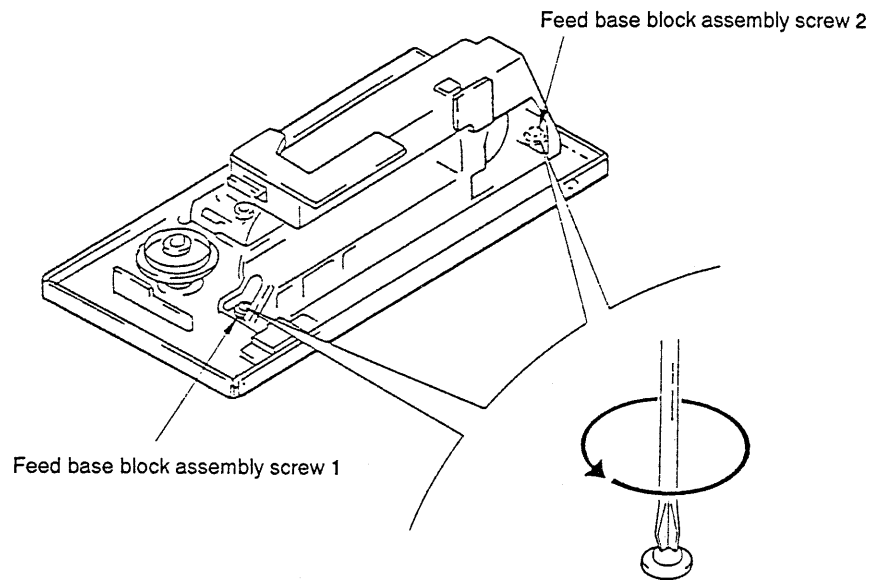


Loosen the screw about a turn from the state of being tight.

- ② Playback the CD alignment disc (YEDS-18) to press the Pause button about 3 seconds later.
- ③ Connect the oscilloscope to LD RF of the connector conversion jig to see if the waveform shown below appears.

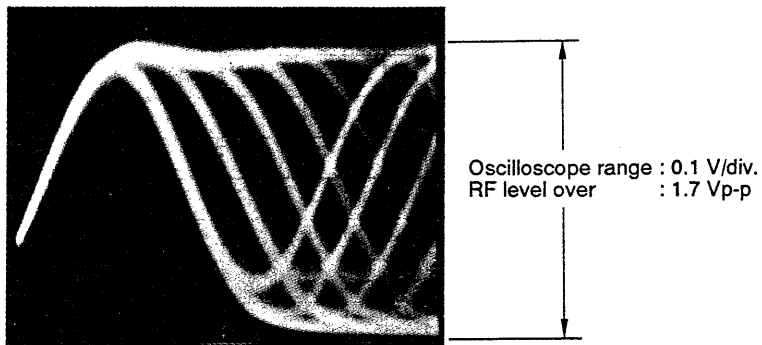


- ④ Insert the A TAN screw with hexagonal wrench 2.6 into the hole of top surface of chucking assembly to adjust so that RF Level is maximum. (Over 1.7 Vp-p)

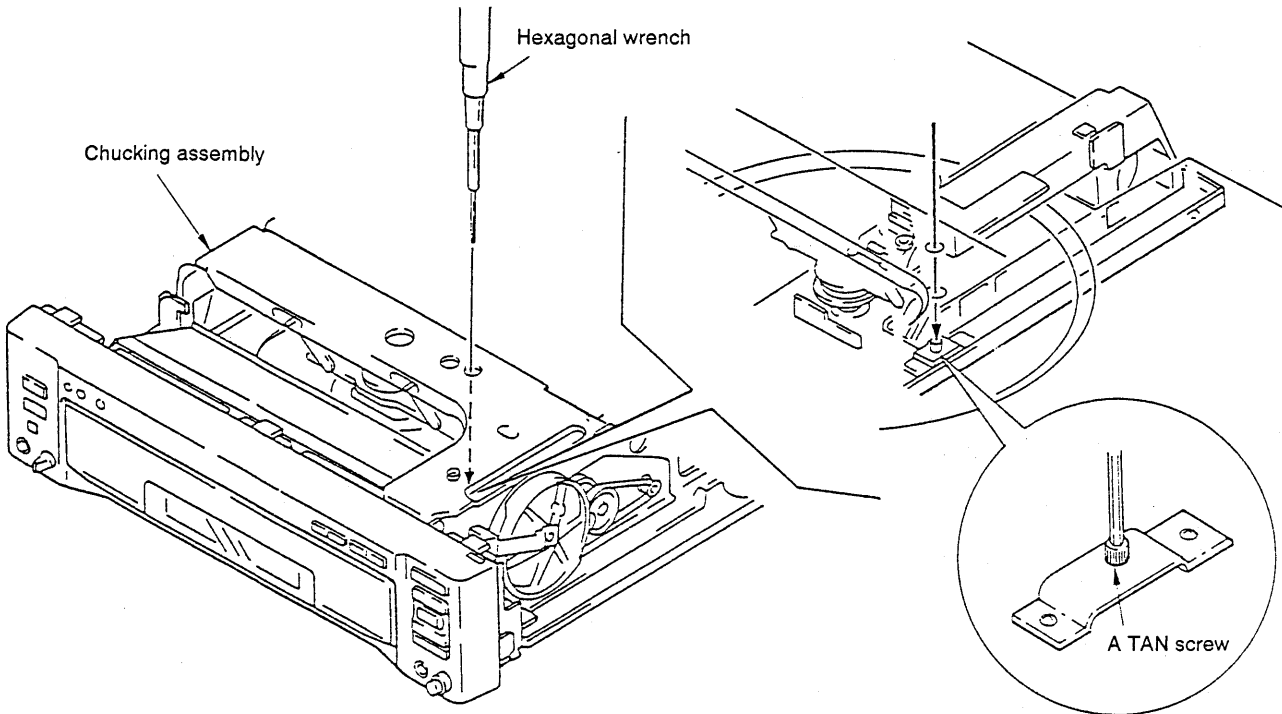

Terminal E,F/TRK, SLED OFF  
 Oscilloscope X/Y Lissagous range  
 Difference within 35° with each 20 mV/div.



- ⑤ Insert decentering screwdriver into the feed base block assembly for RD adjustment.

Before the adjustment.

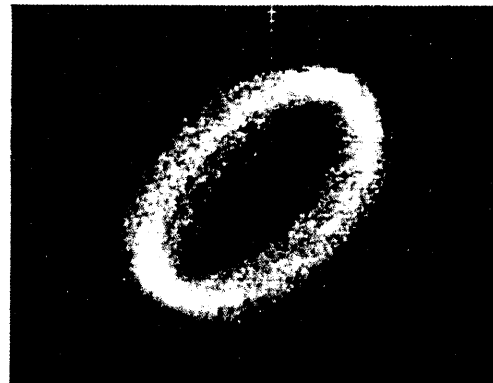

↓ Make the figure straight.

After the adjustment.

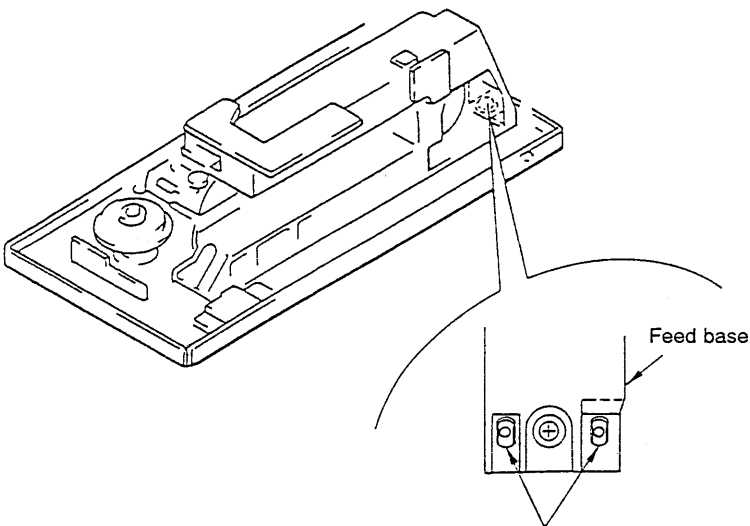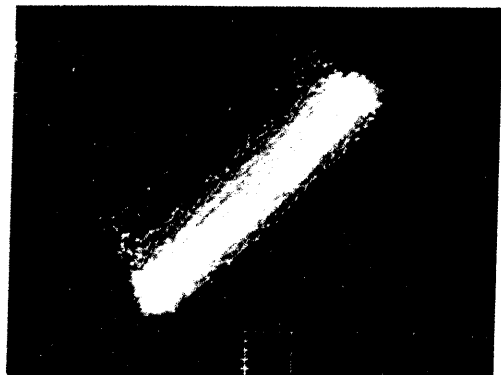

Insert the decentering screwdriver to either one of the holes for adjustment.

- ⑥ Take the DISC out to tighten the 2 screws of the feed base.
- ⑦ Apply suitable locking compound to A TAN screw.



**7-8. POWER SUPPLY CHECK  
(PS-716 BOARD)**

Mode	Stop
Measuring equipment	Digital voltmeter
UNREG +16 V check	
Measurement point	Pin ① of CN051 (Pin ②, GND)
Specified value	15.5 ± 1.0 V
UNREG -16 V check	
Measurement point	Pin ③ of CN051 (Pin ③, GND)
Specified value	-16.5 ± 1.0 V
REG +5 V check	
Measurement point	Pin ⑤ of CN051 (Pin ④, GND)
Specified value	5.1 ± 0.5 V
REG -5 V check	
Measurement point	Pin ⑦ of CN051 (Pin ④, GND)
Specified value	-5.1 ± 0.5 V
POWER MUTE check	
Measurement point	Pin ① of CN055 (Pin ② of CN051, GND)
Specified value	15.7 ± 1.0 V
EVER 5 V check	
Measurement point	Pin ④ of CN031 (Pin ②, GND)
Specified value	5.0 ± 0.3 V

- Confirm that the power supply voltages satisfy the respective specified values.

**7-9. SYSTEM CONTROL SYSTEM  
ADJUSTMENT**

**7-9-1. Master Clock Adjustment (MB-712 Board)**


Mode	Stop
Measurement point	Pin ⑩ of IC502
Measuring equipment	Frequency counter
Adjusting element	CT501
Specified value	3,579,545 ± 10 Hz

**Adjustment method:**

- 1) Adjust CT501 to 3,579,545 ± 10 Hz.



### 7-10. LD SIDE A TILT BALANCE ADJUSTMENT

- ① Playback with LD Alignment disc (HVL 8).
- ② Pause at #770.  
Check that the vertical bar appears on TV monitor and turn RV401 to make right and left crosstalk (moire) the same level and minimum.

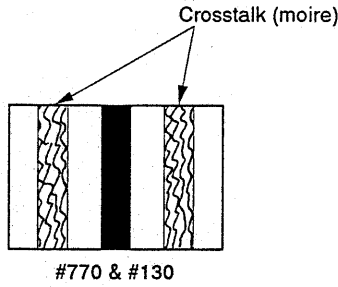


- ③ Pause at #130 to check that the moire is minimum. (Do not turn RV401 at this time.)
- ④ Tracking gain and focus gain adjustments are not necessary.  
— Already adjusted at the optical pick-up block side —
- ⑤ Check the tracking balance.  
Measure the registance at the Y terminal of TRACKING ERR on jig with oscilloscope.

### Check the TRACKING BALANCE.

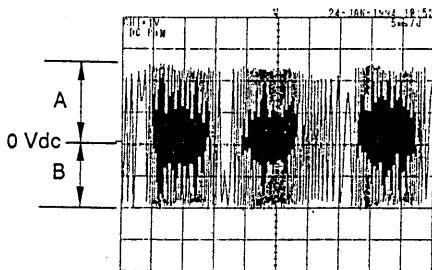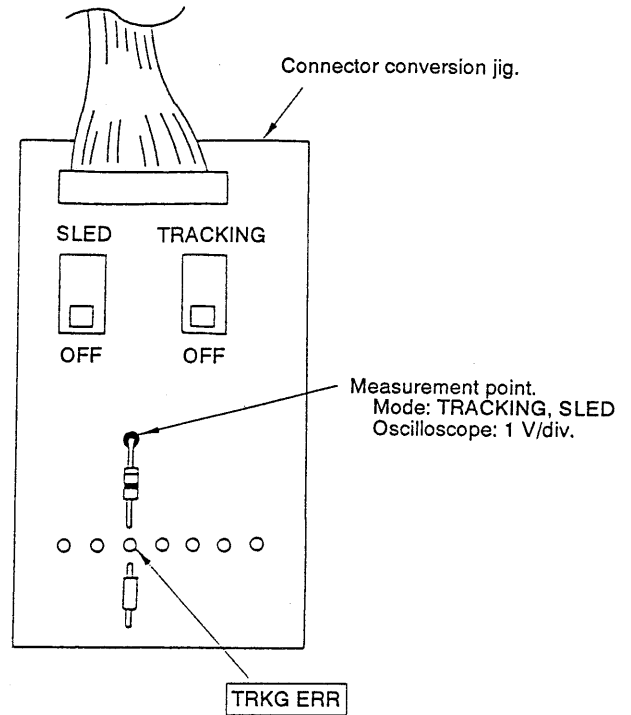

Check that it meets  $-5 \leq \frac{A - B}{2(A+B)} \times 100 (\%) \leq 8$


- ⑥ Then turn on the TRACKING and SLED to check the waveform of 1 track jump in STILL at the chapter 3 (#2201).

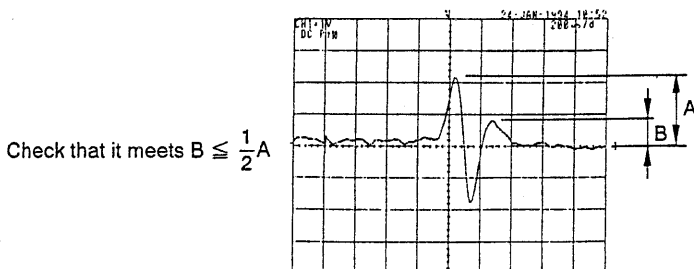

### 7-11. LD SIDE B TILT BALANCE


- ① Loosen RD of side B on the feed base and TAN screw. (Hexagonal screw 2.6)
- ② Insert the alignment disc to playback with side B at CAV side and pause at #770. Check that the same block bar as the crosstalk adjustment at the side A on monitor.
- ③ Insert the tip of the decentering screwdriver to the B TAN adjustment hole to adjust that the crosstalk is minimum.
- ④ Then in the same way, adjust with RV402 so that the crosstalk is minimum, and at this time the level on track jump should be maximum.
- ⑤ Check that crosstalk at #130 is minimum.
- ⑥ Send the disc to Chapter 3 (#2201) to pause.

- ⑦ Turn off the SLED and TRACKING to adjust inserting the decentering screwdriver to B RD adjustment hole so that the Lissagous waveform meets the standard. Make not more than 1 turn in the TAN adjustment.

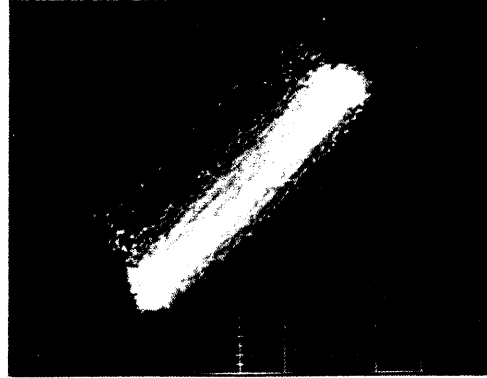

Jig terminal : E, F  
 Oscilloscope : X/Y lissagous 20 mV/div.  
 Phase difference : Within 35°

- ⑧ Take out the disc to tighten B TAN, RD screw.

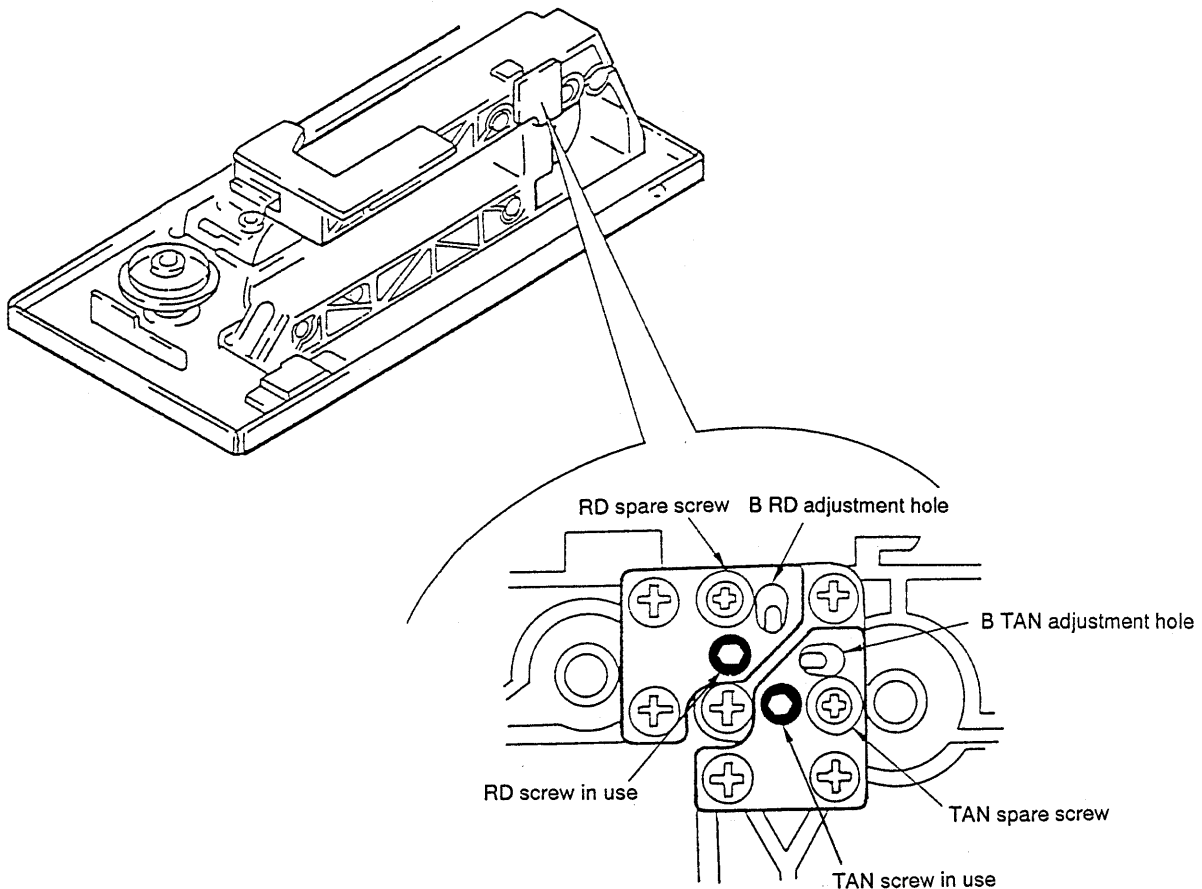

## 7-12. VIDEO SYSTEM ADJUSTMENT

### 7-12-1. Burst Gate Position Adjustment (MB-712 Board)

Mode	Pause
Signal	Frame 4100 (Color bar)
Measurement point	Pin ② of IC007
Adjusting element	RV002
Specified value	$8.5 \pm 0.1 \mu\text{sec}$

#### Adjustment method:

- 1) Press PAUSE (||) button.
- 2) Search the frame 4100.
- 3) Adjust RV002 so that  $t_w$  is  $8.5 \pm 0.1 \mu\text{sec}$ .

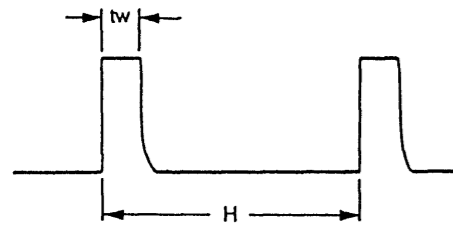


Fig. 7-9.

### 7-12-2. REF H Adjustment (MB-712 Board)

Mode	Pause
Signal	Frame 4100 (Color bar)
Measurement point	CH1: Pin ⑤ of IC008
	CH2: Pin ② of IC008
Measuring instrument	Oscilloscope (DC range)
Adjusting element	RV501
Specified value	Potential difference:
	$4.2 \pm 0.1 \text{Vdc}$

#### Adjustment method:

- 1) Press PAUSE (||) button.
- 2) Search the frame 4100.
- 3) Adjust RV501 so that the electric difference between the center value of the TBC voltage (Pin ⑤ of IC008) and the VEE (Pin ② of IC008) is  $4.2 \pm 0.1 \text{Vdc}$ .

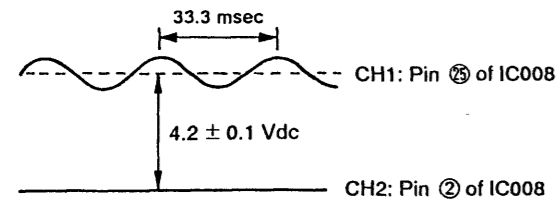


Fig. 7-10.

### 7-12-3. Color DOC Adjustment (MB-712 Board)

Mode	Pause
Signal	Frame 23500 (Yellow Green)
Measuring instrument	Monitor screen
Adjusting element	CT001
Specified value	Dropout section and surrounding section are of the same colors.

#### Preparations:

- 1) Paste a black tape onto the 1H interval of the outer most circumference of the LD reference disc CAV recording side (The side where the radial can be seen).  
(Length: Approx. 10 mm)

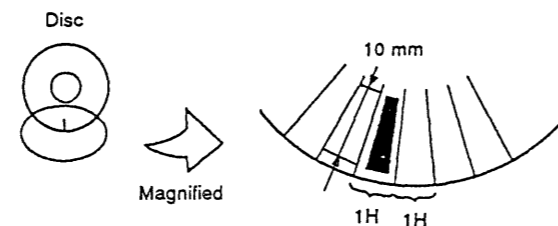


Fig. 7-11.

#### Adjustment method:

- 1) Press PAUSE (||) button.
- 2) Search the frame 23500.
- 3) Adjust the color of the dropout section of CT001 to that of the surrounding section.

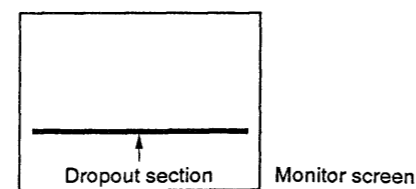


Fig. 7-12.

### 7-12-4. Video Output Level Adjustment (MB-712 Board)

Mode	Pause
Signal	Frame 4100 (Color bar)
Measurement point	J201 (VIDEO OUT terminal) (Terminated to $75 \Omega$ )
Measuring instrument	Oscilloscope
Adjusting element	RV001
Specified value	$1.00 \pm 0.03 \text{Vp-p}$

#### Adjustment method:

- 1) Press PAUSE (||) button.
- 2) Search the frame 4100 and apply a vertical bar signal.
- 3) Adjust RV001 for  $1.00 \pm 0.03 \text{Vp-p}$ .

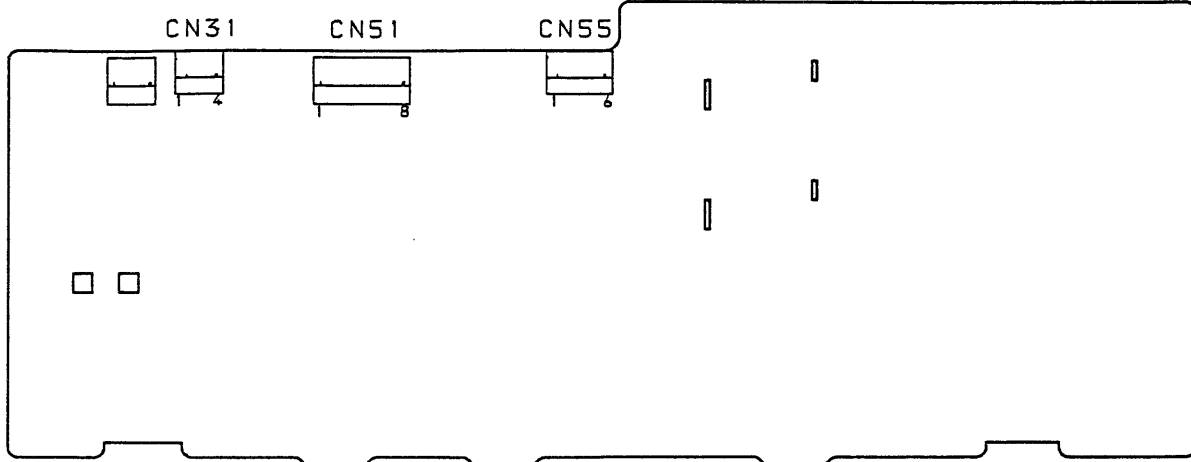


Fig. 7-13.


**7-13. PARTS ARRANGEMENT DIAGRAM FOR ADJUSTMENT**

PS-716 BOARD (CONDUCTOR SIDE)

NOTE: CN31/51/55 ARE MOUNTED COMPONENT SIDE.



MB-712 BOARD (COMPONENT SIDE)

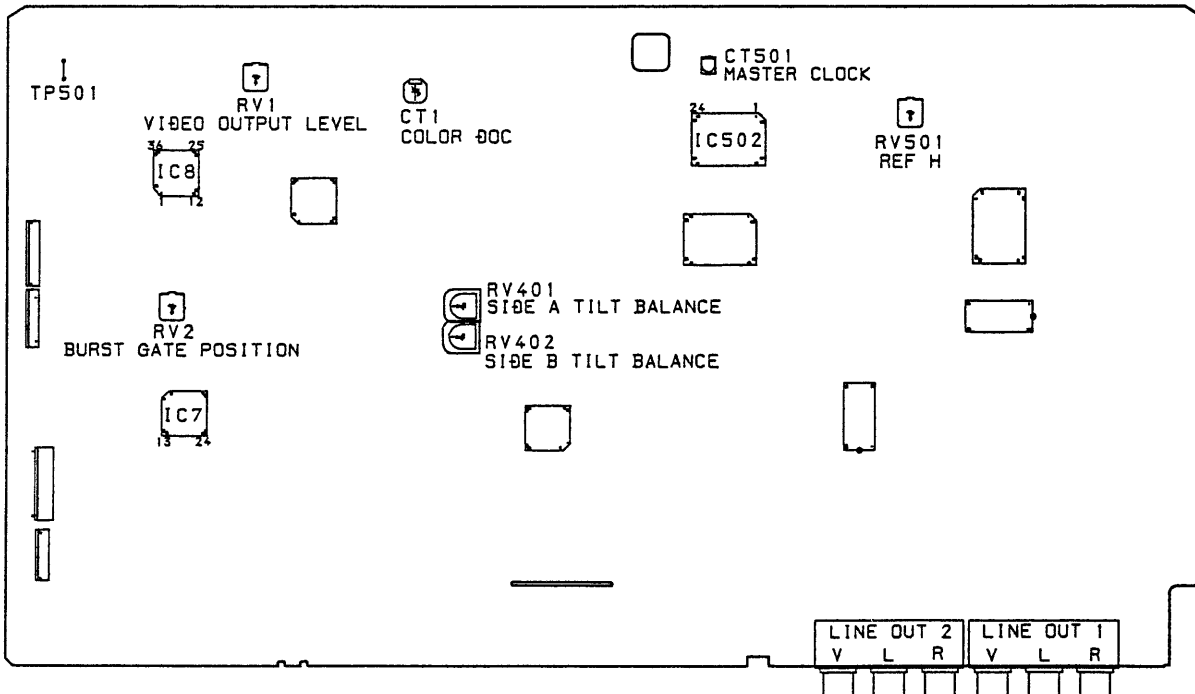

**MDP-A600K**

9-973-580-11

**Sony Corporation**  
**Consumer A&V Products Company**  
**Home A&V Products Division**

— 146 —

**English**  
94E1614-1  
Printed in Japan  
© 1994.5  
Published by Personal A&V Products Div.  
Quality Engineering Dept.